

Alarm signal sent to PC immediately. Audible alarm on PC and flashing screen indicates breach.

Text and Email Alerts

Dedicated alert unit that works at all times, even when the PC is turned off. Module will send flashing visual, audio, e-mail and text alerts when alarm has been breached.

User selectable transmission rates of data to the PC.

Wireless connectivity to PC and sensors via Wi-Fi wireless router. -802.11b compliant

Once set up on PC, remove and start logging from various locations. Multiple sensors can be supported on one system at any one time dependent on router type and usage by other Wi-Fi devices.

Sensor memory stores all data even if Wi-Fi is temporarily disconnected. All info uploaded when reconnected with Wi-Fi network.

Adjust sensor settings wirelessly via PC with free EL-WiFi software.

Monitor remote sensors using PC application and view graphed readings on-screen.



Wi-Fi Temperature Data Logging

