

SNAP Power Supplies

Features

- Built-in fuse, ON/OFF power switch, and LED indicator
- Power a SNAP controller, SNAP rack, SNAP I/O modules
- Convenient panel mounting; optional DIN-rail mounting
- Easy connections
- Wide input voltage range
- Factory Mutual approved (except SNAP-PS5U)

Description

SNAP power supplies provide the best source of AC or DC power for your Opto 22 SNAP hardware. Packaged in a compact and sturdy housing, SNAP power supplies include a built-in fuse, an LED status indicator, and an ON/OFF power switch for ease of use.

The SNAP-PS24 and SNAP-PS24U power supplies are designed for either of two purposes:

- to provide primary power for a SNAP PAC S-series controller
- to provide 24 volts of DC loop power for SNAP analog modules mounted on a SNAP M-series or B-series mounting rack

The SNAP-PS5, SNAP-PS5-24DC, and SNAP-PS5U power supplies are designed to provide 5 VDC power for smaller standalone SNAP controllers and for SNAP I/O units. An I/O unit is composed of a SNAP mounting rack, an I/O processor (brain or on-the-rack controller), and I/O modules. These power supplies are compatible with Ethernet-based I/O units, such as those with SNAP PAC R-series rackmounted controllers, SNAP Ultimate I/O, SNAP Ethernet I/O, SNAP Simple I/O, and serial-based SNAP I/O units, such as those with a B3000, SNAP-HA, or SNAP-B3000-MODBUS brain.

Opto 22 recommends using one SNAP power supply for each I/O unit and each controller. The model you should choose depends upon the load for the I/O unit. See the power requirements tables starting on [page 11](#) for help in determining the power supplies you need. Additional information on using power supplies can be found in the Opto 22 technical note *Using Power Supplies with Opto 22 Systems* (form #1271, available on our website, www.opto22.com).

All SNAP power supplies except the SNAP-PS5-24DC require AC input power. The SNAP-PS5U and SNAP-PS24U accommodate a wide range of AC input voltages, from 100 to 250 VAC.



SNAP Power Supplies

The SNAP-PS5-24DC DC-to-DC power supply requires a 24 VDC input and is ideal for systems using DC backup power.

Each SNAP power supply can be mounted in one of two ways: next to the controller or SNAP I/O unit it powers, using the standard panel-mounting base, or directly on a DIN rail using the optional DIN-rail adapter.

AC or DC input power connections, as required by the model, are made to a removable terminal strip on top of the power supply. DC output power is then ready to be hooked up to the controller or rack using the attached wiring harness.

Part Numbers

Part	Description
SNAP-PS5	SNAP Power Supply 120 VAC input; 5 VDC, 4 A output
SNAP-PS5-24DC	SNAP Power Supply 24 VDC input; 5 VDC, 4 A output
SNAP-PS5U	SNAP Power Supply 100–250 VAC input; 5 VDC, 5 A output
SNAP-PS24	SNAP Power Supply 120 VAC input; 24 VDC, 3/4 A output
SNAP-PS24U	SNAP Power Supply, 100–250 VAC input; 24 VDC, 1-1/4 A output
SNAP-PSDIN	DIN-Rail Adapter for SNAP-PS5, SNAP-PS24, or SNAP-PS5-24DC
SNAP-PSUDIN	DIN-Rail Adapter for SNAP-PS5U or SNAP-PS24U

Specifications

	SNAP-PS5	SNAP-PS5-24DC	SNAP-PS5U
Input Voltage	95–130 VAC, 47–63 Hz	18–32 VDC	100–250 VAC, 47–63 Hz
Output Voltage	5.0 ±0.1 VDC	5.0 ±0.1 VDC	5.0 ±0.1 VDC
Output Current	4.0 A	4.0 A	5.0 A
Dimensions	See dimensional drawings starting on page 7 .	See dimensional drawings starting on page 7 .	See dimensional drawings on page 9 .
Weight	15 oz. (425.25 g)	15 oz. (425.25 g)	1.9 lbs (863.63 g)
Operating Temperature	0° to 70° C	0° to 70° C	0° to 70° C
Storage Temperature	-30° to 85° C	-30° to 85° C	-30° to 85° C
Fuse	Opto 22 PN: SNAP-FUSE1AB Vendor PN: GDC-1A (Bussman)	Opto 22 PN: SNAP-FUSE2AB Vendor PN: GDB-2A (Bussman)	Internal fuse

	SNAP-PS24	SNAP-PS24U
Input Voltage	95–130 VAC, 47–63 Hz	100–250 VAC, 47–63 Hz
Output Voltage	24 ± 0.6 VDC	24 ± 0.1 VDC
Output Current	0.75 A	1.25 A
Dimensions	See dimensional drawings starting on page 7 .	See dimensional drawings on page 9 .
Weight	2.1 lbs (952.54 g)	1.9 lbs (863.63 g)
Operating Temperature	0° C to 70° C	0° C to 70° C
Storage Temperature	-30° C to 85° C	-30° C to 85° C
Fuse	Opto 22 PN: SNAP-FUSE1AB Vendor PN: GDC-1A (Bussman)	Internal fuse

I/O Unit Power Requirements

The tables starting on [page 11](#) will help you determine the power supply needs for your system. Copy the power requirements worksheet and complete one for each distributed I/O unit.

In addition, keep the following power recommendations in mind. For more help with power supplies, see Opto 22 form #1271, *Using Power Supplies with Opto 22 Systems*.

Use a single power supply per rack

In general, we recommend you use an independent, isolated, regulated power supply locally with each rack. Local isolated supplies offer these advantages:

- Short supply conductors, which minimize losses
- Power redundancy, so the failure of a single supply causes only a single rack failure, not a total system failure
- Fewer voltage drops and ground loops (Voltage drops and subsequent ground loops may occur when power is distributed over a large system.)

Always use a separate field supply

Use a separate power supply for the field side of the I/O. Using the rack supply for field actuation and monitoring defeats the isolation the I/O module offers and therefore increases the chance of a ground loop within the control system. Additionally, a sudden change of current on the field side can cause undesirable voltage fluctuations that may interfere with the controller or I/O unit's operation.

Power wiring guidelines


- Use one power supply per I/O unit.
- Use one power supply per controller.
- Use 14 AWG wire.
- SNAP power supplies have wires of limited length to minimize voltage drop. Do not extend the length of the wires.
- If you power multiple I/O units or controllers from one power supply, use a star wiring topology. Do not daisy-chain power wiring from one device to the next.

SNAP Power Supplies

Installation



Panel Mounting (standard)

Mount the SNAP power supply in a location where the attached red and black power wires will reach the "+" and "-" power terminals on the SNAP mounting rack or controller. Do not extend the wires.

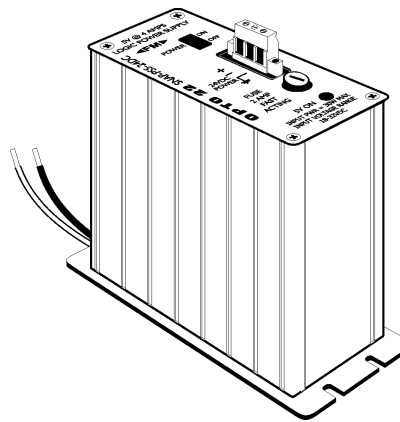

DIN-Rail Mounting (optional)

1. For DIN-rail mounting, remove the four screws that fasten the panel mounting base plate to the power supply. Keep screws in a safe place.
2. Remove panel mounting base plate.
3. In place of the panel mounting base plate, use the four screws removed in step 1 to fasten the DIN-rail adapter (purchased separately) to the power supply.
4. Mount the SNAP power supply on the DIN rail (next to the power connector on the I/O unit).

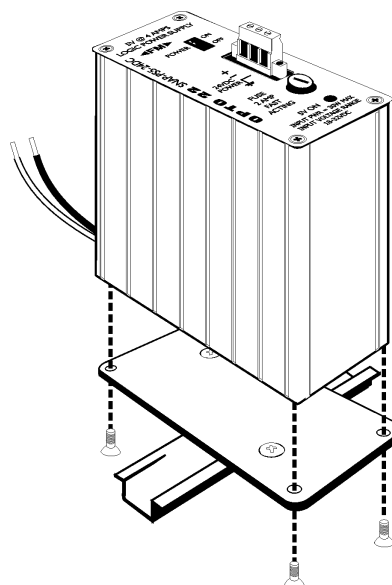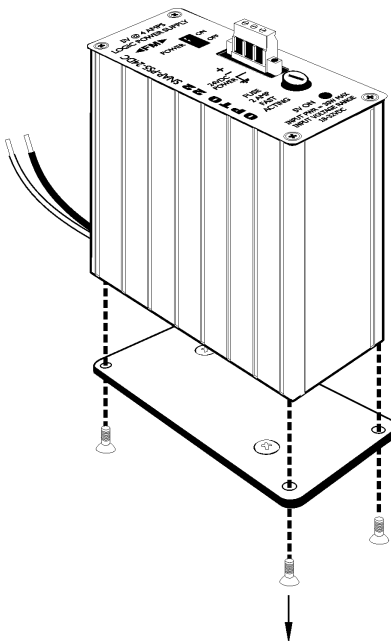

Wiring—Primary Power Supply


Wiring to a SNAP Controller

1. For a SNAP controller, check the controller's specifications in its data sheet or user's guide to make sure you have the correct power supply for the controller's requirements.
2. Follow directions in the user's guide to wire the power supply to the controller. The power supply's red (or white-and-red) wire is the positive wire; the black (or white-and-black) wire is the negative wire.

Wiring to a SNAP I/O Unit

1. Using the power terminals on the SNAP mounting rack, attach the red wire to the "+" terminal and the black wire to the "-" terminal.

2. For the SNAP-PS5 (not illustrated): Using the removable input power connector on top of the power supply, apply 120 volts AC power between the two terminals marked "AC." The ground terminal should be connected to ground.
3. For the SNAP-PS5-24DC (not illustrated): Using the removable input power connector on top of the power supply, apply 24 volts DC power between the two terminals marked "±DC." The ground terminal should be connected to ground.
4. For the SNAP-PS5U (illustrated below): Using the removable input power connector on top of the power supply, apply 100–250 volts AC power between the two terminals marked "AC." The ground terminal should be connected to ground.

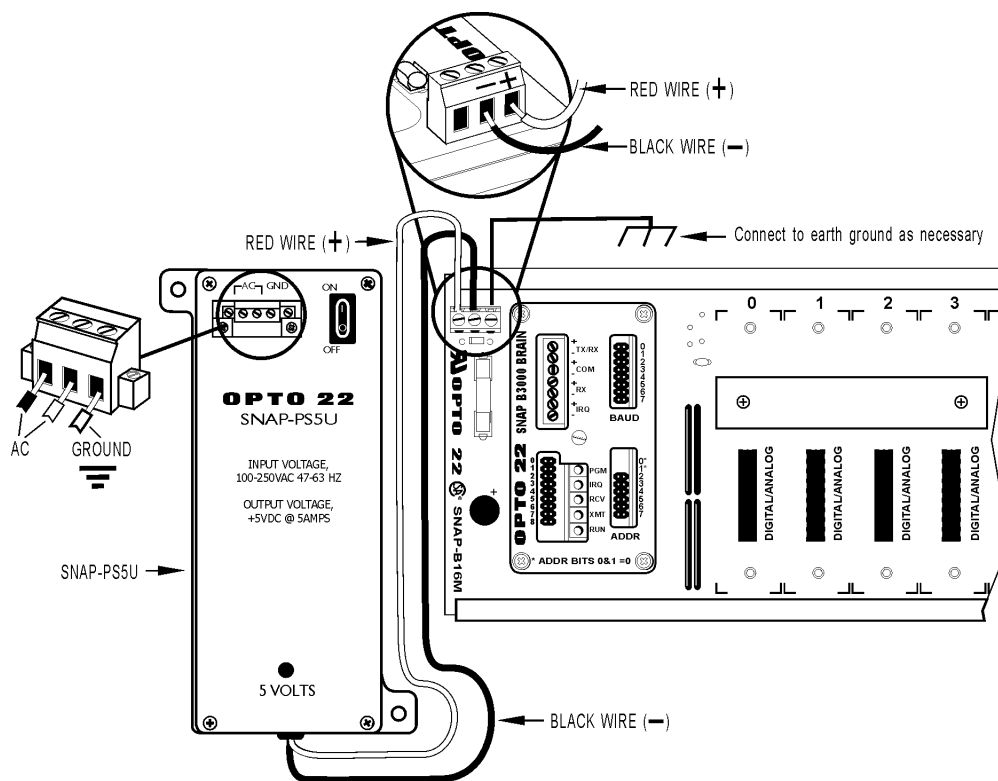

SNAP Power Supplies

Wiring—Loop Power Supply

1. Mount the SNAP-PS24 or SNAP-PS24U power supply in a location where the attached output power wires will reach the field connector for SNAP analog modules or the terminal strip on SNAP mounting racks that have the additional field wiring terminal strips.
2. The white-and-red wire is the positive wire (24 VDC). The white-and-black wire is the negative wire (24 VDC return). For specific loop power wiring information, see Opto 22 form #0784 for SNAP racks that have the additional field wiring terminal strip (see Figure 1 example below), or refer to forms #1065 and #1066 if wiring directly to the field connectors on SNAP analog modules (see Figure 2). See the next page for similar SNAP-PS24U wiring diagrams.
3. Using the removable input power connector on top of the power supply, apply 120 volts of AC power between the two terminals marked "AC." The ground terminal should be connected to ground.

Figure 1. SNAP-PS24 Used as a Loop Supply

This diagram shows the SNAP-PS24 used as the loop supply and a SNAP-PS5 used as the primary power supply.


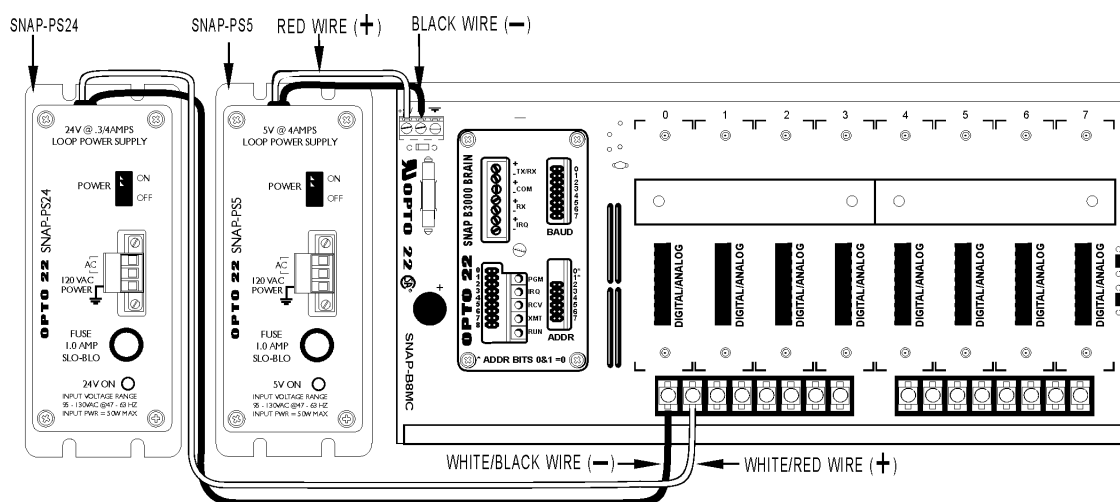


Figure 2. SNAP-PS24 Used as a Loop Supply

The SNAP-PS24 is used as the loop supply; a SNAP-PS5 is used as the primary power supply.

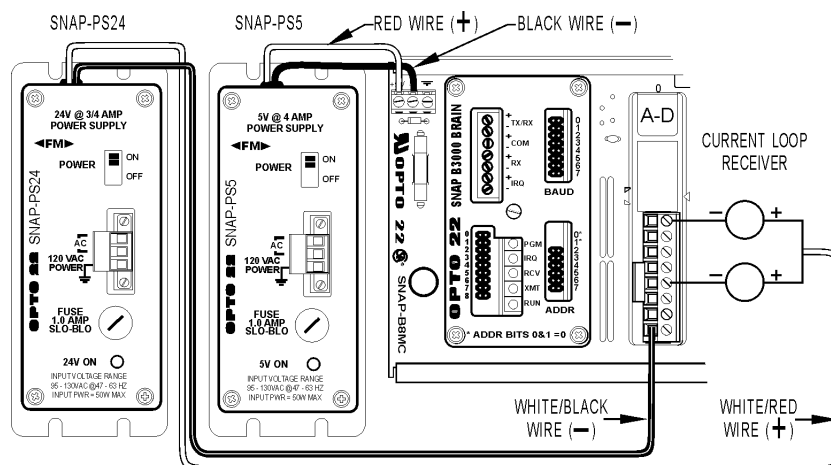

Wiring—Loop Supply (continued)

Figure 1. SNAP-PS24U Used as a Loop Supply

This diagram shows the SNAP-PS24U used as the loop supply and a SNAP-PS5U used as the primary power supply.


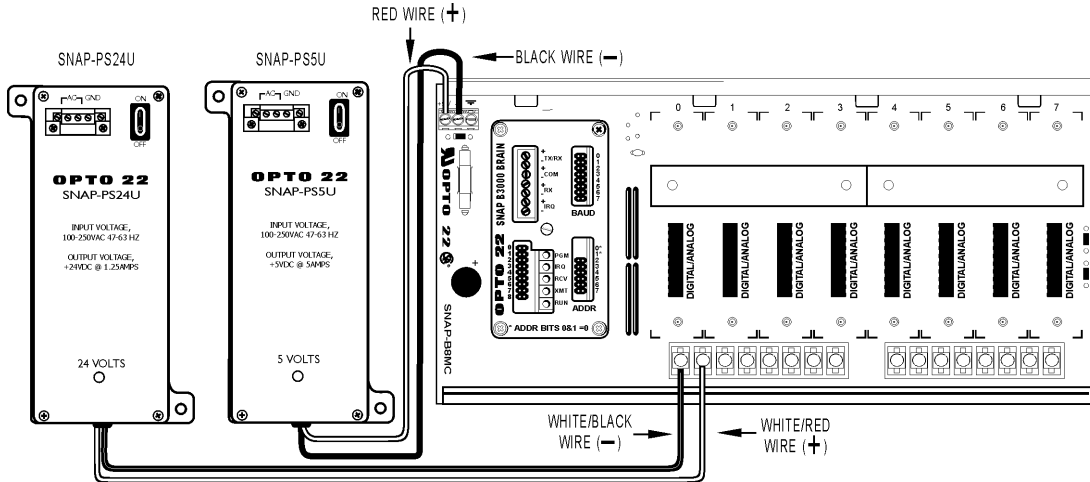


Figure 2. SNAP-PS24U Used as a Loop Supply


The SNAP-PS24U is used as the loop supply; a SNAP-PS5U is used as the primary power supply.

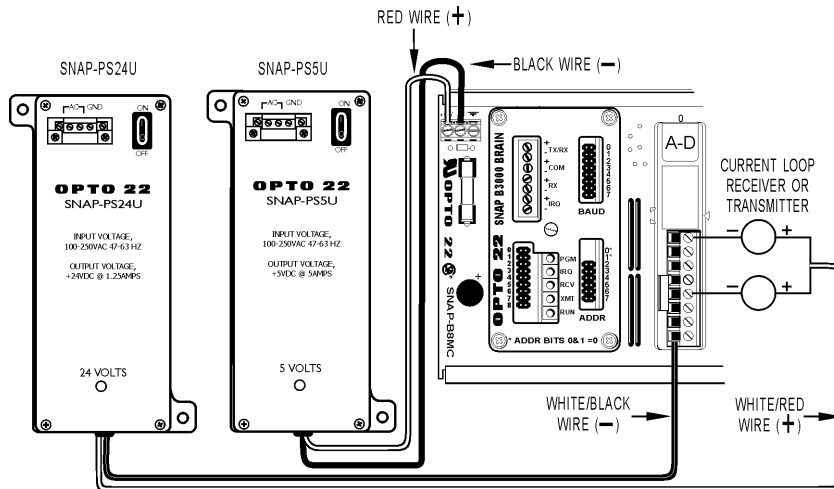

SNAP Power Supplies


Dimensions—SNAP-PS5, SNAP-PS24, and SNAP-PS5-24DC

Panel Mount

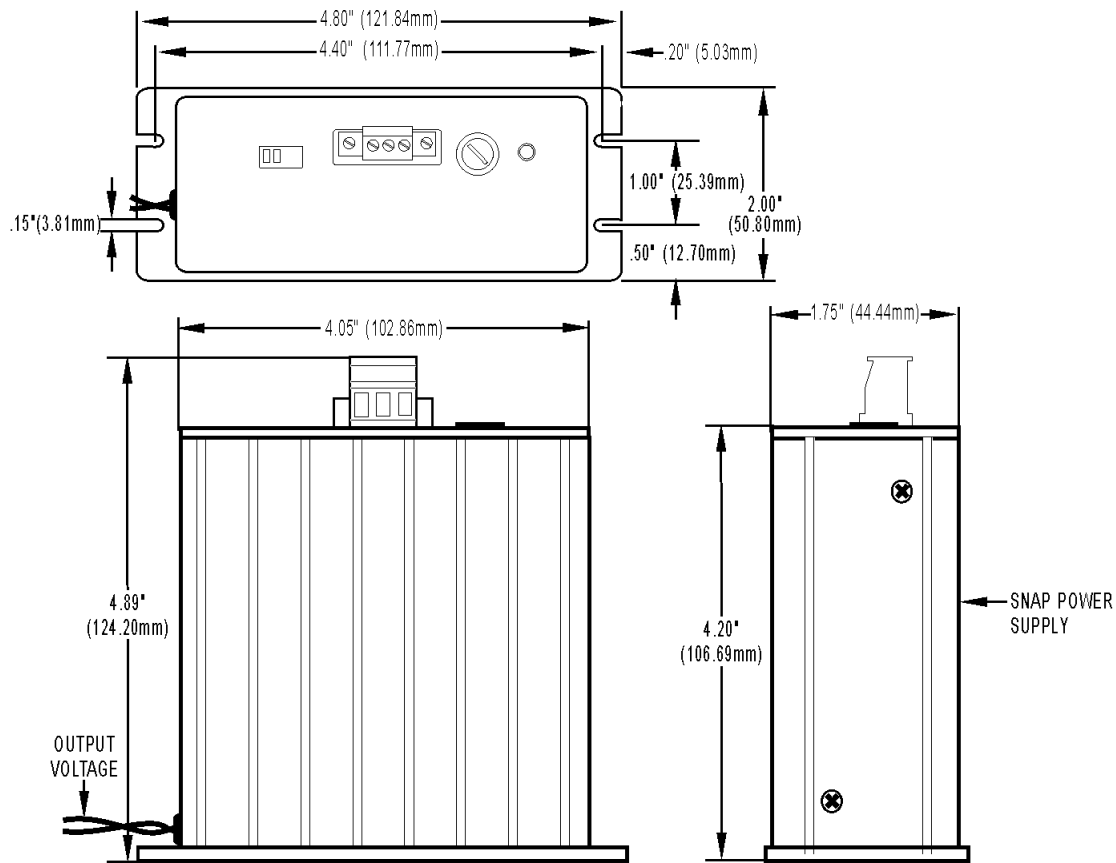

Dimensions—SNAP-PS5, SNAP-PS24, and SNAP-PS5-24DC

With DIN-Rail Adapter

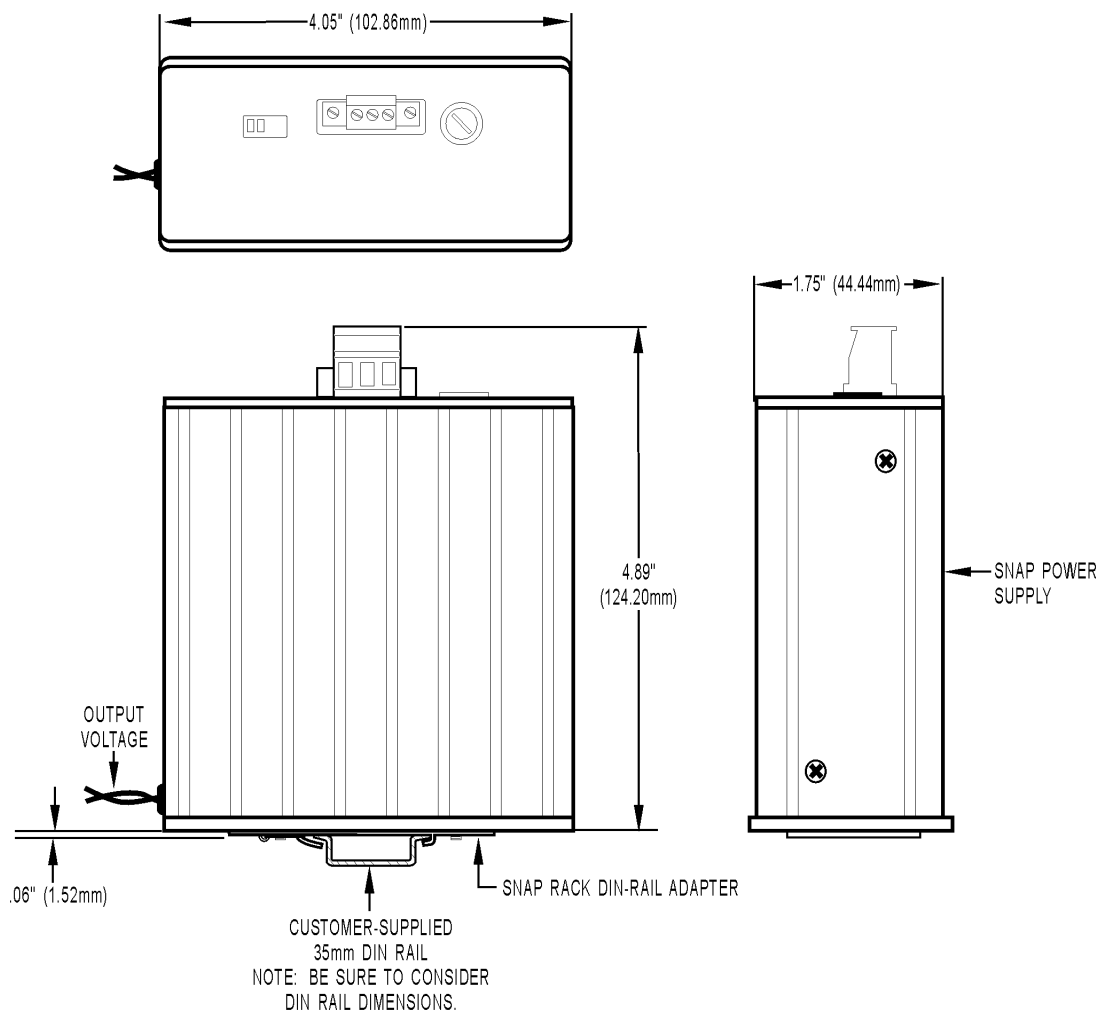


SNAP Power Supplies


Dimensions—SNAP-PS5U and SNAP-PS24U

Panel Mount


SNAP-PS5U is shown; SNAP-PS24U has the same dimensions.

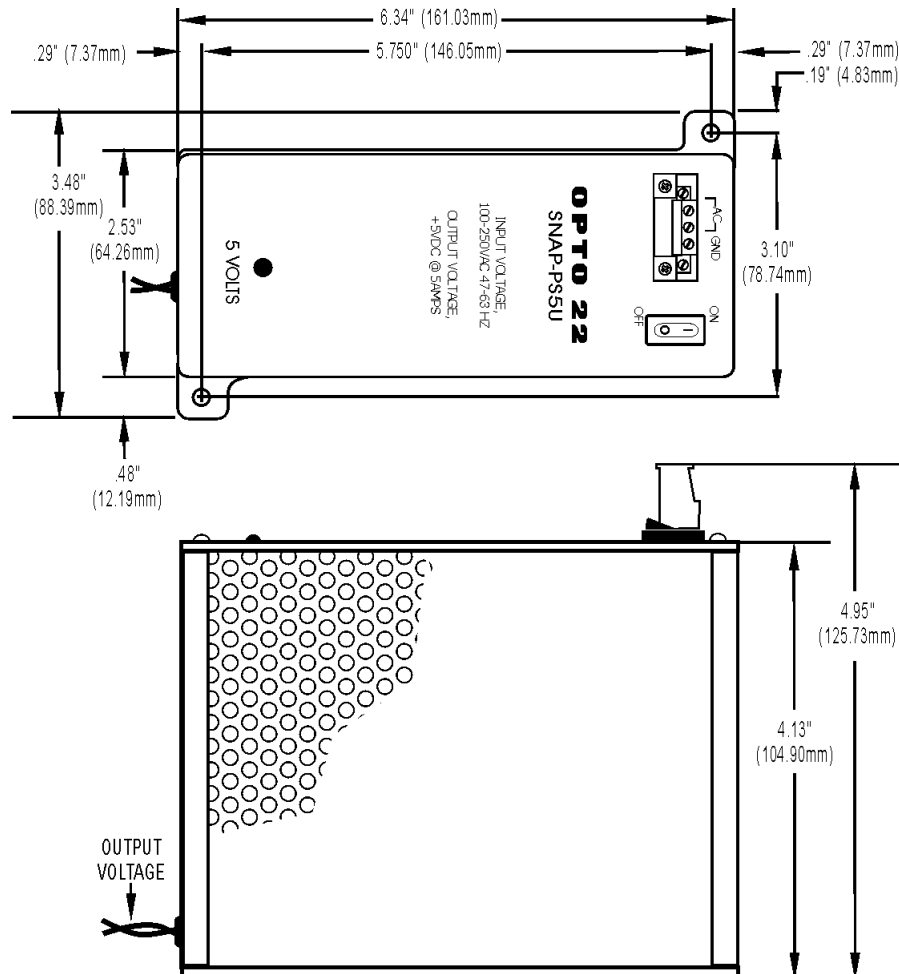

Dimensions—SNAP-PSDIN

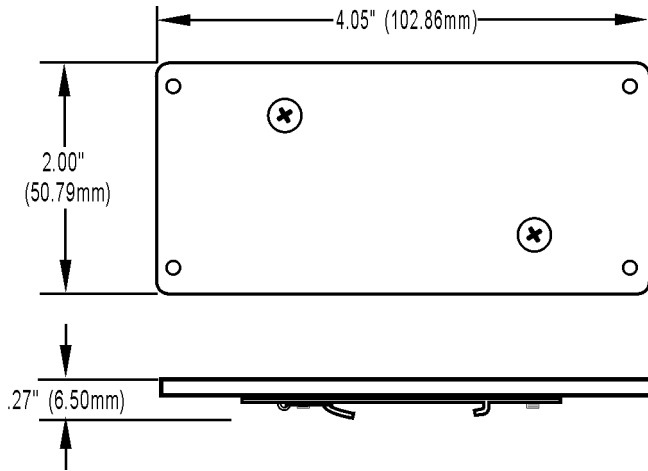

Dimensions—SNAP-PSUDIN

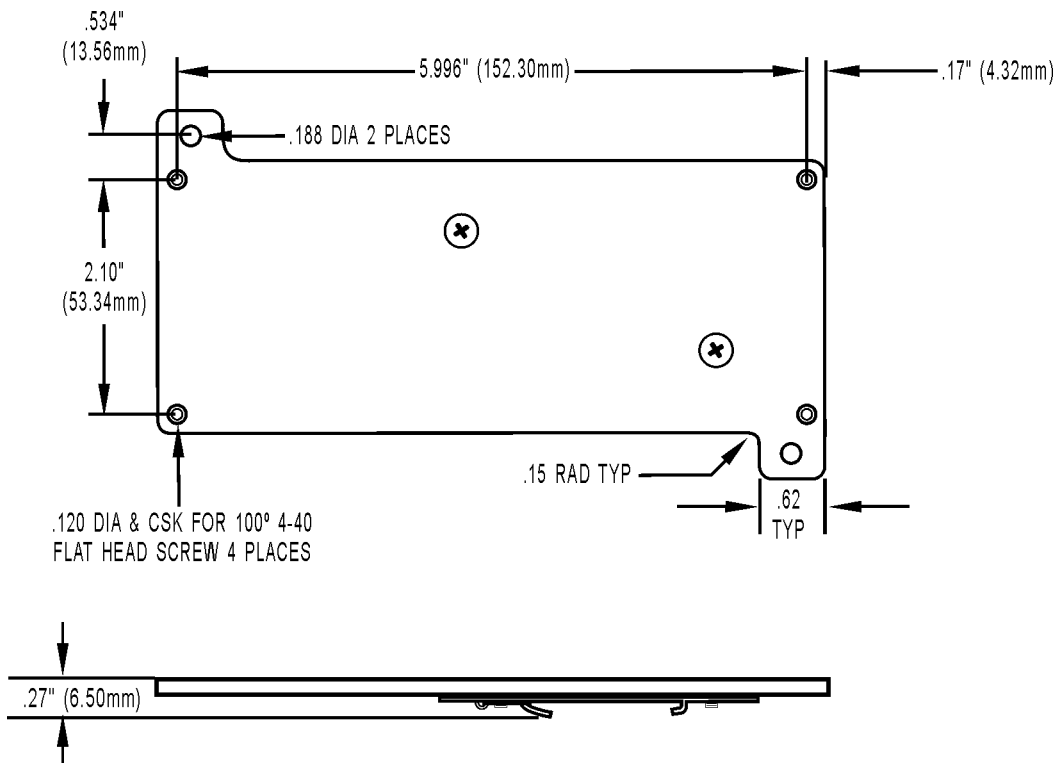

SNAP Power Supplies

Power Requirements Tables

Opto 22 recommends using one power supply per I/O unit and one power supply per controller. See [“I/O Unit Power Requirements” on page 2](#) for additional information.

To determine power requirements for products not listed in these tables, see the data sheets for the individual products.

Controller Power Requirements

Standalone Controller or adapter card	Power Req (VDC)	Power Req. (Amps)
SNAP-PAC-S1 controller	8–24 VDC	0.42 A @ 24 V to 1.25 A @ 8 V
SNAP-LCSX or -LCSX-PLUS controller	5 VDC	0.500
SNAP-LCM4 controller	5 VDC	1.000
M4-SENET-100 adapter card	5 VDC	1.000
M4SARC adapter card	5 VDC	0.200
M4DUALARC adapter card	5 VDC	0.150
M4SARCF adapter card	5 VDC	0.250
M4SARCFR adapter card	5 VDC	0.350

I/O Processor (Brain or On-the-Rack Controller) Power Requirements

Processor (Brain or Rack-mounted Controller)	Power Req. (Amps)*
SNAP PAC R-series controllers (all models)	1.200
SNAP Ultimate controller/brains (all models)	1.000
SNAP Ethernet brains	0.800
SNAP Simple I/O brains	0.500
B3000 (serial SNAP brain) SNAP-D64RS	0.500
SNAP-B3000-Modbus SNAP ARCNET brains	1.000
SNAP-B4 SNAP-B6	1.000 1.500 if terminated

*Current from 5-volt supply

(Continued on following page)

Power Requirements Tables (continued)

I/O Unit (Processor, Rack, I/O Modules) Power Requirements Worksheet

Item	Quantity	X Power Req. (Amps)	Total Power Required (Amps) ^{†*}
SNAP processor (Enter Amps from Processor Power Requirements table)	1		
SNAP-IDC5-SW digital input module SNAP-IDC5-SW-NC digital input module		0.200	
All other standard digital input and output modules (not high-density digital modules)		0.050	
High-density digital input and output modules*		0.150	
SNAP-AICTD analog input module SNAP-AICTD-4* analog input module All analog output modules		0.150	
SNAP-AIARMS analog input module SNAP-AIVRMS analog input module SNAP-AIMA and AIMA-4* analog input modules SNAP-AITM and AITM-2 analog input modules SNAP-AIMV-4* and AIMV2-4* analog input modules SNAP-AIV and AIV-4* analog input modules		0.170	
SNAP-AIRTD analog input module SNAP-AIR40K-4* analog input module SNAP-AIRATE analog input module		0.190	
SNAP-AIPM power monitoring module*		0.100	
SNAP-AILC load cell module*		0.120	
Isolated analog input modules (part numbers ending in -i or iSRC)		0.200	
Serial modules*		0.250	
Total			

* Can be used with SNAP PAC R-series, SNAP Simple, SNAP Ethernet, and SNAP Ultimate

† Current from 5-volt supply

IMPORTANT NOTE: For a SNAP-PS5 or a SNAP-PS5-24DC power supply, the total power required must not exceed 4 Amps. For a SNAP-PS5U, the total power required must not exceed 5 Amps.

To determine power requirements for products not listed in this table, see the data sheets for the individual products.

More About Opto 22

Products

Opto 22 develops and manufactures a broad array of reliable, flexible hardware and software products for industrial automation, remote monitoring, data acquisition, and machine-to-machine (M2M) applications.

SNAP PACs (Programmable Automation Controllers)

Programmable automation controllers (PACs) are multifunctional, multidomain, modular controllers based on open standards and providing an integrated development environment. Models include the standalone SNAP PAC S-series and the rack-mounted SNAP PAC R-series. Both handle a wide range of digital, analog, and serial functions and are equally suited to data collection, remote monitoring, process control, and discrete and hybrid manufacturing.

SNAP PACs are based on open Ethernet and Internet Protocol (IP) standards, so you can build or extend a system without the expense and limitations of proprietary networks and protocols.



connectivity and in the software applications they work with, including:

- Opto 22's own ioProject suite of control, HMI, and OPC software
- Modbus®/TCP software and hardware
- Third-party HMIs and other OPC client software
- Database, email, network management, and other enterprise systems
- Custom applications developed with the free OptoMMP Driver Toolkit

SNAP Ethernet I/O also works with SNAP PACs to build a complete automation system: PACs provide central control and data distribution; SNAP Ethernet I/O provides local connection to sensors and equipment and includes distributed intelligence for local control, counting, latching, thermocouple linearization, PID loop control, and more.

Quality

Founded in 1974 and with over 85 million devices sold, Opto 22 has established a worldwide reputation for high quality products. All are made in the U.S.A. at our manufacturing facility in Temecula, California. Because we do no statistical testing, and each part is tested twice before leaving our factory, we can guarantee most solid-state relays and optically isolated I/O modules for life.


Free Product Support

Opto 22's Product Support Group offers free, comprehensive technical support for Opto 22 products. Our staff of support engineers represents decades of training and experience. Product support is available in English and Spanish, by phone or email, Monday through Friday, 7 a.m. to 5 p.m. PST.

ioProject Software Suite

Opto 22's ioProject Software Suite provides full-featured and cost effective control, HMI (human machine interface), and OPC software to power your Opto 22 hardware.

These fully integrated software applications share a single tagname database, so the data points you configure in ioControl™ are immediately available for use in ioDisplay™ and OptoOPCServer™. Commands are in plain English; variables and I/O point names are fully descriptive.

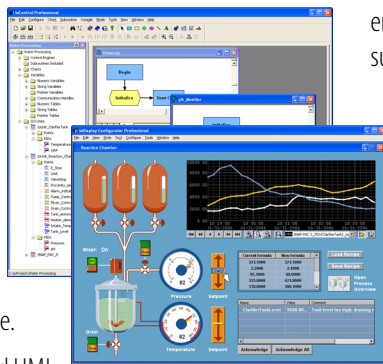

ioProject Basic offers control and HMI tools and is included in your purchase of a SNAP PAC controller. ioProject Professional, available for separate purchase, adds OptoOPCServer, options for Ethernet link redundancy or segmented networking, and support for legacy Opto 22 mistic™ I/O units.

SNAP Ethernet I/O

Based on worldwide standards Ethernet and Internet Protocol (IP), SNAP Ethernet I/O systems offer flexibility in their network

Free Customer Training

Hands-on training classes for SNAP PACs, ioProject software, and SNAP Ethernet I/O are offered at our headquarters in Temecula, California. Each student has his or her own learning station; classes are limited to nine students. Registration for the free training class is on a first-come, first-served basis. See training.opto22.com for more information.

Purchasing Opto 22 Products

Opto 22 products are sold directly and through a worldwide network of distributors, partners, and system integrators. For more information, contact Opto 22 headquarters at 800-321-6786 or visit the website at www.opto22.com.

www.opto22.com