#### **QUANTAFOB Remote Control System**



### **Extend your system**

Depending on your application or user requirement there are a number of additions you can make to extend your remote control system.

#### Additional transmitters:

Our range of FOBBER key fob transmitters are available in various button options, from a single button to 8 buttons.



#### **Customise Your Key Fob**

It is easy to make the system your own by having a custom sticker on the key fob.

From as little as £2.00 extra per key fob (MOQ and design complexity dependent) you can have a custom key fob.



# **QUANTAFOB Remote Control**

# **Quick Start Guide**

### What's in the box?





Sales: +44 (0) 1444 227910 Tech. Support: +44 (0) 1444 227909











#### **Getting Set Up**

NOTE: Installation should be carried out by a qualified technician

- Unscrew the 2 screws at the base. Remove base panel.
  - Unscrew the antenna at top of enclosure.
  - Lightly pull the PCB inside to remove.

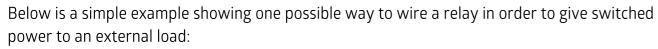

When the relay is energised the 'COM' connects to 'NO' and power is applied to the Load.

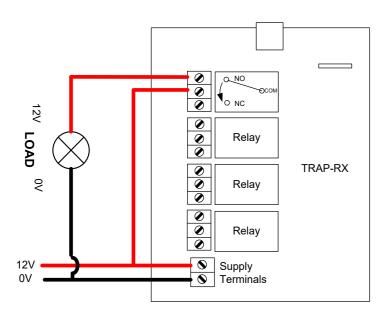

NOTE: For full installation instructions and product specification, please see the **QUANTAFOB Datasheet at www.rfsolutions.co.uk.** 



#### **QUANTAFOB Remote Control System**

## **Setting the Outputs Momentary or Latching Operation**

 $\frac{1}{2}$  sec Mom = Relay will operate for  $\frac{1}{2}$  sec

= Relay will operate for as long as Mom transmitter switch operated

= Relay will toggle ON/OFF on each Latch transmitter button press



Link Positions		Switch relays			
LK1	LK2	RLY 1	RLY 2	RLY 3	RLY 4
Open	Open	<sup>1</sup> / <sub>2</sub> sec Mom	<sup>1</sup> / <sub>2</sub> sec Mom	<sup>1</sup> / <sub>2</sub> sec Mom	¹/₂ sec Mom
Closed	Open	Mom	Mom	Latch	Latch
Open	Closed	Mom	Mom	Mom	Mom
Closed	Closed	Latch	Latch	Latch	Latch

NOTE: If link setting is changed, power cycle the receiver (turn off/on) otherwise it will stay in the same mode it was previously set in.

#### **Advanced operation - Pairing a transmitter button**

NOTE: Systems come pre-paired. Pairing instructions only need to be followed for additional transmitters.

With this system, you can pair together any individual transmitter switch, with a receiver relay output switch. Without opening either enclosure...

- Briefly (for less than 1 second) place a magnet next to the top left of the receiver as shown, and then remove it.
- The receiver will buzz once (One buzz means the receiver unit is ready to allocate a transmitter to relay switch 1).
- Press the switch on the transmitter which you wish to pair.
- The receiver will buzz twice to confirm pairing. 4.
- Repeat for any additional transmitter switches.

NOTE: Each receiver has a maximum memory for up to 28 pairings, these can be from any switches on any transmitters!

To select relay outputs 2,2,4, repeat step 3 above and count the number of buzzes. 2 buzzes for relay 2, 3 for 3 etc.

