
Atmel AVR2103: RF4CE Remote Control Evaluation Kit - Quick Start Guide



**8-bit Atmel
Microcontrollers**

Application Note


Features

This application note briefly describes how to set up and run the pre-flashed performance test application included with the Atmel® RF4CE Remote Control Evaluation Kit.

The latest RF4CE dedicated applications can be downloaded from www.atmel.com and flashed to the kit hardware by using the serial bootloader functionality of the pre-flashed application.

1 Kit contents

- 2x Atmel RCB128RFA1 Radio Controller Board (RCB)
- 1x Atmel RCB Sensor Terminal Board (STB)
- 1x Atmel RCB Key Remote Control board
- 1x RCB-BB RS232 cable
- 1x USB cable
- 2x 2.4GHz antenna
- 4x AAA battery
- 1x Quick Start Guide

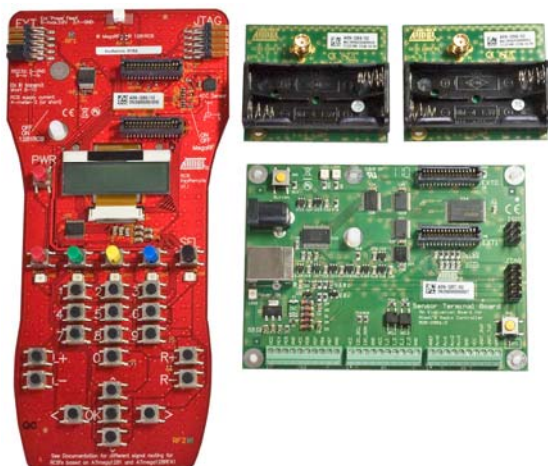

2 Simple range measurement

The pre-flashed performance test application on the RCB128RFA1 radio controller boards features a simple range measurement. Each board operates in a standalone manner, and is able to transmit or receive data frames. A successful transmit or receive operation is indicated by a blinking LED.

Rev. 8368B-AVR-01/12



2.1 Board assembling



 

1. Connect the antennas to both RCBs.
2. Insert two batteries in each of the RCBs.

2.2 Power up the boards



Apply power to both RCBs by switching on the power switch located on the top side of the board. The RCBs run a power-on check and indicate the successful completion by switching on the second of the three LEDs.

2.3 Run simple range measurement application

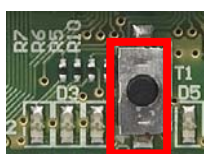

Choose one of the RCB128RFA1 RCBs, and press button T1 to start the simple range measurement application. First, the RCB initiates a connection and configuration procedure by sending broadcast frames, and waiting for a response from the second RCB. After a successful configuration, the RCBs turn on LED-D2 to indicate that status. Afterwards the initiator starts to transmit data frames immediately. Each data frame transmission is indicated by blinking the TX status LED-D3. A successful data frame reception on the second node is indicated by blinking the RX status LED-D4. The RX status LED stops blinking if no data frames are received, such as when, for example, the node has left the communication range. Data frame transmission can be stopped by pressing T1 once more on the node transmitting frames. Moreover the RCBs can transmit and receive frames simultaneously. Pressing button T1 on both nodes initiates each node to transmit frames. The three LEDs indicate their respective functions: LED-D2 a successful configuration, LED-D3 transmission and LED-D4 reception.


NOTE

The node connection and configuration gets lost when the RCBs' power supply is switched off. To restart the simple range measurement, power cycle both RCBs before pressing T1 on one RCB to restart the application.

3 Packet error rate measurement

The pre-flashed performance test application is also configured with packet error rate (PER) measurement functionality (as defined in IEEE[®] 802.15.4), enabling the user to explore various radio transceiver features, radio transceiver registers, and performance by tuning with customized configurations. For this application, one RCB128RFA1 RCB needs to be connected to a PC.

3.1 Board assembling

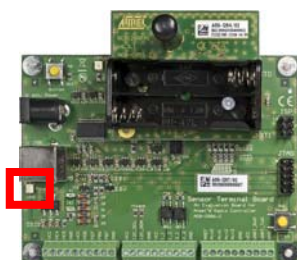

1. Switch off power from one RCB, or remove the batteries and connect the RCB to the STB.
2. Download the patched FT245RL driver files from the kit website, and follow the installation guidelines on your PC to install the USB driver.


3. Connect the STB to a PC with the USB cable.
4. A successful installation and enumeration of the USB connection with the PC is indicated by the power status LED on the STB.

3.2 Set up the terminal program on the PC

A terminal program running on the PC is used to control the application running on the RCB connected to the STB. Set up the terminal program as follows:

BAUD RATE: 9600
PARITY: None
DATA BITS: 8
STOP BITS: 1
FLOW CONTROL: Off

3.3 Power up the boards

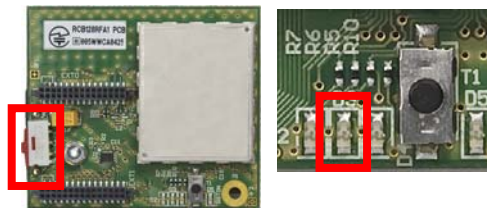

1. Apply power to the standalone RCB (optional) by turning on the power switch on the top side of the board. The RCB runs a power-on check and indicates the successful completion by switching on the second of the three LEDs.
2. The RCB mounted on the STB is powered via the USB connection. Make sure that the batteries are removed or that the power switch is in the off position.

3.4 Run the packet error rate measurement

```
Starting OP MODE 2 as Transmitter
-----
Software Version:2.0
Performance test application (ATmega128RF41)
Settings:
(C) : Channel = 20
(P) : Channel page = 0
(W) : Tx power = 3 dBm
(N) : Number of test frames = 100
(L) : Frame length (PSDU) = 20
(A) : ACK request = no ACK requested
(F) : Frame retry enabled = false
(M) : CSMA enabled = true
(Z) : CRC settings on remote node
(I) : Identify peer device by blinking
(E) : Energy scan on all channels
(U) : Continuous transmission on current channel
(D) : Transmit a continuous wave pulse on current channel
(T) : Put transceiver in sleep
(V) : Get sensor data, i.e. supply voltage and temperature
(S) : Start test
>
```

Type any character in the terminal window to initiate the configuration procedure for both RCB nodes and show the menu. Optionally, if no peer node is active, the search for a peer device can be aborted by pressing ENTER. The node gets configured for stand-alone operation. The packet error rate measurement can be operated through the menu options displayed on the UART terminal program.

A detailed description of the menu options can be found in the [Atmel AVR2104 RF4CE-EK Remote Control Evaluation Kit - User Guide](#).

4 Serial bootloader

The application offers serial bootloader functionality to flash other applications to the RCBs. A detailed description on the usage of the bootloader can be found in the [Atmel AVR2054 Serial Bootloader - User Guide](#).

5 Applications and documentation

The Atmel RF4Control software solution offers additional applications that can be evaluated with the hardware contained in the Atmel RF4CE Remote Control Evaluation Kit. The [AVR2102: RF4Control – User Guide](#) application note provides comprehensive information about this, and can be downloaded from: http://www.atmel.com/dyn/products/tools_card.asp?tool_id=4712

Additional hardware and software documentation related to the RF4CE Remote Control Evaluation Kit can be found on the kit website: http://www.atmel.com/dyn/products/tools_card.asp?tool_id=4835



Atmel Corporation
2325 Orchard Parkway
San Jose, CA 95131
USA
Tel: (+1)(408) 441-0311
Fax: (+1)(408) 487-2600
www.atmel.com

Atmel Asia Limited
Unit 01-5 & 16, 19F
BEA Tower, Millennium City 5
418 Kwun Tong Road
Kwun Tong, Kowloon
HONG KONG
Tel: (+852) 2245-6100
Fax: (+852) 2722-1369

Atmel Munich GmbH
Business Campus
Parking 4
D-85748 Garching b. Munich
GERMANY
Tel: (+49) 89-31970-0
Fax: (+49) 89-3194621

Atmel Japan
16F, Shin Osaki Kangyo Bldg.
1-6-4 Osaki Shinagawa-ku
Tokyo 104-0032
JAPAN
Tel: (+81) 3-6417-0300
Fax: (+81) 3-6417-0370

© 2012 Atmel Corporation. All rights reserved.

Atmel®, Atmel logo and combinations thereof, AVR®, AVR® logo and others are registered trademarks or trademarks of Atmel Corporation or its subsidiaries. Other terms and product names may be trademarks of others.

Disclaimer: The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. **EXCEPT AS SET FORTH IN THE ATMEL TERMS AND CONDITIONS OF SALES LOCATED ON THE ATMEL WEBSITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS AND PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.** Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and product descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.