

Introduction

The SAM E54 microcontroller is a 32-bit Arm® Cortex®-M4F based Flash microcontroller that provides features to reduce power consumption through different sleep modes, such as Idle, Standby, Hibernate, and Off. Additionally, the SAM E54 provides an advanced Low-Power Operation mode known as SleepWalking. SleepWalking enables the SAM E54 microcontrollers to wake up peripherals temporarily and asynchronously without waking up the CPU.

SleepWalking is based on event propagation managed by the Event System. It enable peripherals to work together without CPU intervention to solve complex tasks using minimal gates and the lowest possible power consumption.

To illustrate the benefits of SleepWalking using the Event System, a demonstrative application is provided along with this document. This application uses an ADC with a Window Monitoring feature in Standby mode for the following use cases:

- Standby mode with Interrupts (IRQ)
- Standby mode with Event System (SleepWalking)

This document also provides comparison on power consumption between these two use cases.

This demo application is developed using the MPLAB® X IDE on the MPLAB Harmony v3 Software Framework.

Table of Contents

Introduction.....	1
1. SAM E54 Low-Power Features Overview.....	3
1.1. Event System (EVSYS).....	3
1.2. SleepWalking.....	4
1.3. Power Manager (PM).....	5
2. Low-Power Application Overview.....	6
2.1. Active Mode.....	7
2.2. STDBY_IRQ Mode.....	8
2.3. STDBY_EVSYS Mode.....	9
3. Software and Hardware Requirements.....	11
3.1. Hardware Requirements.....	11
3.2. Software Requirements.....	13
3.3. Example Configuration.....	15
3.4. Running the Demonstration Application and Configuring the Environment.....	23
4. Results and Interpretation.....	30
4.1. Power Consumption.....	30
5. Conclusion.....	33
6. References.....	34
7. Revision History.....	35
Microchip Information.....	36
The Microchip Website.....	36
Product Change Notification Service.....	36
Customer Support.....	36
Microchip Devices Code Protection Feature.....	36
Legal Notice.....	36
Trademarks.....	37
Quality Management System.....	38
Worldwide Sales and Service.....	39

1. SAM E54 Low-Power Features Overview

1.1 Event System (EVSYS)

The EVSYS is part of the SAM E54 architecture, which allows autonomous, low-latency, and configurable communication between peripherals. Several peripherals can be configured to generate and respond to signals known as events. The exact condition to generate an event or the action taken upon receiving an event is specific to each peripheral.

Peripherals that respond to events are called event users, and peripherals that generate events are called event generators. A peripheral can receive events from multiple generators, and generate events for multiple users. Communication is made without CPU intervention and without consuming system bus or RAM. This reduces the load of the CPU and other system resources, compared to a traditional interrupt-based system.

The following figures compare an application without an Event System to an application with an Event System. In both applications, Timer Counter 0 triggers the DAC after 'x' milliseconds and Timer Counter 1 triggers the DAC after 'x' milliseconds, and AC triggers the PWM.

[Application without EVSYS](#) shows that for a typical application the CPU is quickly overloaded, which increases power consumption. Whereas in [Application with EVSYS](#), the Event System allows all the peripherals to interact without requiring CPU intervention, until a relevant event occurs.

Figure 1-1. Application without EVSYS


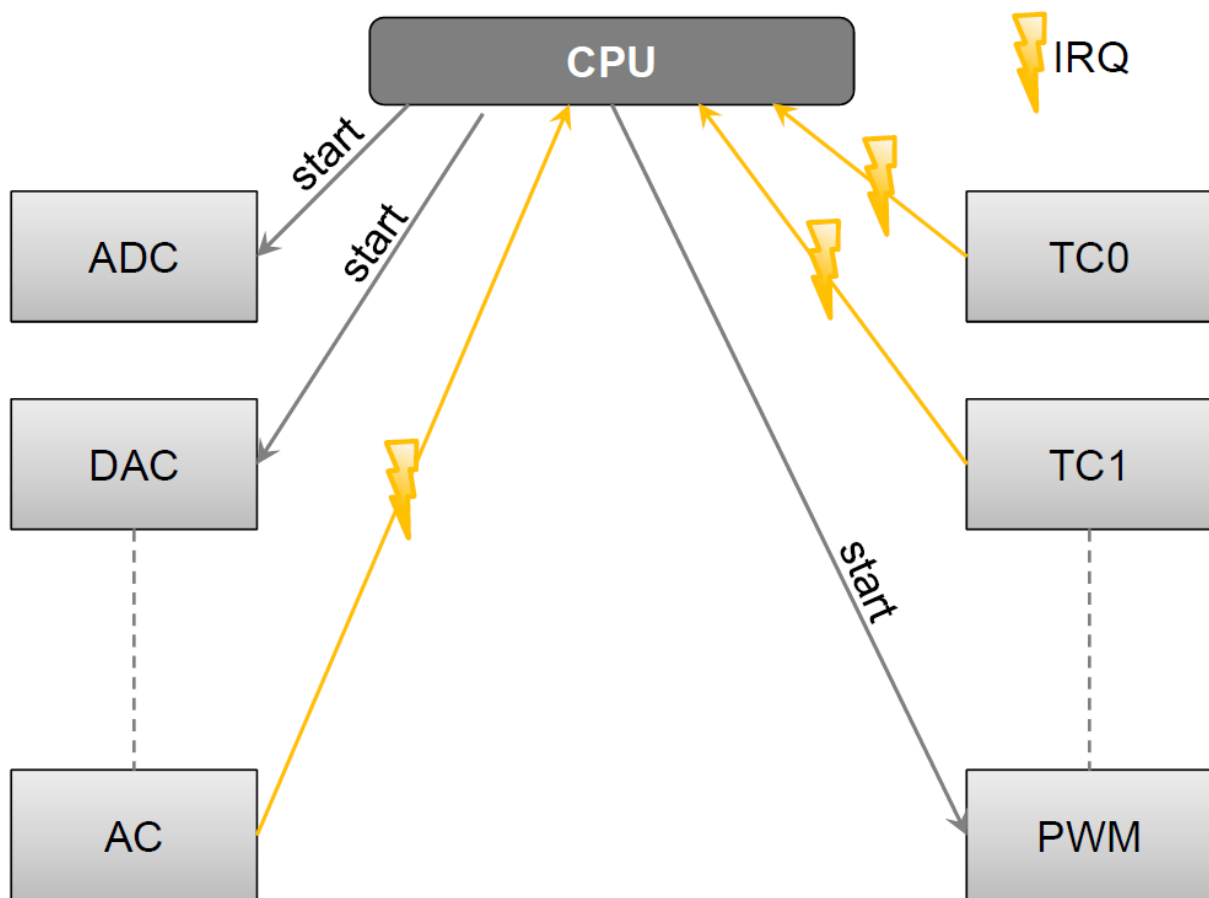



Figure 1-2. Application with EVSYS

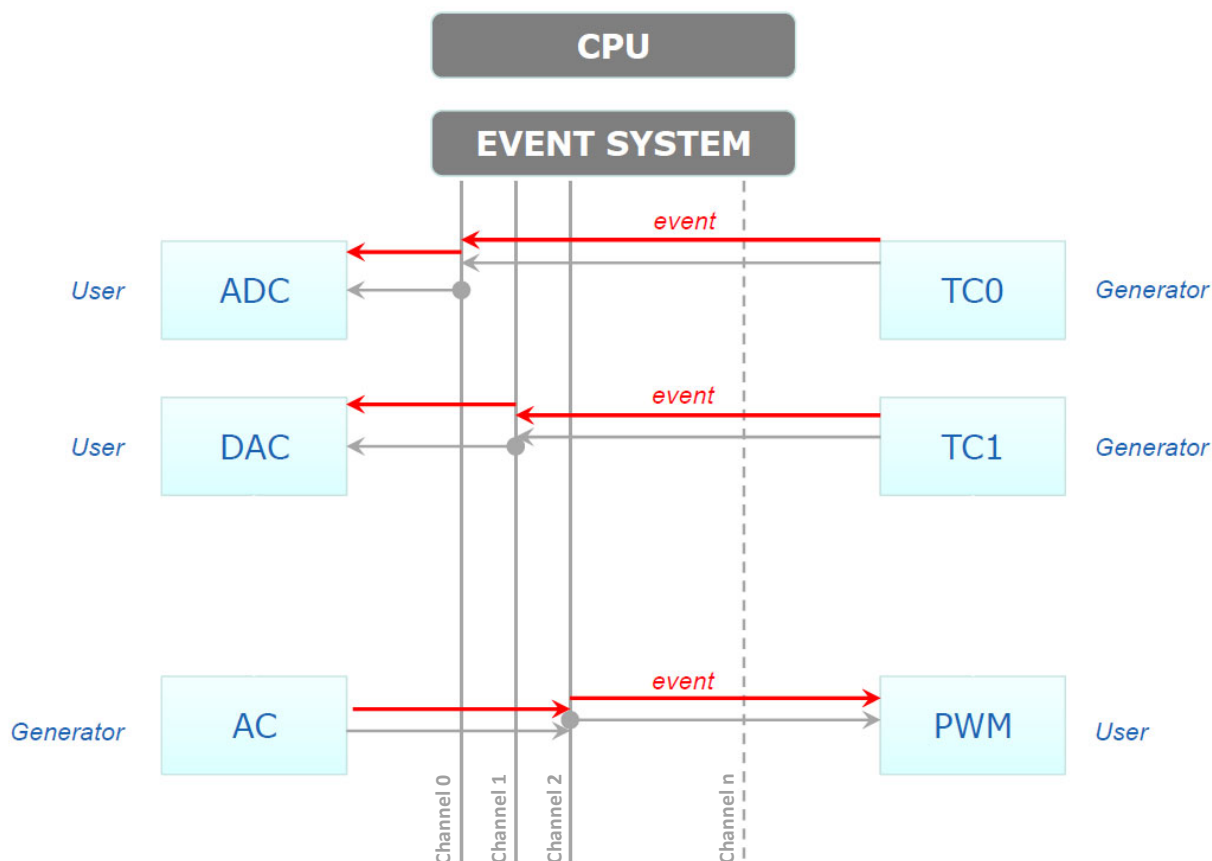

1.2 SleepWalking

SleepWalking is the capability of a device to temporarily and asynchronously wake up clocks for a peripheral to perform a task without waking up the CPU from Standby mode. SleepWalking allows the CPU to sleep until a relevant interrupt occurs. To perform SleepWalking, the Event System is required to interconnect peripherals. The Event System is used to connect an event generator peripheral to an event user peripheral. When CPU is in Standby mode, the event user peripheral can request its clock using an on-demand feature. Upon receiving an event generator peripheral trigger, it will perform its task autonomously as shown in the following figure:

Figure 1-3. SleepWalking Principle

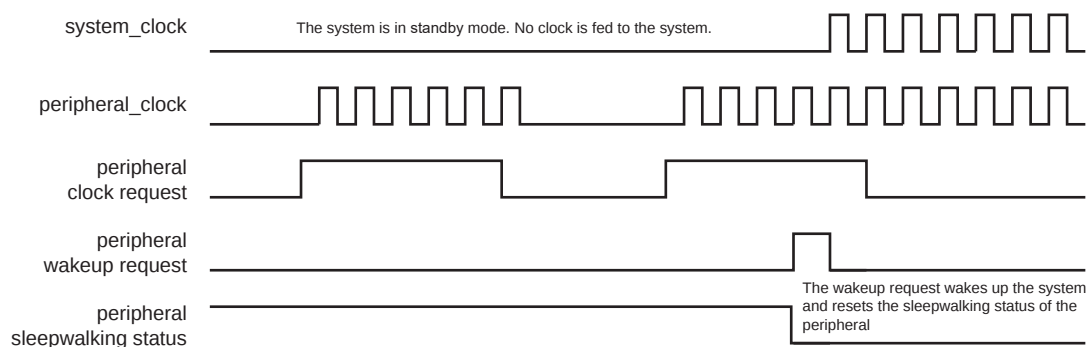


In the figure above, the peripheral requests its clock and runs without waking up the system clock. Once the peripheral is met with a valid condition during its second clock request, a wake-up request is sent to the CPU, which wakes up the CPU from Standby Sleep mode, and activates all clocks of the device (system and peripheral clocks).

SleepWalking is accomplished by the peripheral using the Event System to interconnect the peripherals in Standby mode without CPU intervention. The CPU will not wake up and the SRAM retention will still active until the appropriate condition or interrupt occurs.

1.3 Power Manager (PM)

The PM controls the sleep modes of the device and the power domain gating of the device.

Figure 1-4. Power Manager Block Diagram

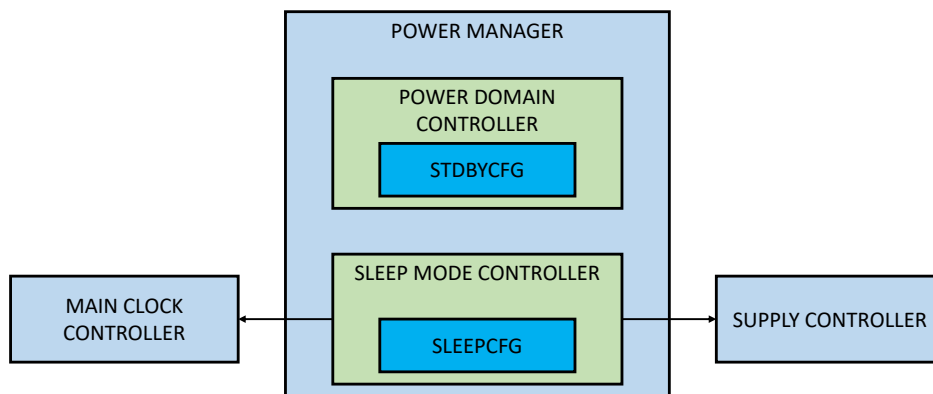

PM controls the following:

- Sleep modes: Idle, Standby, Hibernate, Backup and Off
- SleepWalking available in Standby mode
- I/O lines retention in Backup mode
- SRAM and Backup RAM Retention
- Fast Wake-Up for NVM and Main Regulator

2. Low-Power Application Overview

This application is accompanied by a Low-Power Application example. The goal of this application is to compare two different low-power implementations in terms of power consumption to demonstrate the benefits of the SleepWalking feature. Alternatively the following modes run in the application:


- Standby mode with Interrupts (`STDBY_IRQ_MODE`)
- Standby mode with Event System also known as SleepWalking (`STDBY_EVSYS_MODE`)
- Active mode (`ACTIVE_MODE`)

On power up, the application is in `STDBY_IRQ_MODE`. It is possible to switch from `STDBY_IRQ_MODE` to `STDBY_EVSYS_MODE` by pressing the switch button (SW0) embedded on the SAM E54 Xplained Pro board. The application wakes up from Sleep mode and enters into `ACTIVE_MODE` when the embedded light sensor on the I/O1 Xplained Pro Extension kit is covered.

To implement the above functionality, the application uses the ADC peripheral in Window Monitoring mode.

The following flowcharts illustrate the additional information on the application and its different modes:


Figure 2-1. Application Flowchart

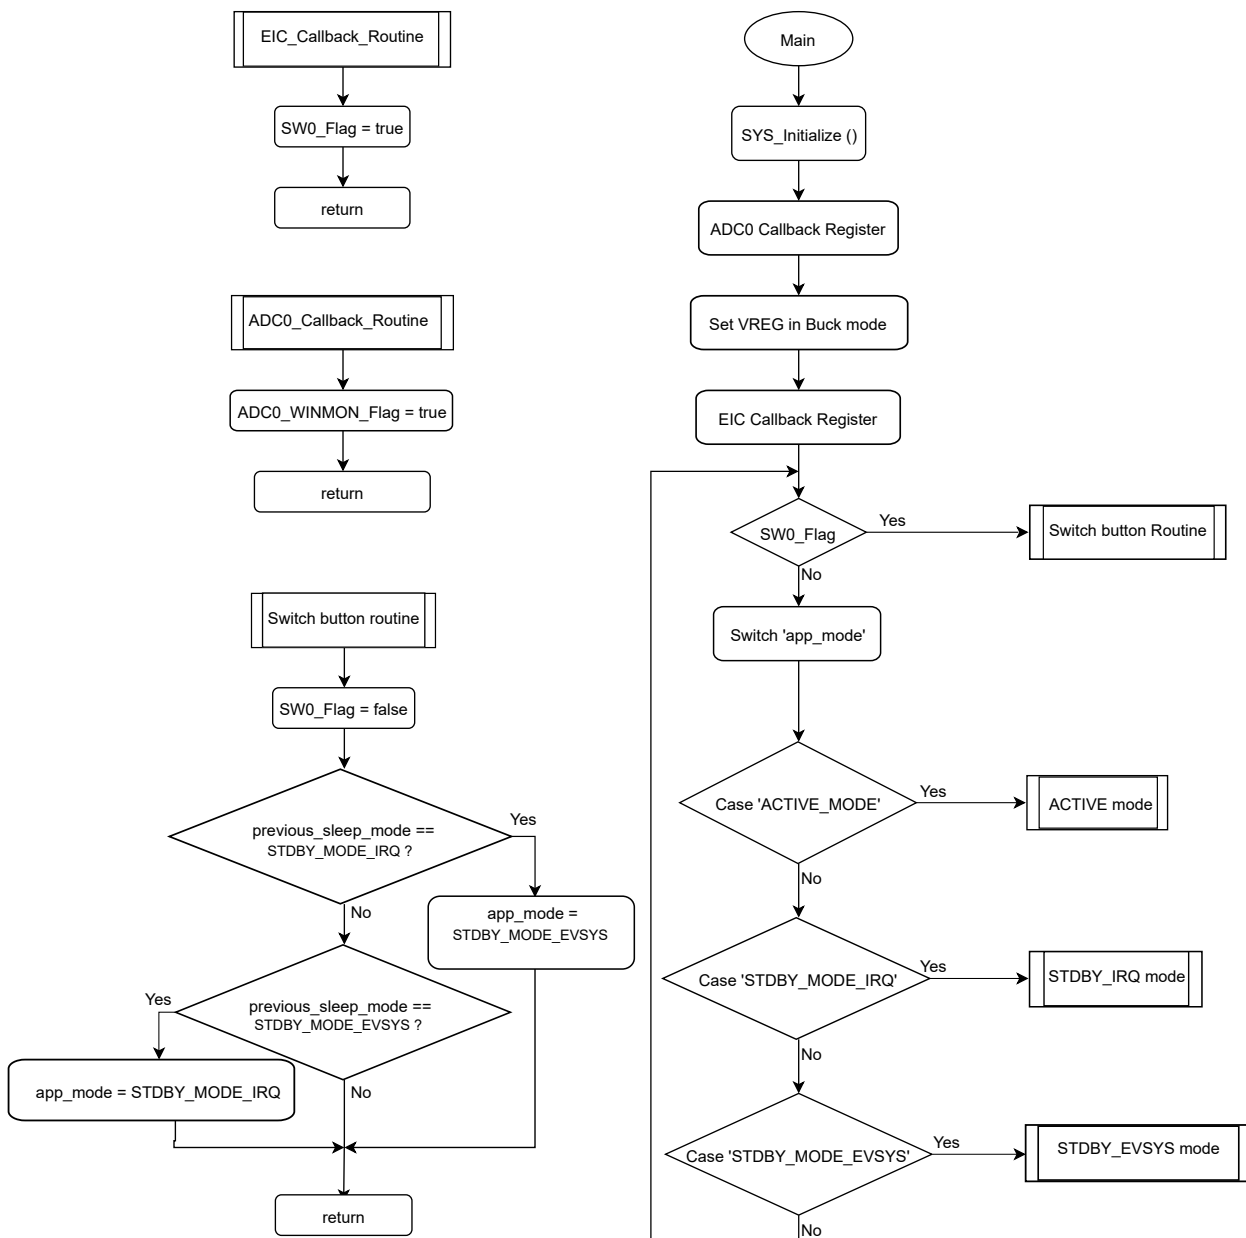

2.1 Active Mode

The application enters Active mode when an ADC Window Monitoring interrupt occurs. The application will be in the Active mode until the user presses the SW0 button to go into any one of the two sleep modes:

Figure 2-2. Active Mode Flowchart

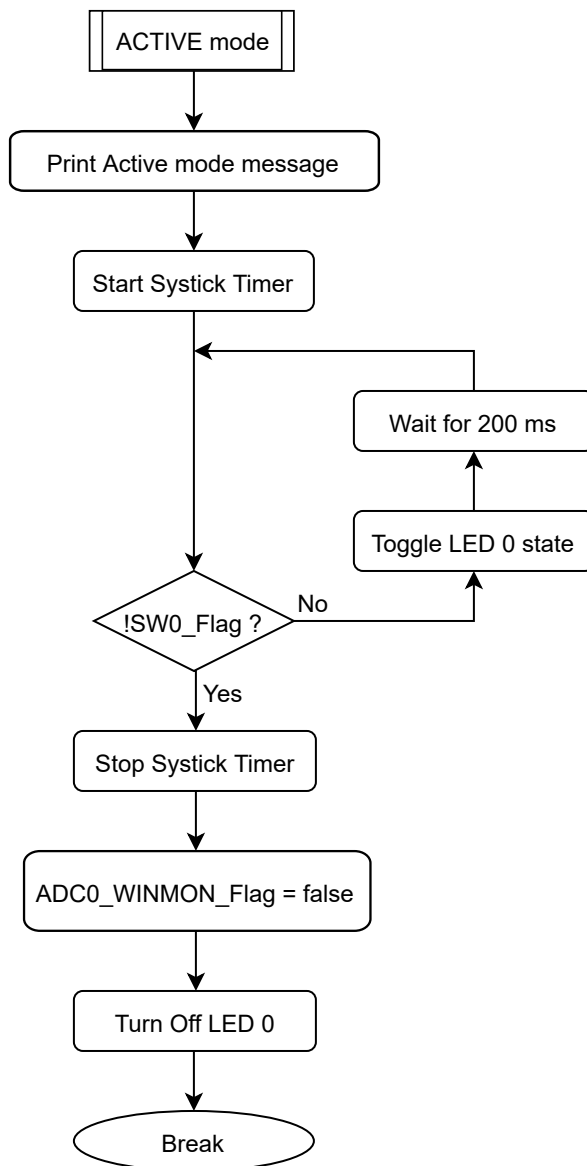


Note: The RTC and ADC peripherals are separately initialized in IRQ mode. The default initialization is using the RTC and ADC to generate events in `STDBY_MODE_EVSYS`. The customized initialization is used in `STDBY_MODE_IRQ`.

2.2 STDBY_IRQ Mode


After reset, the application enters `STDBY_IRQ` mode. In this mode, the CPU is woken up every 10 milliseconds using an RTC interrupt, to start the ADC conversion. The converted value is then compared with the ADC window condition. If the converted value matches the window condition, an ADC window match interrupt occurs, and the CPU enters into Active mode, printing a message on the serial terminal. If the converted ADC value does not match the ADC window condition, the CPU goes back to Sleep mode until the next RTC interrupt occurs. While the CPU is in Sleep mode, it is possible to switch to the other Sleep mode (`STDBY_MODE_EVSYS`) by pressing the SW0 button.

Figure 2-3. Standby Mode with IRQ Flowchart

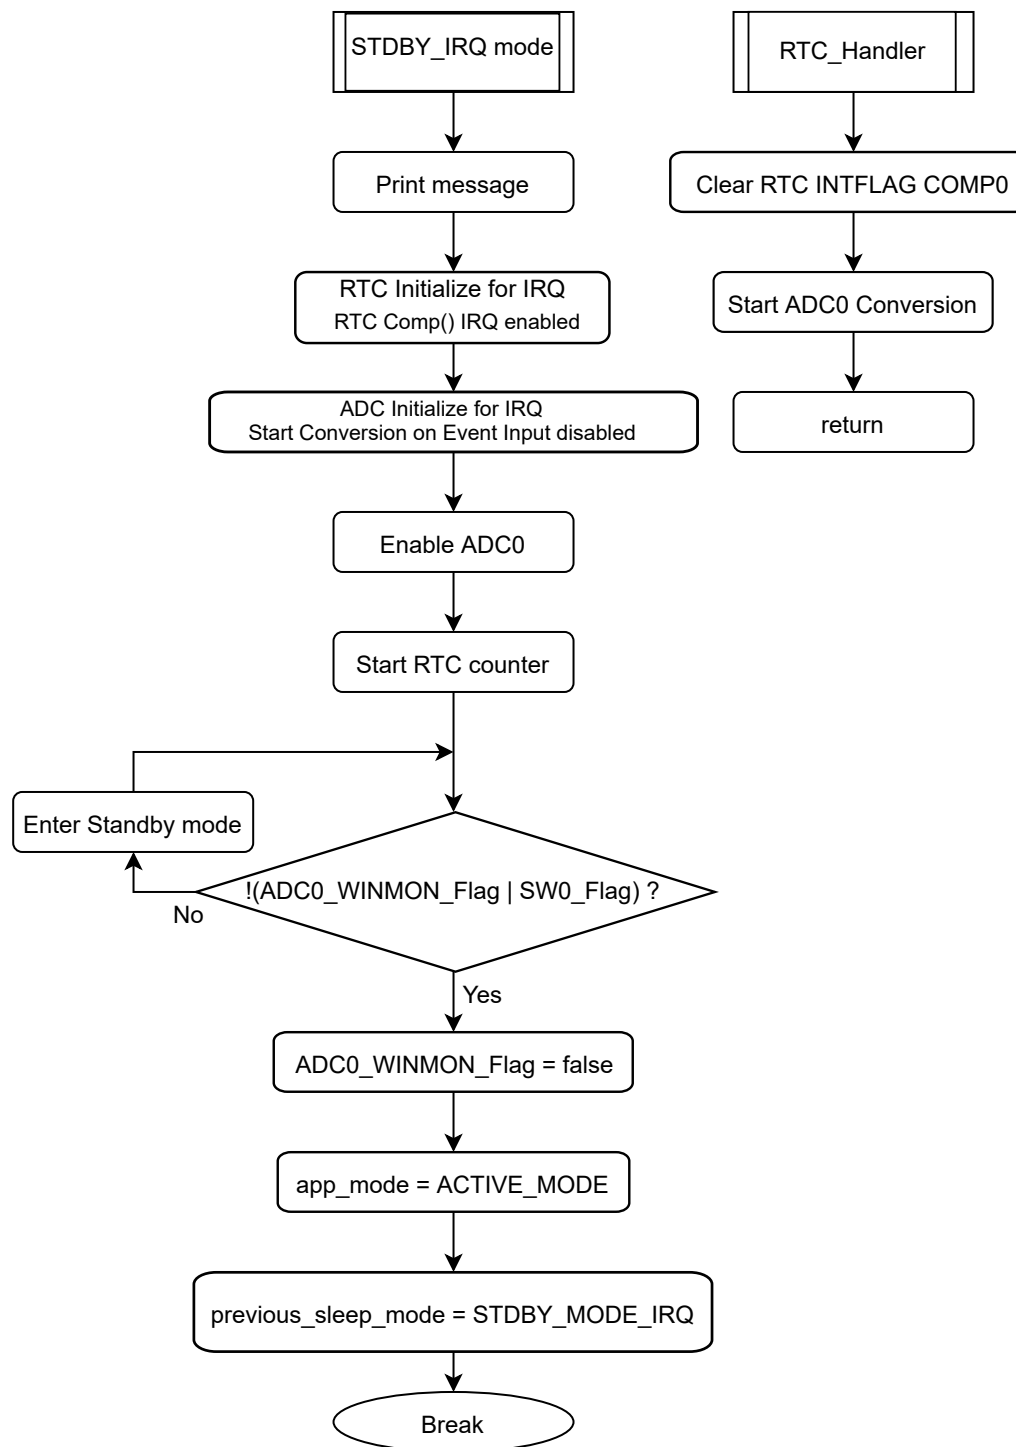

2.3 STDBY_EVSYS Mode

In this mode, Standby is used with the Event System to achieve SleepWalking. An RTC event occurs every 10 milliseconds that is transmitted from the RTC to the ADC through the Event System to launch an ADC conversion. With this method the CPU remains asleep, until an ADC Window Monitoring Interrupt or an External Interrupt by pressing the SW0 button is detected. In the first case, the CPU wakes up and enters into Active mode. The CPU enters `STDBY_IRQ_MODE` when the SW0 button is pressed.

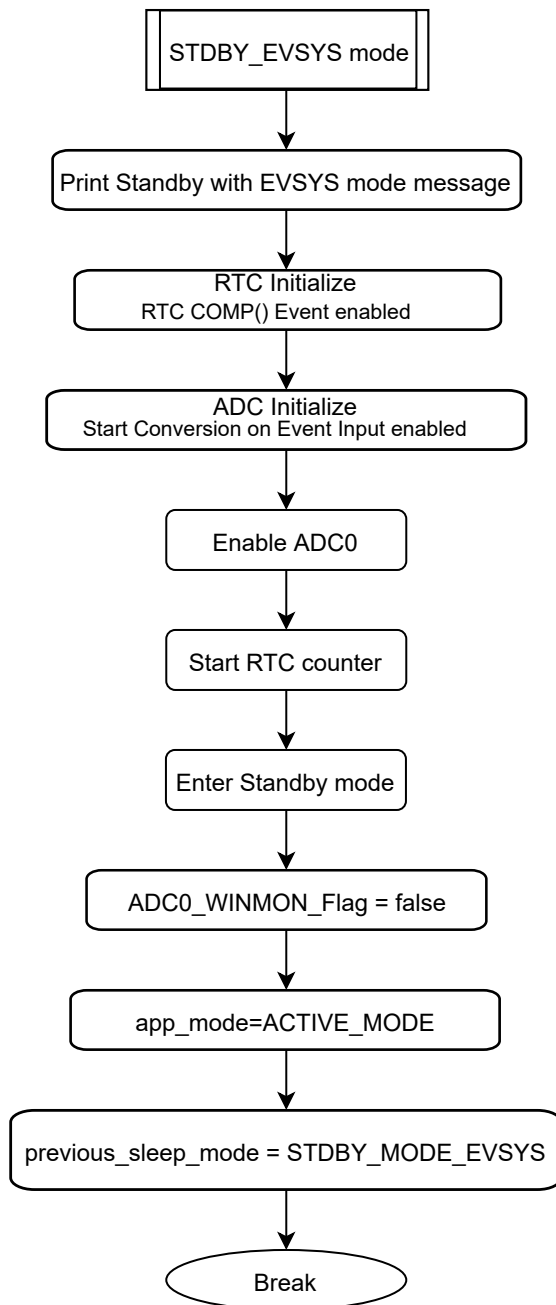Figure 2-4. Standby Mode with Event System (SleepWalking) Flowchart

3. Software and Hardware Requirements

The Low-Power Application demonstration requires the following software and hardware:

Software Requirements:

- MPLAB X IDE v6.20
- MPLAB XC32 Compiler v4.40
- MPLAB Code Configurator
 - csp v3.18.5
 - dev_packs v3.18.1
 - MCC Plugin v5.5.1
- Standalone Data Visualizer
- Tera Term or any other serial terminal

Hardware Requirements:

- 1 x Microchip SAM E54 Xplained Pro Evaluation kit (board rev. 5)
- 1 x I/O1 Xplained Pro Evaluation Kit (Board rev. 5)
- 1 x Micro USB cable (type-A or Micro-B)


3.1 Hardware Requirements

3.1.1 SAM E54 Xplained Pro Evaluation Kit

The Microchip SAM E54 Xplained Pro Evaluation Kit is a hardware platform used to evaluate the ATSAME54P20A microcontroller. Supported by the MPLAB X IDE platform, the evaluation kit provides an easy access to the features of the ATSAME54P20A and this document describes how to integrate the device in a custom design.

The Xplained Pro MCU series evaluation kits include an on-board embedded debugger, which overcomes the need of external tools to program or debug the on-board microcontroller. The Xplained Pro Extension Kits offer additional peripherals to extend the features of the board and ease the development of custom designs. The following figure illustrates the features of the SAM E54 Xplained Pro board.

Note: In this application, the power numbers are obtained using the SAM E54 Xplained Pro Evaluation Kit revision 5 board. This is attributed to the new application, where only first 32 KB of system RAM is retained in Standby Sleep mode, and backup RAM retention has been disabled in the MPLAB X IDE Backup Sleep Configuration.

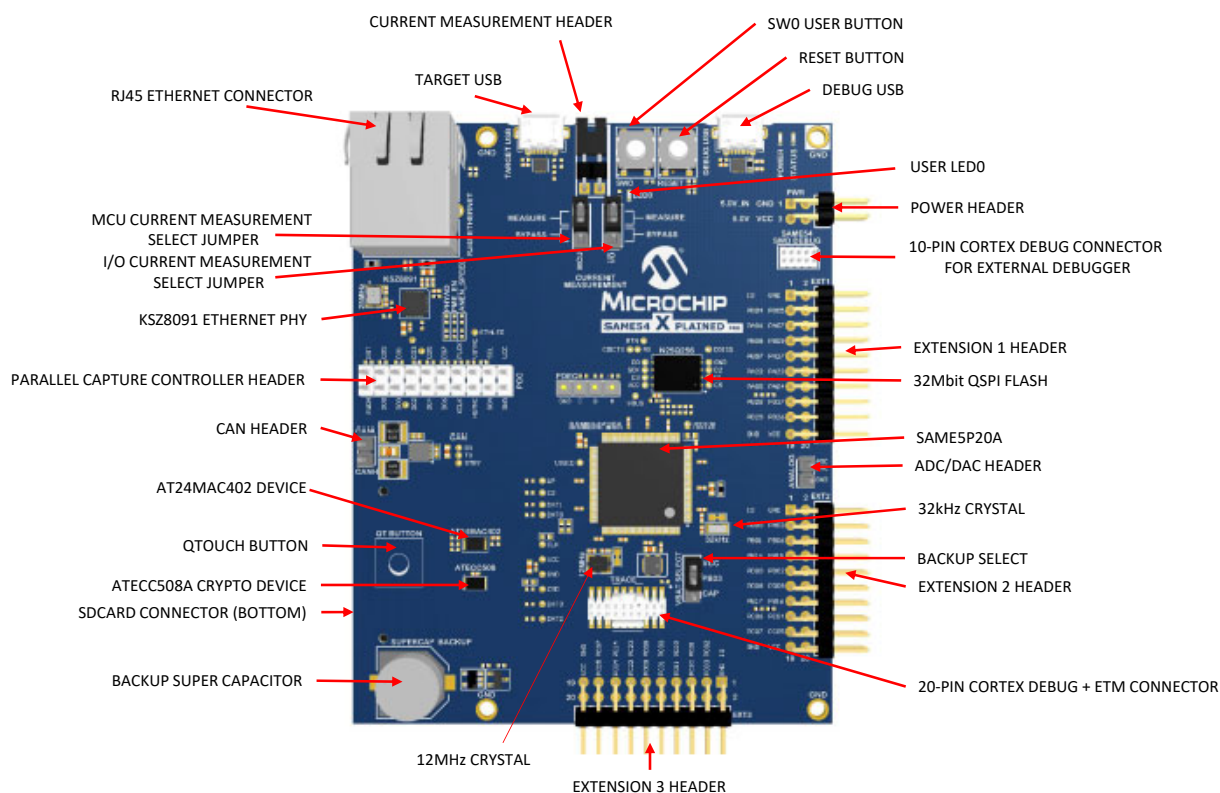
Figure 3-1. SAM E54 Xplained Pro Evaluation Kit

3.1.2 I/O1 Xplained Pro Extension Kit

The Microchip I/O1 Xplained Pro Extension Kit is a generic extension kit for the Xplained Pro platform. It connects to any Xplained Pro standard extension header on any Xplained Pro MCU board.

The extension kit uses the following functions on the standard Xplained Pro extension header to enhance the features of the Xplained Pro MCU boards:

- SPI
 - MicroSD card connector
 - 2 GB microSD card included
- PWM
 - LED control
 - PWM > Low pass filter > ADC
- ADC
 - PWM > Low pass filter > ADC
 - Light sensor
- UART
 - Loopback interface through pin header
- TWI
 - AT30TSE758 temperature sensor with EEPROM

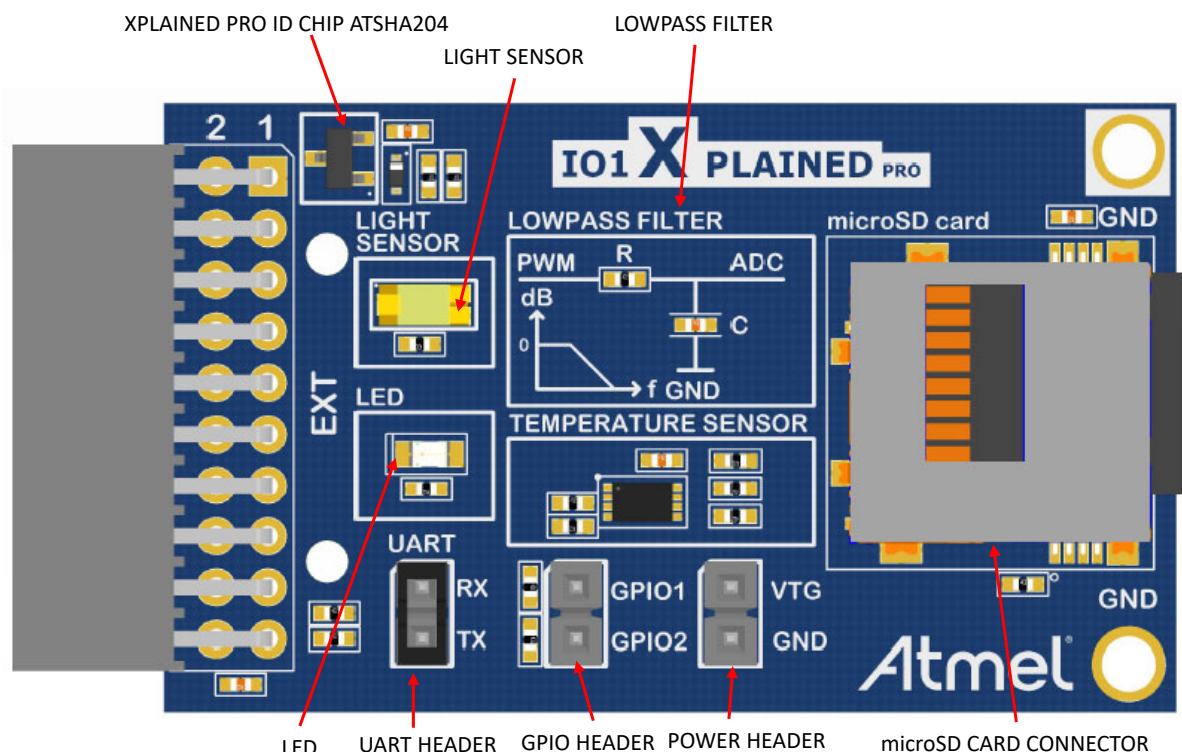Figure 3-2. I/O1 Xplained Pro Extension Kit

3.2 Software Requirements

3.2.1 MPLAB X Integrated Development Environment

Figure 3-3. MPLAB X IDE

MPLAB® X Integrated Development Environment (IDE) is an expandable, highly configurable software program that incorporates powerful tools to help you discover, configure, develop, debug and qualify embedded designs for most of the Microchip's microcontrollers and digital signals controllers. MPLAB X IDE works seamlessly with the MPLAB development ecosystem of software and tools. Users can download MPLAB X IDE from the Microchip's web site: www.microchip.com/en-us/tools-resources/develop/mplab-x-ide.

3.2.2 MPLAB Harmony

Figure 3-4. MPLAB Harmony




MPLAB® Harmony v3 is a fully integrated embedded software development framework that provides flexible and interoperable software modules that allow for dedicated resources to create applications for 32-bit PIC® and SAM devices, rather than dealing with device details, complex protocols and library integration challenges. It works seamlessly with MPLAB X IDE to enable a smooth transition and maximum code reuse between PIC32 MCUs, SAM MCUs, and MPUs.

It includes the MPLAB Code Configurator (MCC), an easy-to-use development tool with a Graphical User Interface (GUI) that simplifies device setup, library selection, configuration and application development. Refer to the following website for additional information on MPLAB Harmony: www.microchip.com/en-us/tools-resources/configure/mplab-harmony.

3.2.3 Data Visualizer

Figure 3-5. Data Visualizer

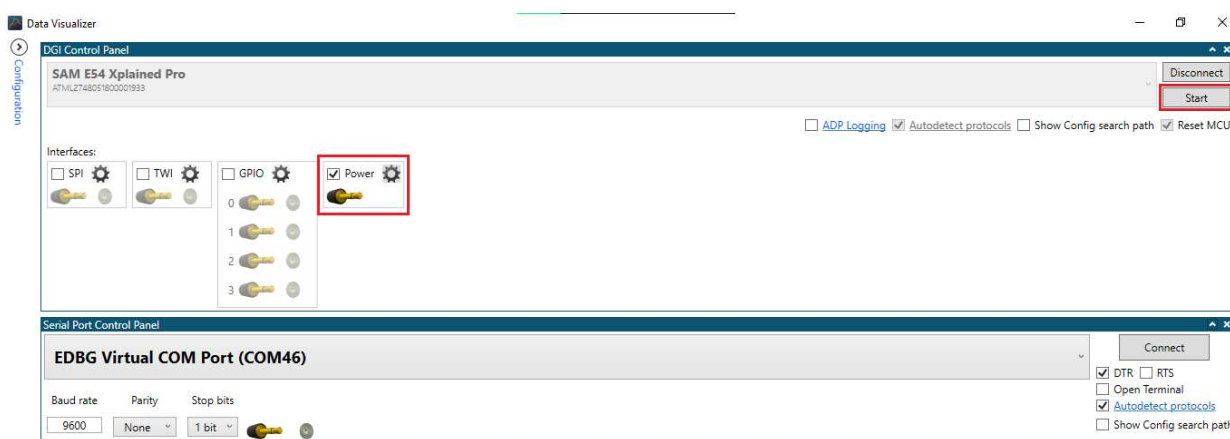


The Data Visualizer is a program to process and visualize data. The Data Visualizer can receive data from various sources, such as the Embedded Debugger Data Gateway Interface (EDBG DGI) and COM ports. It is possible to track an application in run-time using a terminal graph or oscilloscope. It analyzes the power consumption of an application through correlation of code execution and power consumption, when used together with a supported probe or board. For additional information on Data Visualizer, refer to the Microchip web site: www.microchip.com/en-us/tools-resources/debug/atmel-data-visualizer.

3.3 Example Configuration

3.3.1 Hardware Setup


Figure 3-6. SAM E54 Xplained Pro Hardware Setup

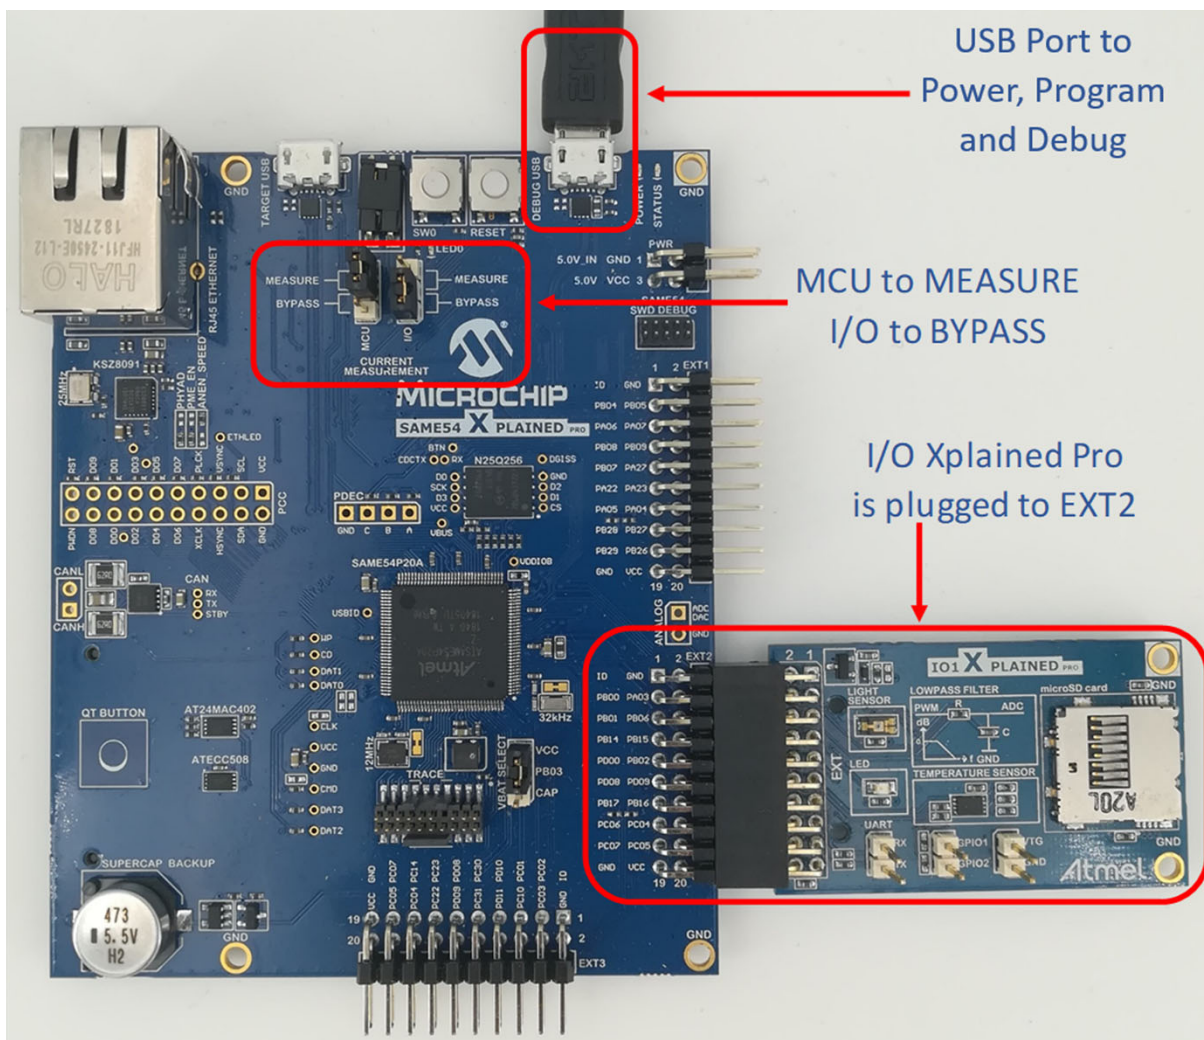

3.3.2 Software Setup

The following figure illustrates the peripherals used for this demonstration application:

Figure 3-7. Project Graph and Project Resources

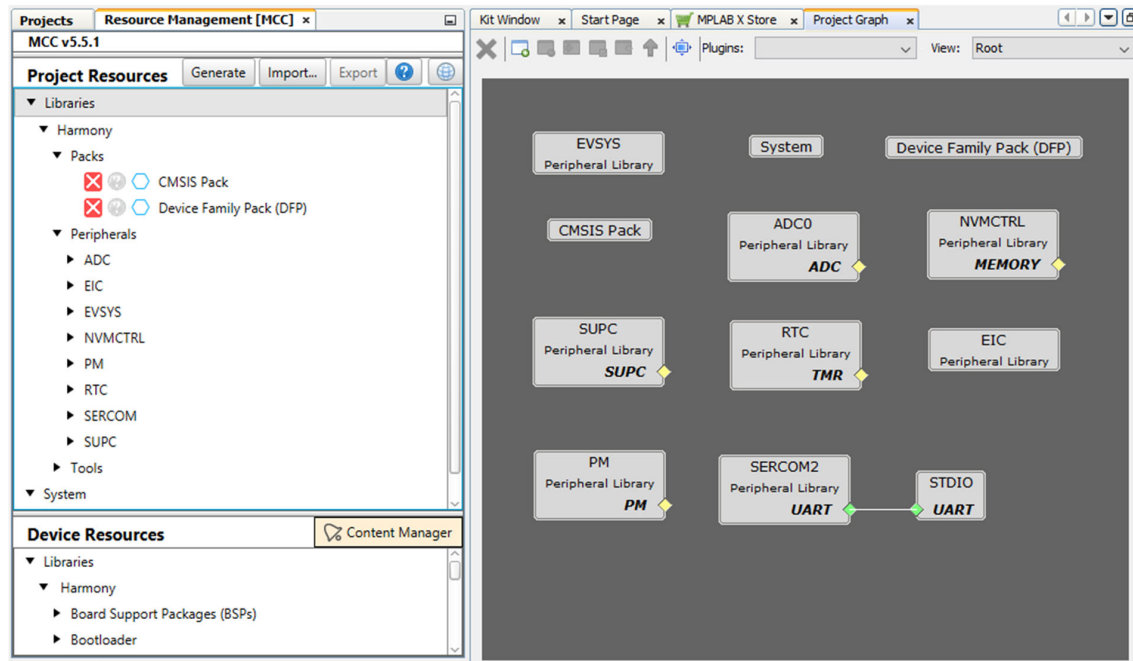

- The following peripherals are listed under Project Resources:
 - **ADC0**: Configured to start conversion upon an RTC interrupt or event depending on which mode the application is in. As both sleep modes are running simultaneously on the device, the ADC0 is configured for the Event System during initialization, but is reconfigured on-the-fly for the IRQ. The Window Monitoring feature is also enabled to generate an interrupt when the converted value is greater than a Window Low Threshold value.
 - **EIC**: Configured to generate an interrupt when the user button is pressed.
 - **RTC**: Generates an event or an interrupt every 10 milliseconds depending on which mode the application is in. Since both sleep modes are running simultaneously on the device, the RTC is configured for the Event System during initialization but is reconfigured on-the-fly for the IRQ.
 - **SERCOM2**: Configured to display application output information on a serial terminal.

3.3.2.1 Pin Configuration

In the MCC user interface, follow these steps to access the Pin Configuration window:

1. Click on the **Project Graph** tab.
2. From the Plugins drop-down item list, select **Pin Configuration**.

Figure 3-8. Pin Configuration

Start Page

Kit Window

MPLAB X Store

Project Graph

Pin Diagram

Pin Table

Pin Settings

Order: Pins

Table View

Easy View

Pin Number	Pin ID	Custom Name	Function	Mode	Direction	Latch	Pull Up	Pull Down	Drive Strength
72	PC18	LED0	GPIO	Digital	Out	High	☐	☐	NORMAL
75	PC21	ETH_RESET	GPIO	Digital	Out	Low	☐	☐	NORMAL
100	PB24		SERCOM2_PAD1	Digital	High Impedance	n/a	☐	☐	NORMAL
101	PB25		SERCOM2_PAD0	Digital	High Impedance	n/a	☐	☐	NORMAL
122	PB31	SW0	EIC_EXTINT15	Digital	Out	n/a	☐	☐	NORMAL
125	PB00	ADC0_AIN12	ADC0_AIN12/X30/Y30	Analog	High Impedance	n/a	☐	☐	NORMAL

The pins are configured as follows:

- The PC18 pin is assigned to the user LED as an output high.
- The PC21 pin is set to output low to reset the on-board Ethernet PHY KSZ8091 for power consumption considerations.
- The PB24 pin is assigned to the SERCOM2 input for data reception from the terminal.
- The PB25 pin is assigned to the SERCOM2 output for data transmission to the terminal.
- The PB31 pin is assigned to the user button.
- The PB00 pin is assigned to the ADC0 Channel 12 input for data conversion.

Note: For additional information, refer to the [SAM E54 Xplained Pro User's Guide \(DS70005321\)](#).


3.3.2.2 ADC0 Configuration

ADC0 is configured to convert incoming values from the embedded light sensor of the I/O1 Xplained Pro.

Follow these steps to perform the ADC0 configuration:

1. In the Project Graph view, in the left pane, click **ADC0 Peripheral Library ADC**.
2. In the right pane, the Configuration Options property page will display the ADC0 configuration.

Figure 3-9. ADC0 Configuration

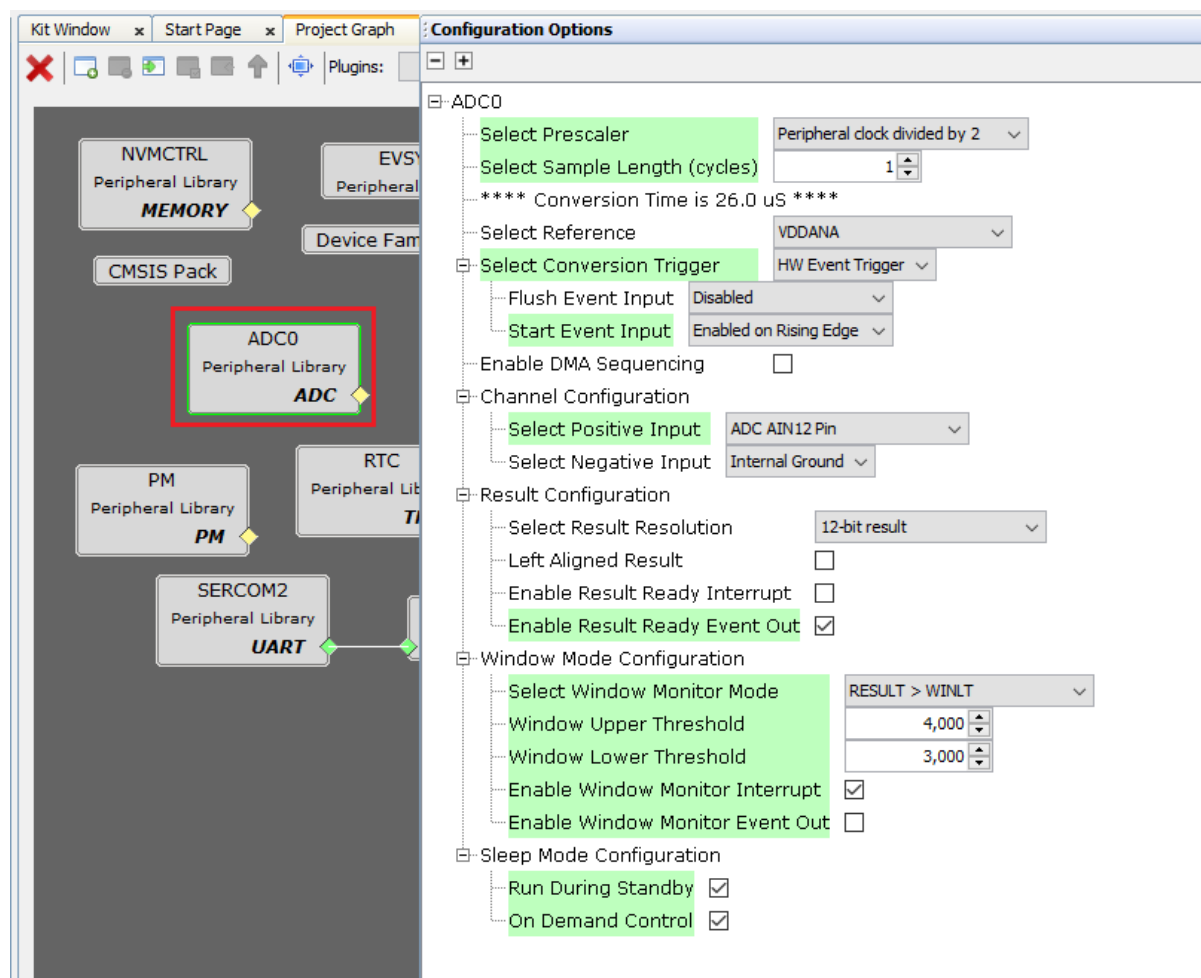

To have both modes running simultaneously on the same application, ADC0 is initialized by modifying its registers on-the-fly at each mode start. The ADC Start Conversion in the Event Input is then disabled while running in Standby mode with IRQ, and is enabled when running in Standby mode with the Event System.


3.3.2.3 RTC Configuration

The Real Time Controller (RTC) is configured to generate an event every 10 milliseconds. The following figure shows the peripheral configuration through the Configuration Options view.

Follow these steps to perform the RTC Configuration:

1. In the Project Graph view, in the left pane, click **RTC Peripheral Library TMR**.
2. In the right pane, the Configuration Options property page will display the RTC configuration.

Figure 3-10. RTC Configuration

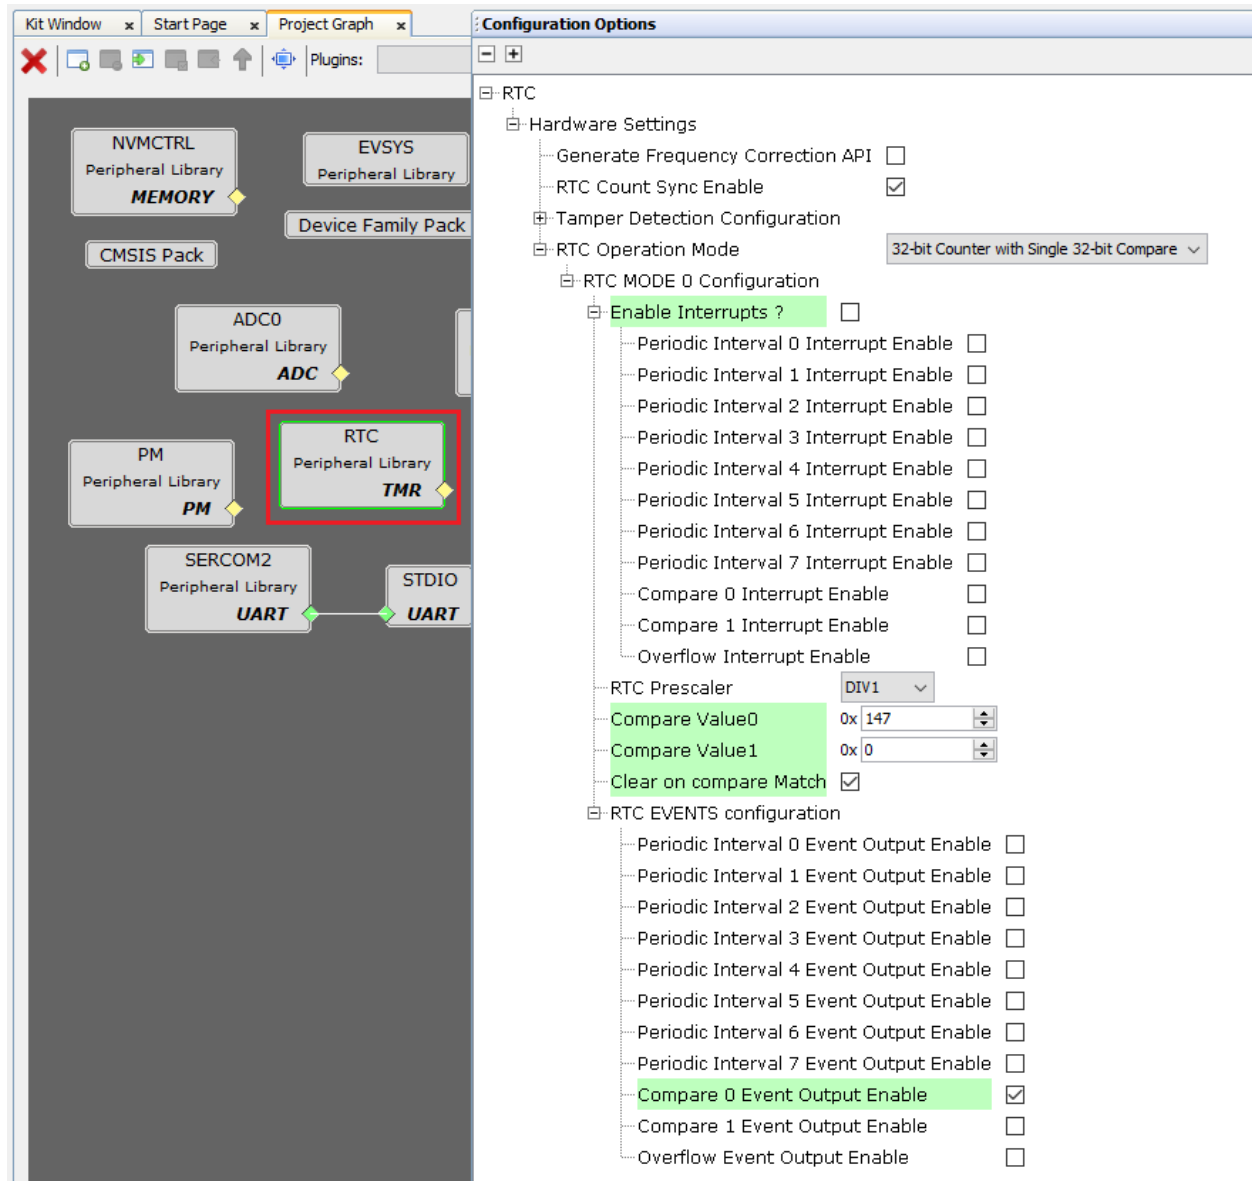

To have both sleep modes running on the same application, the RTC is initialized by modifying its registers on-the-fly at each mode start. The interrupt on the RTC Compare '0' is enabled when running in Standby mode with the IRQ, and is disabled while running in Standby with the Event System.


3.3.2.4 EIC Configuration

To enable interrupts on the embedded user button, the EIC is configured.

Follow these steps to perform the EIC configuration:

1. In the Project Graph view, in the left pane, click **EIC Peripheral Library**.
2. In the right pane, the Configuration Options property page will display the EIC configuration details.

Figure 3-11. EIC Configuration

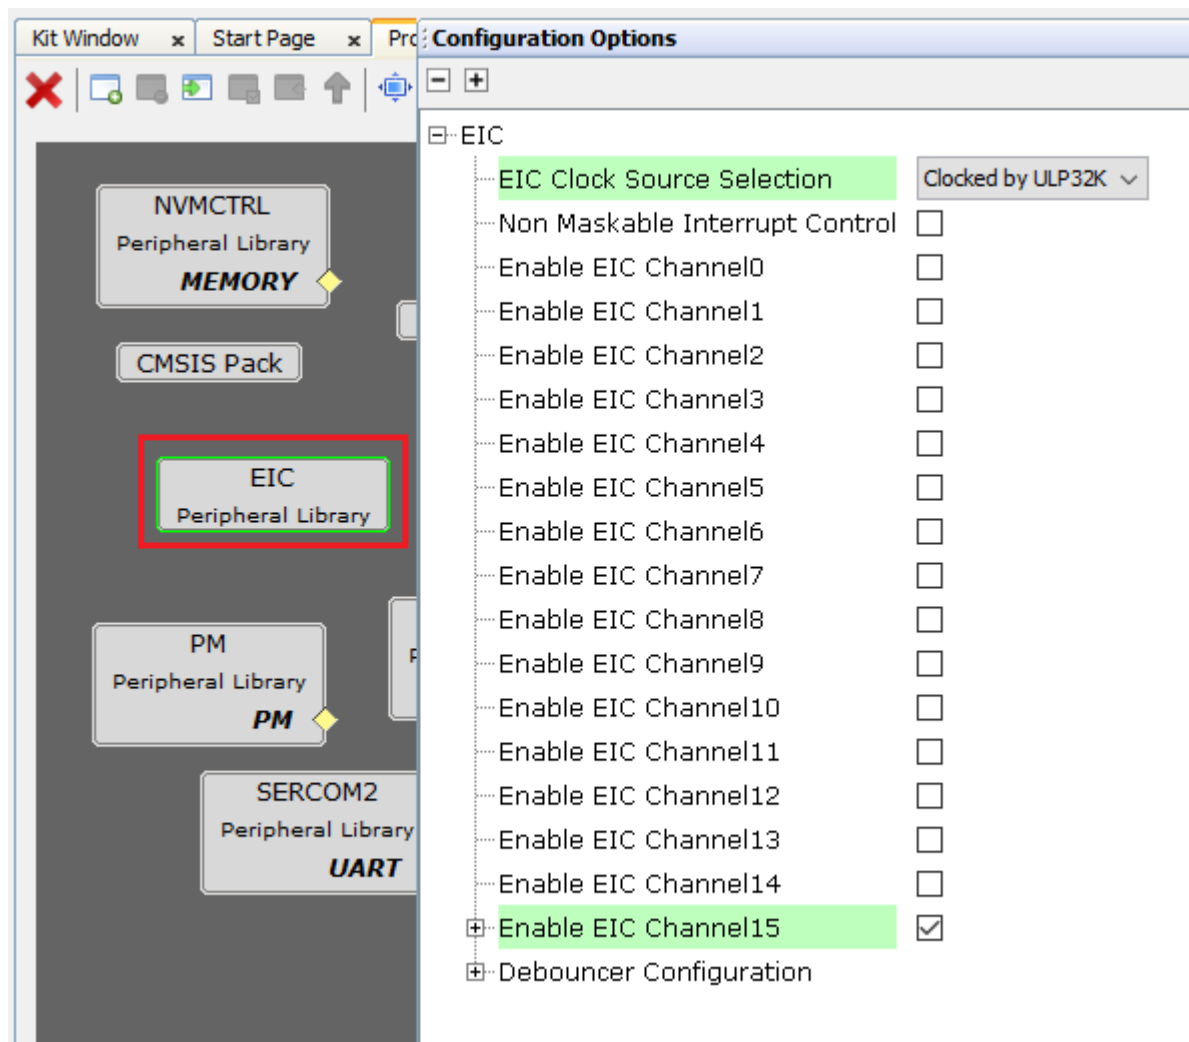


3.3.2.5 SERCOM2 Configuration

To allow SERCOM2 display information on a terminal, the peripheral is set as SERCOM USART. The STDIO library is plugged to the SERCOM2 USART to redirect output of standard I/O stream functions to the serial terminal. The peripheral configuration is available in the Configuration Options.

Follow these steps to perform the SERCOM2 Configuration:

1. In the Project Graph view, in the left pane, click **SERCOM2 Peripheral Library UART**.
2. In the right pane, the Configuration Options property page will display the SERCOM2 configuration details.


Figure 3-12. SERCOM2 Configuration

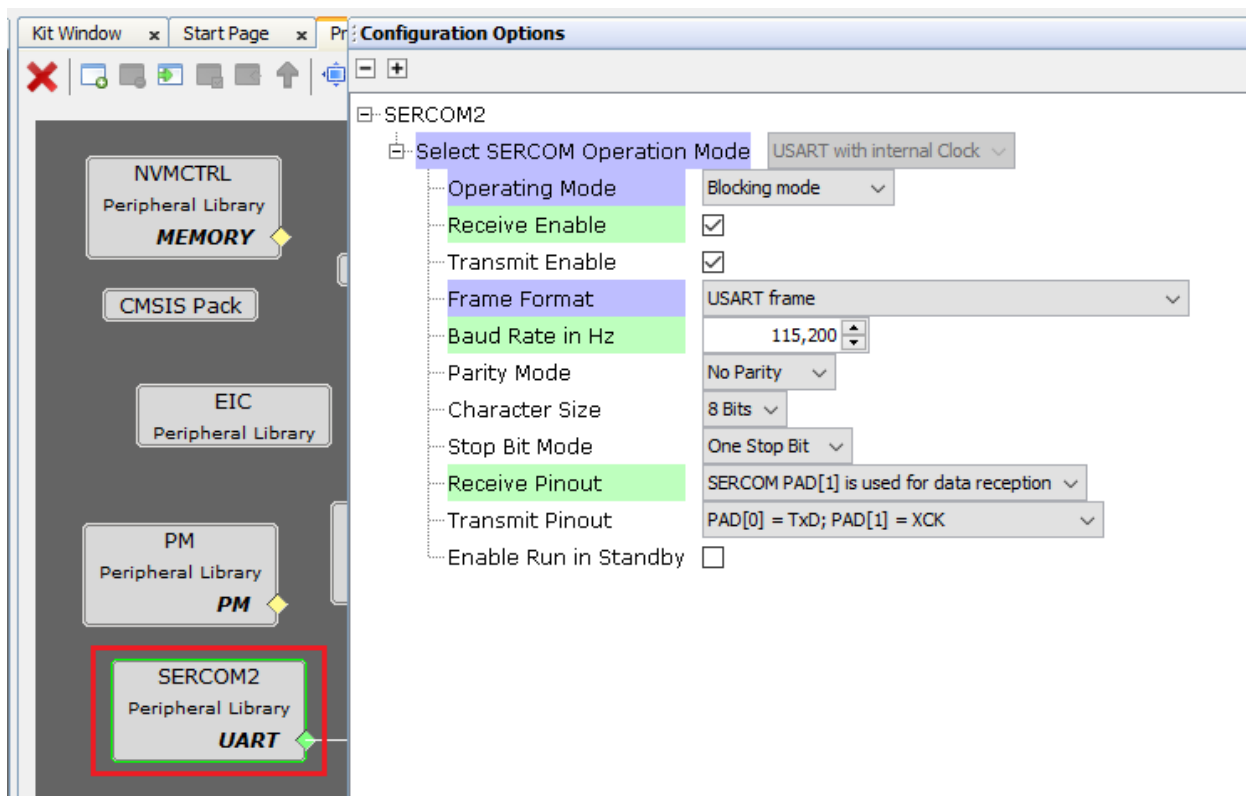

3.3.2.6 Clock Configuration

MPLAB Harmony v3 provides a graphical interface to configure the clocks. The following figure illustrates the Peripheral Clock Configuration.

Figure 3-13. Clock Diagram

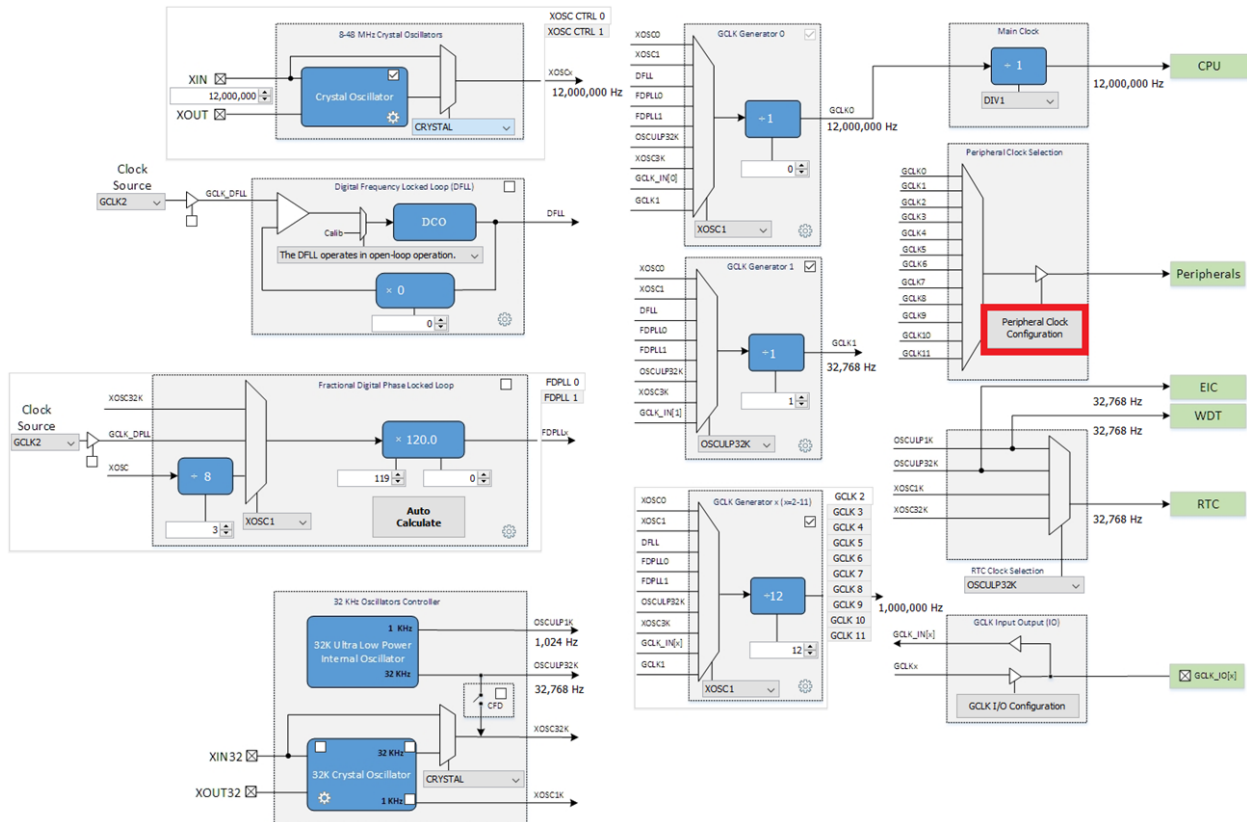

- The XOSC1 is configured to run at 12 MHz and feeds the Generic Clock Generator 0 (GCLK0) and Generic Clock Generator 2 (GCLK2). The GCLK0 runs at 12 MHz and the GCLK2 runs at 1 MHz.
- The OSCULP32K is configured to provide a 32 kHz source clock to the Generic Clock Generator 1 (GCLK1).
- The Generic Clock Controller (GCLK) is used to route oscillators to the peripherals. The GCLK0 provides a 12 MHz source clock to the CPU. The GCLK1 is used to clock the Event System and SERCOM2 slow clocks. The GCLK2 clocks the ADC0, EIC, and SERCOM2 main clock.

Note: Users can set the source clock for peripherals by clicking on the *Peripheral Clock Configuration* block highlighted in the figure above.


3.3.2.7 Event System (EVSYS) Configuration

The EVSYS can be configured using MPLAB Harmony v3. In this application, event generation on compare is enabled for the RTC. The ADC0 is configured to start the conversion on incoming events from the RTC.

Follow these steps for EVSYS configuration:

1. In the Project Graph view, in the left pane, click **EVSYS Peripheral Library**.
2. In the Configuration Options property page, click and expand the **EVSYS** to display the EVSYS Module Settings.

Figure 3-14. EVSYS Configuration

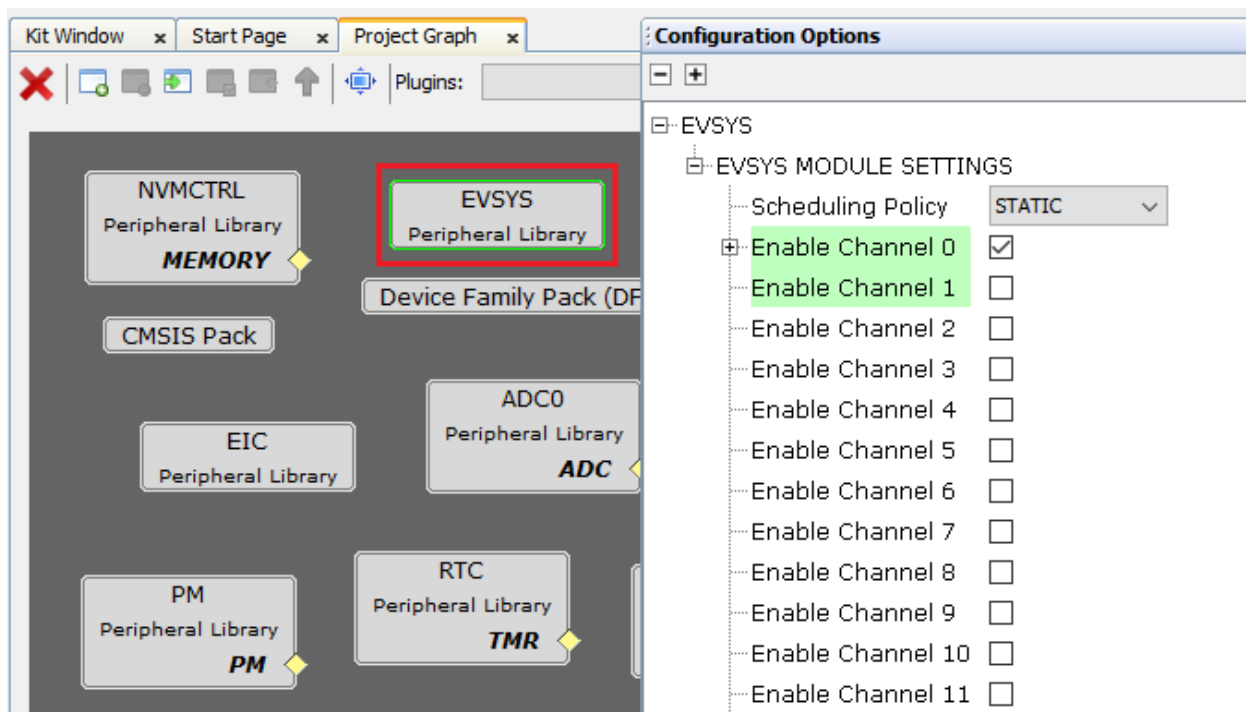

3.4 Running the Demonstration Application and Configuring the Environment

The following sections describe:

- Loading, compiling, and running the application
- Configuring the Serial Terminal
- Configuring the Data Visualizer


3.4.1 Loading, Compiling, and Running the Application

Ensure that MPLAB X IDE and MPLAB Harmony v3 are installed before loading and compiling the application project.


To load and compile the application project, follow these steps:

1. Launch MPLAB X IDE.
2. To open the project file, from the MPLAB X IDE toolbar select *File > Open Project*.


Figure 3-15. MPLAB X IDE - Open Project Folder

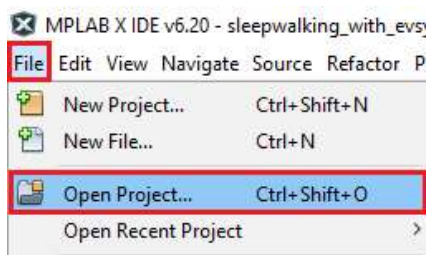

3. In the **Open Project** window, browse and select the application project file, `sam_e54_xpro.X`.

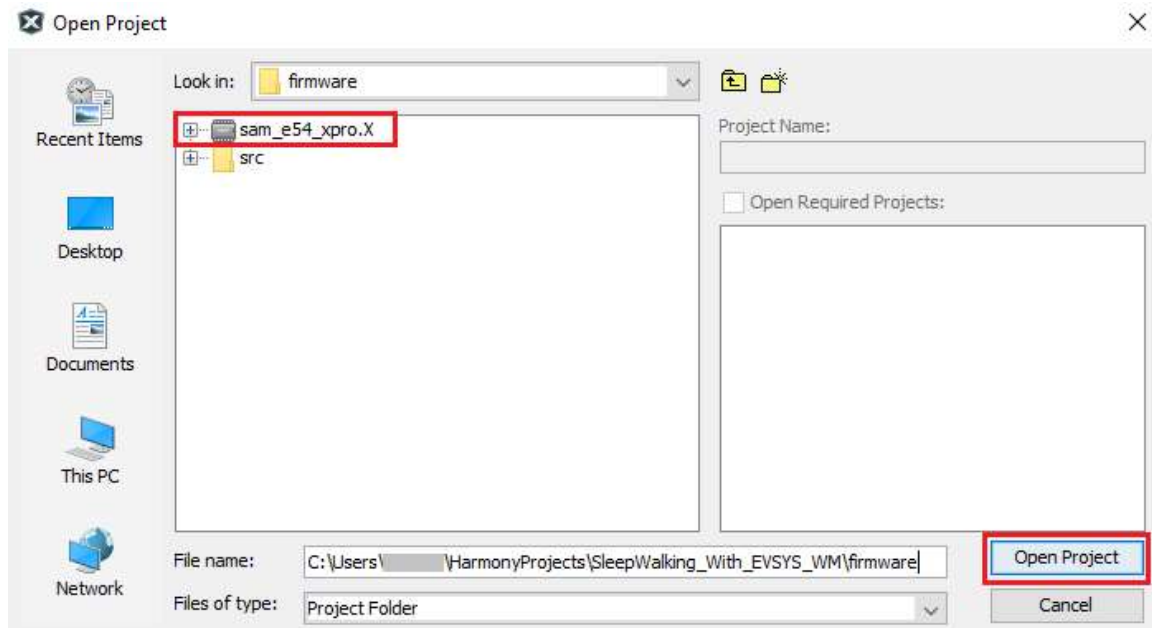
Figure 3-16. MPLAB X IDE - Open Project File

4. Click **Open Project**, the project window will display the project architecture.

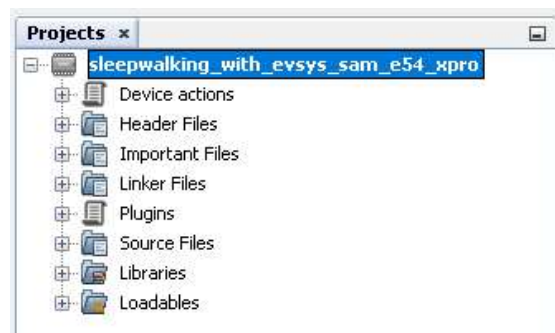Figure 3-17. MPLAB X IDE - Project Architecture


5. Select the connected board EDBG hardware tool, and then perform these actions:
 - a. To open project properties, click **Projects**.
 - b. Right-click on the project name `sleepwalking_with_evsys_sam_e54_xpro`.
 - c. In the right pane, select **Set Configuration**, and then click **Customize**.

Figure 3-18. MPLAB X IDE - Open Project Properties

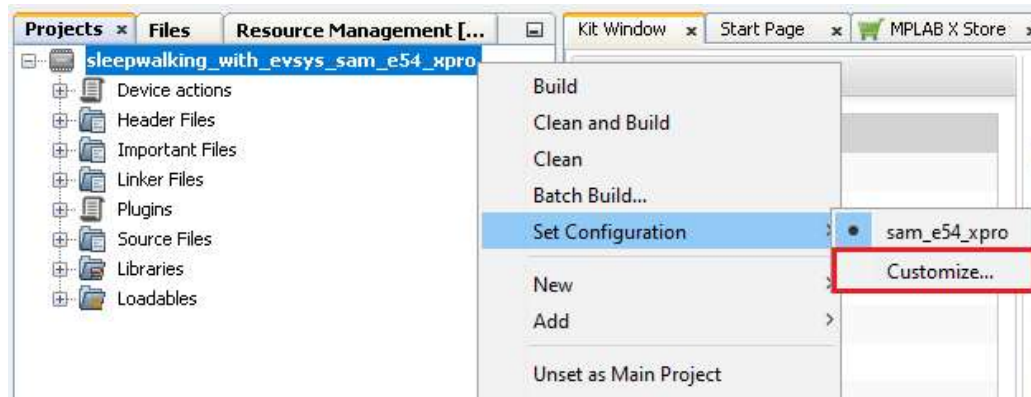


- d. In the **Project Properties** window, under the **Configuration** section, select applicable **Connected Hardware Tool** and **Compiler Toolchain** as shown below.


Figure 3-19. MPLAB X IDE - Project Properties Window

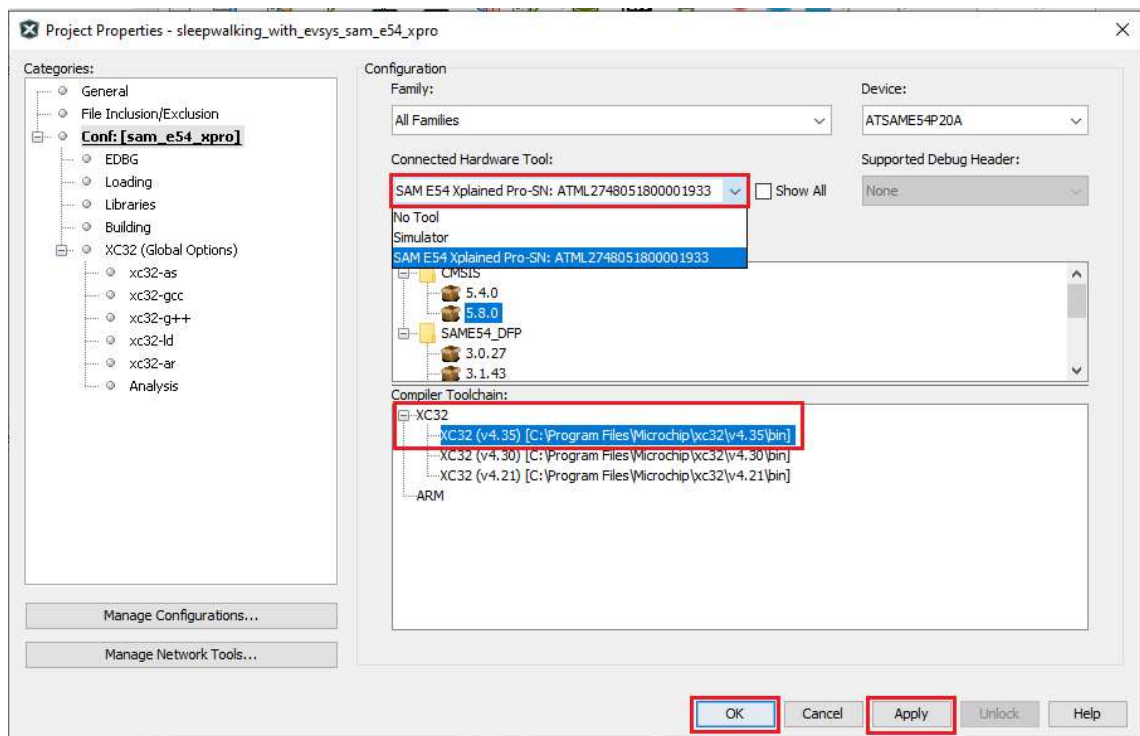

- e. Click **Apply**, and then click **OK**.
6. To build the project, click on the *Clean and Build* icon or select **Clean and Build Main Project** from the drop-down item list.

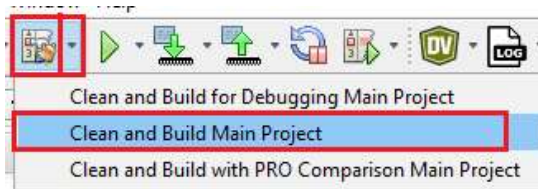Figure 3-20. Clean and Build the Project


7. The application software will be flashed to the target device. From the MPLAB X IDE toolbar, click on the *Make and Program Device* icon or select **Make and Program Device Main Project** from the drop-down item list.

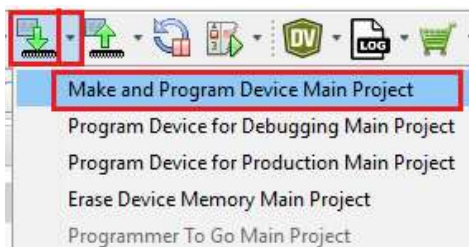Figure 3-21. Make and Program the Device Main Project


3.4.2 Configuring Tera Term

To configure the Tera Term tool, follow these steps:


1. Open the Tera Term tool or any equivalent tool.
2. In the **Tera Term: New Connection** dialogue box, select the Serial Port number allocated to the connected SAM E54 Xplained Pro board, and then click **OK**.

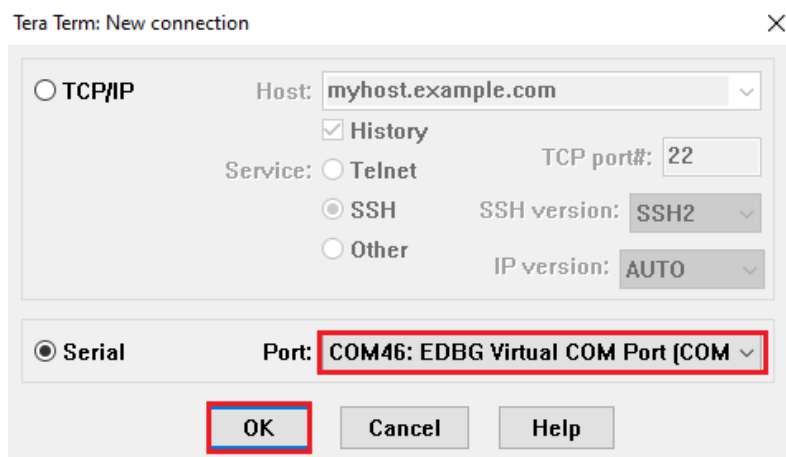Figure 3-22. Tera Term - New Connection Window


3. To open the Serial Port Configuration of Tera Term, from the toolbar select *Setup > Serial port*.

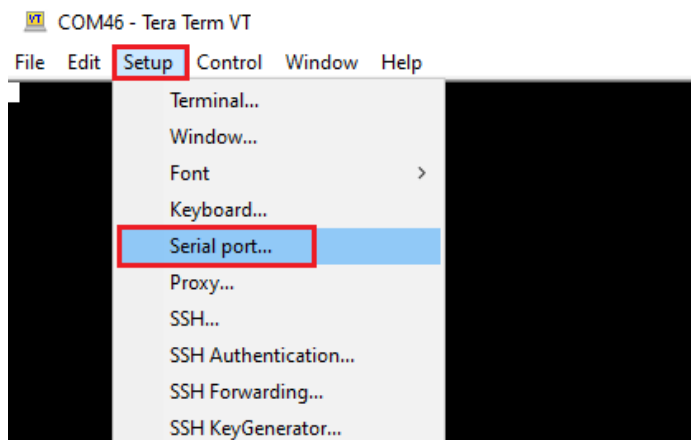Figure 3-23. Tera Term - Setup

4. Configure the Tera Term Serial Port interface: enter baudrate as 115200.
5. Click **New Setting**.

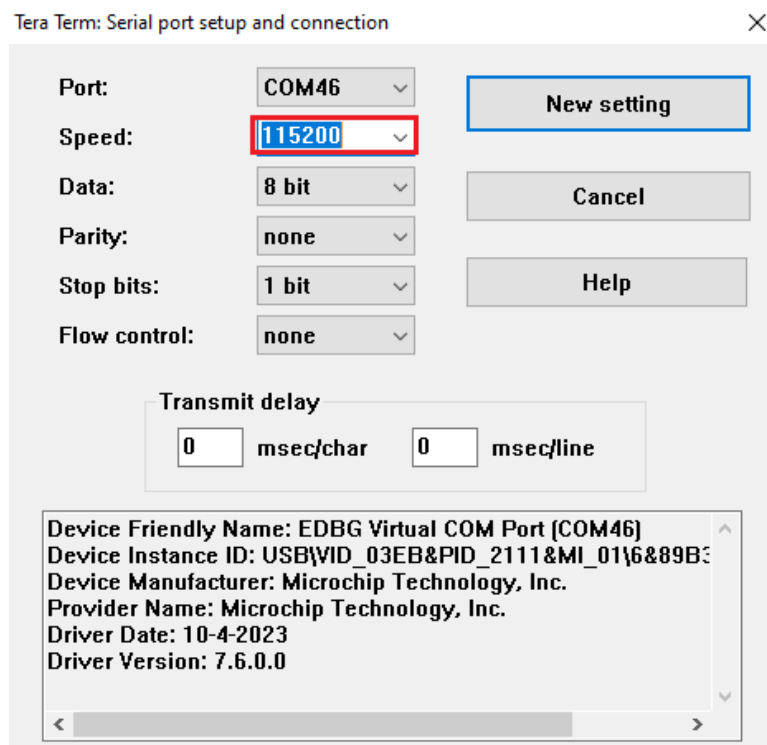Figure 3-24. Tera Term - Serial Port Setup


6. To reset the board, press the **Reset** button on the board. The application will display the following message on the Serial Terminal.

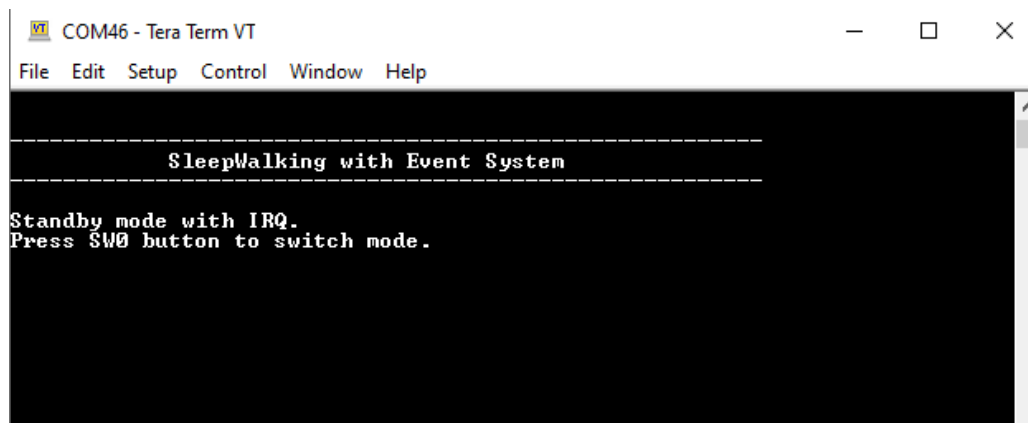Figure 3-25. Tera Term - Application Message Displayed


3.4.3 Configuring the Data Visualizer

The following process is used to configure the Data Visualizer for power consumption measurement:


1. Open the standalone Data Visualizer tool.
2. In the Data Visualizer window, select **SAM E54 Xplained Pro**, and then click **Connect**.

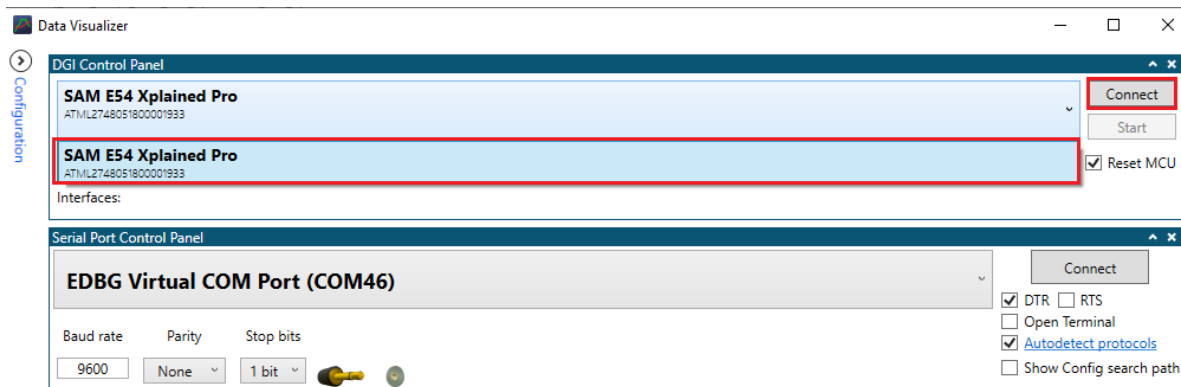Figure 3-26. Data Visualizer - DGI Control Panel

3. Once the protocols are displayed, select **Power** and then click **Start**.

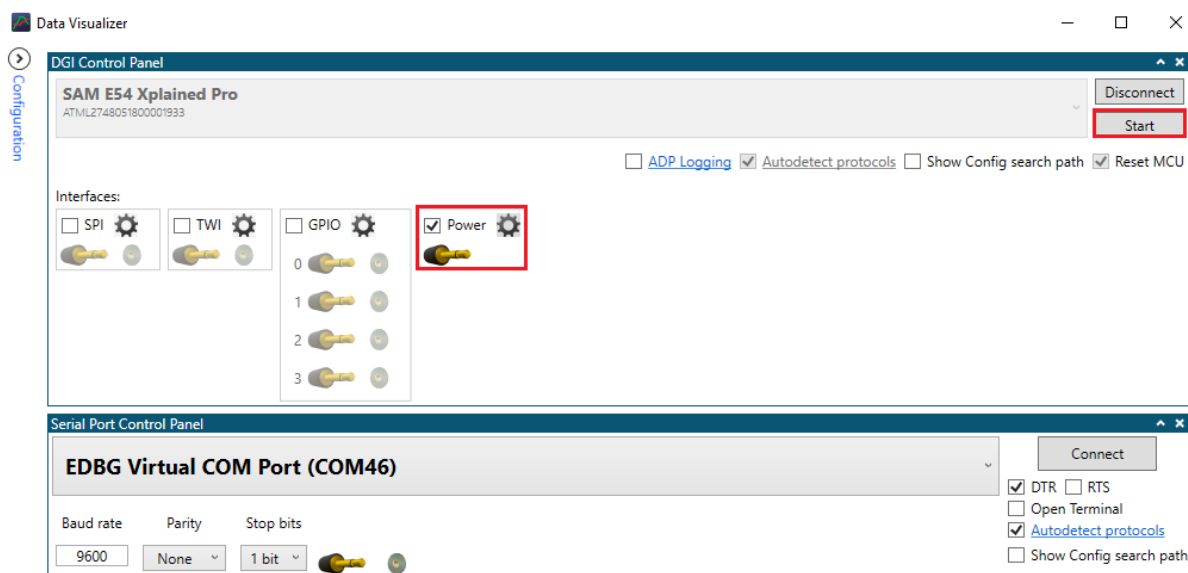Figure 3-27. Data Visualizer - Power Protocol

4. The Data Visualizer will display the power consumption details in the **Power Analysis** window.

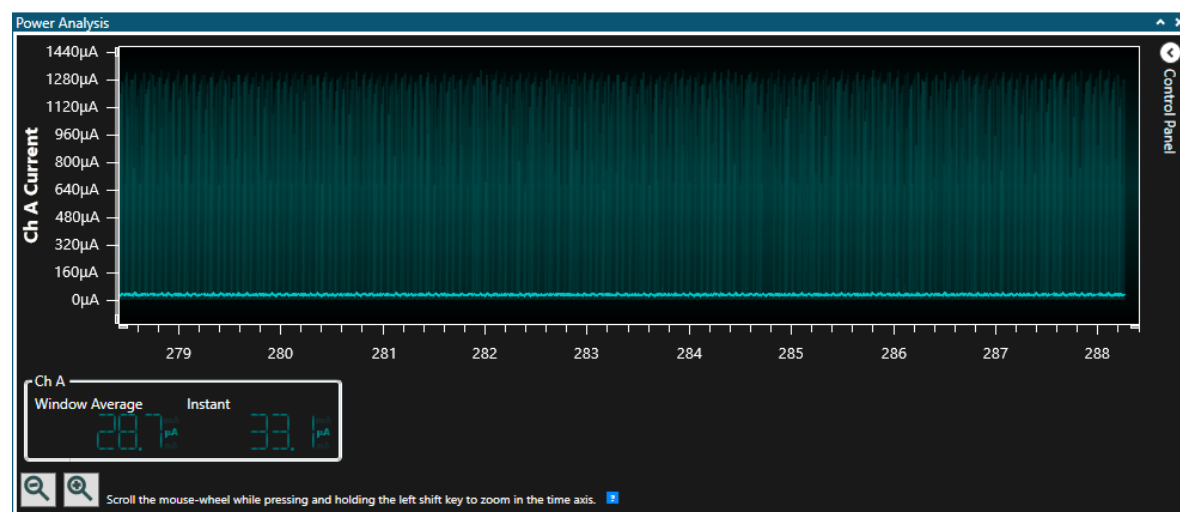Figure 3-28. Data Visualizer - Power Analysis

4. Results and Interpretation

4.1 Power Consumption


When the application is running, the dynamic current consumption of the application can be measured with the Data Visualizer standalone tool.

Note: The average value will be considered when comparing power consumption between different sleep modes, because the instant current is measured at any time and does not illustrate stable power consumption values.

4.1.1 Standby Mode with IRQ

When the application starts, the device will run on Standby with IRQ mode. The following figure shows the power consumption of the device when the CPU is woken up every 10 milliseconds by an RTC Compare '0' interrupt to start an ADC conversion:

Figure 4-1. Power Consumption in Standby with IRQ

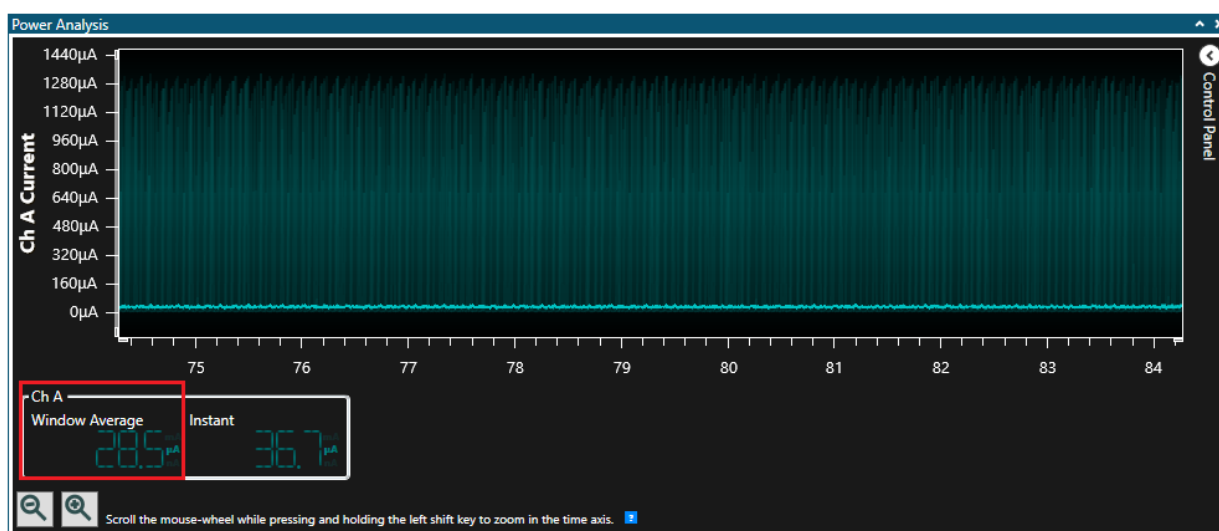

The Data Visualizer displays a 28.5 μA average for power consumption while running in `STDBY_IRQ_MODE`. By comparing this value with the minimal possible power consumption documented in the product data sheet, it is noted that the value during Sleep mode is higher than expected as shown in the table below:

Figure 4-2. Power Consumption Expectations

Mode	Conditions	Regulator Mode	V _{DD}	T _A	Typ.	Max.	Units
STANDBY	fast wake-up disabled (PM.STDBYCFG.FASTWKUP=0x0), RTC running on XOSC32K	LDO	1.8V		53	3997	μA
			3.3V		53	4003	
	Full System RAM retained (PM.STDBYCFG.RAMCFG=0x0), 8KB backup RAM retained	BUCK	1.8V		32	2668	
			3.3V		22	1903	

This difference in power consumption values is due to the following reasons:


- Clock configuration is different. All GCLK are off during Standby mode as provided in the data sheet example configuration, while some peripherals request the GCLK 2 that is connected to the XOSC1 which runs at 1 MHz in the low-power application.

- Only RTC is running during the measurement of the values as provided in the data sheet; however, peripherals, such as RTC, ADC, and EIC run in Standby mode in this application.
- In the application under consideration, the CPU is woken up every 10 milliseconds which increases power consumption.

4.1.2 SleepWalking (Standby with Event System)

Using the SW0 push button, users can change the application mode from Standby mode with IRQ to SleepWalking. In this mode the CPU is woken up only when an ADC window monitoring interrupt occurs. The following figure shows the power consumption of the device when running in Standby with the Event System:

Figure 4-3. Power Consumption in Standby with Event System

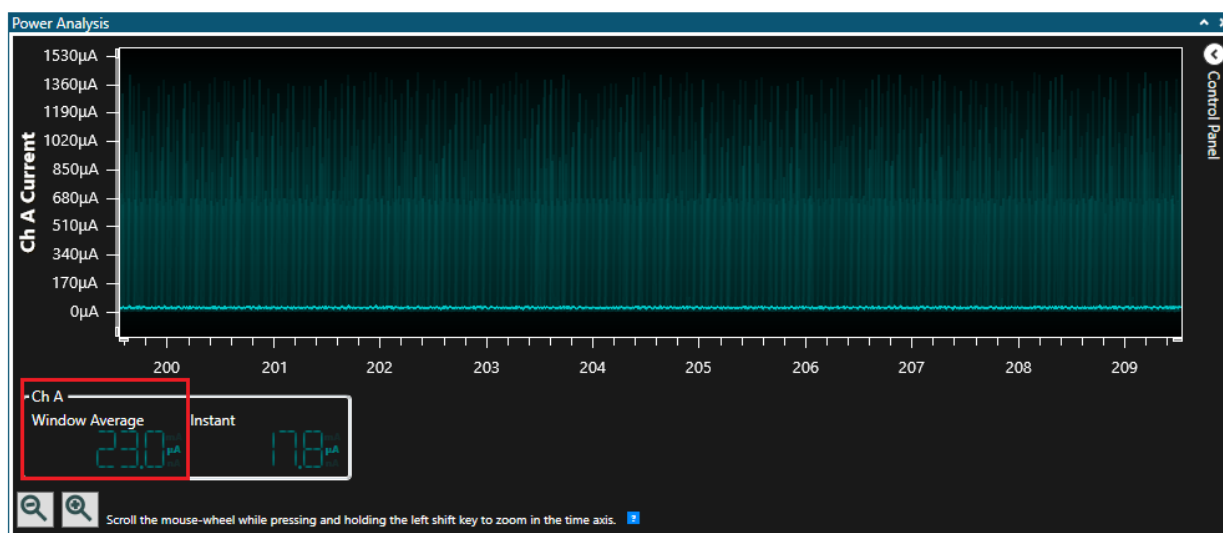

Because several peripherals are running during SleepWalking operations, such as RTC, ADC, Event System, and EIC, the power consumption is higher than it is documented in the product data sheet.

However, by comparing the power consumption of the device while running in Standby with IRQ, with the power consumption of the device while running in Standby with Event System, a gap can be observed. The first mode (`STDBY_IRQ_MODE`) consumes over 28.5 μA although the second mode (Sleepwalking) consumes 23.0 μA . This is because in `STDBY_IRQ_MODE`, the CPU is woken up every 10 milliseconds and is clocked by a 12 MHz clock source while in the `STDBY_EVSYS_MODE`, the CPU is in Sleep mode until an interrupt occurs.



Important: The product data sheet is developed on the specified version of the hardware, hence power consumption values may differ when evaluated on a different hardware. Power consumption values will always be higher in `STDBY_IRQ_MODE` than in `STDBY_EVSYS_MODE` across different boards.

4.1.3 Battery Life Comparison

To go deeper in the analysis and understand the impact in terms of power consumption, a better comparison can be made by observing the application as if it was running on a battery power supply.

For this example, a standard battery with configurations as shown in the following table, can be considered to calculate the battery life of the application for each Sleep mode.

Table 4-1. Battery Characteristics

Nominal Voltage	Capacitance	Battery type
3 V	620 mAh	Lithium – Manganese – Dioxide

The battery life is characterized by following formula:

$$T_{BL}(h) = \frac{\text{Battery Capacitance (Ah)}}{\text{PowerConsumption(A)}}$$

Standby Mode with IRQ:

For a capacitance of 620 mAh and a 28.5 µA power consumption, the battery life TBL will be as follows:

$$T_{BL} = \frac{620 \times 10^{-3}}{28.5 \times 10^{-6}} = 21,754 \text{ mAh}$$

By converting the computed value, it leads to a battery lifetime over 906 days and 10 hours.

Standby Mode with Event System:

For a capacitance of 620 mAh and a 23.0 µA power consumption, the battery life TBL will be as follows:

$$T_{BL} = \frac{620 \times 10^{-3}}{23.0 \times 10^{-6}} = 26,956 \text{ mAh}$$

By converting the computed value, it leads to a battery lifetime over 1123 days and 4 hours.

To conclude, if the device was running with SleepWalking feature, it would last 217 days more than if it was running on Standby mode with IRQ.

5. Conclusion

This document provided an overview on the benefits of SleepWalking (Standby with Event System) over using Standby with IRQ. It also showed that an application based on events instead of interrupts allows the reduction of power consumption and keeps the CPU asleep for longer time. The more interrupts in Standby mode the more the CPU will be woken up, which will increase the power consumption. In SleepWalking the CPU will not wake up on events therefore reducing power consumption.

However, if there are less frequent interrupts occurring, the difference between Standby mode with IRQ and SleepWalking operations is less in terms of power consumption.

6. References

For additional information, refer to the following documents which are available for download from the Microchip website:

- SAM D5x/E5x Family Data Sheet:
ww1.microchip.com/downloads/aemDocuments/documents/MCU32/ProductDocuments/DataSheets/SAM-D5x-E5x-Family-Data-Sheet-DS60001507.pdf
- SAM E54 Xplained Pro User's Guide:
<http://ww1.microchip.com/downloads/en/DeviceDoc/70005321A.pdf>
- What is SleepWalking? How it Helps to Reduce Power Consumption:
<http://ww1.microchip.com/downloads/en/DeviceDoc/90003183A.pdf>
- For additional information about 32-bit Microcontroller Collaterals and Solutions, refer to:
[DS70005534: 32-bit Microcontroller Collateral and Solutions Reference Guide](#)
- For other relevant information, refer to the [Microchip Web Site](#)

7. Revision History

Revision B - 06/2024

This revision was implemented to update the tools used in the document from the MHC to the MCC.

The following updates were performed in this revision:

- Updated [Software and Hardware Requirements](#) with new software version numbers
- Added a note to [SAM E54 Xplained Pro Evaluation Kit](#)
- Updated links in the following sections:
 - [MPLAB X Integrated Development Environment](#)
 - [MPLAB Harmony](#)
- Updated Images, links, and supporting text in the following sections:
 - [Data Visualizer](#)
 - [Software Setup](#)
 - [Pins Configuration](#)
 - [ADC0 Configuration](#)
 - [RTC Configuration](#)
 - [EIC Configuration](#)
 - [SERCOM2 Configuration](#)
 - [Clock Configuration](#)
 - [Event System \(EVSYS\) Configuration](#)
 - [Loading, Compiling and Running the Application](#)
 - [Configuring Tera Term](#)
 - [Configuring the Data Visualizer](#)
 - [Standby Mode with IRQ](#)
 - [SleepWalking \(Standby with Event System\)](#)
- Updated the equations in [Battery Life Comparison](#)
- Added two new references to the [References](#) page

Revision A - 12/2019

This is the initial release of the document.

Microchip Information

The Microchip Website

Microchip provides online support via our website at www.microchip.com/. This website is used to make files and information easily available to customers. Some of the content available includes:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip design partner program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

Product Change Notification Service

Microchip's product change notification service helps keep customers current on Microchip products. Subscribers will receive email notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, go to www.microchip.com/pcn and follow the registration instructions.

Customer Support

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Embedded Solutions Engineer (ESE)
- Technical Support

Customers should contact their distributor, representative or ESE for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in this document.

Technical support is available through the website at: www.microchip.com/support

Microchip Devices Code Protection Feature

Note the following details of the code protection feature on Microchip products:

- Microchip products meet the specifications contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is secure when used in the intended manner, within operating specifications, and under normal conditions.
- Microchip values and aggressively protects its intellectual property rights. Attempts to breach the code protection features of Microchip product is strictly prohibited and may violate the Digital Millennium Copyright Act.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of its code. Code protection does not mean that we are guaranteeing the product is "unbreakable". Code protection is constantly evolving. Microchip is committed to continuously improving the code protection features of our products.

Legal Notice

This publication and the information herein may be used only with Microchip products, including to design, test, and integrate Microchip products with your application. Use of this information in any other manner violates these terms. Information regarding device applications is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure

that your application meets with your specifications. Contact your local Microchip sales office for additional support or, obtain additional support at www.microchip.com/en-us/support/design-help/client-support-services.

THIS INFORMATION IS PROVIDED BY MICROCHIP "AS IS". MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, OR WARRANTIES RELATED TO ITS CONDITION, QUALITY, OR PERFORMANCE.

IN NO EVENT WILL MICROCHIP BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL LOSS, DAMAGE, COST, OR EXPENSE OF ANY KIND WHATSOEVER RELATED TO THE INFORMATION OR ITS USE, HOWEVER CAUSED, EVEN IF MICROCHIP HAS BEEN ADVISED OF THE POSSIBILITY OR THE DAMAGES ARE FORESEEABLE. TO THE FULLEST EXTENT ALLOWED BY LAW, MICROCHIP'S TOTAL LIABILITY ON ALL CLAIMS IN ANY WAY RELATED TO THE INFORMATION OR ITS USE WILL NOT EXCEED THE AMOUNT OF FEES, IF ANY, THAT YOU HAVE PAID DIRECTLY TO MICROCHIP FOR THE INFORMATION.

Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Trademarks

The Microchip name and logo, the Microchip logo, Adaptec, AnyRate, AVR, AVR logo, AVR Freaks, BesTime, BitCloud, chipKIT, chipKIT logo, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, HELDO, IGLOO, JukeBlox, KeeLoq, Klear, LANCheck, LinkMD, maXStylus, maXTouch, MediaLB, megaAVR, Microsemi, Microsemi logo, MOST, MOST logo, MPLAB, OptoLyzer, PackTime, PIC, picoPower, PICSTART, PIC32 logo, PolarFire, Prochip Designer, QTouch, SAM-BA, SenGenuity, SpyNIC, SST, SST Logo, SuperFlash, Symmetricom, SyncServer, Tachyon, TempTrackr, TimeSource, tinyAVR, UNI/O, Vectron, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

APT, ClockWorks, The Embedded Control Solutions Company, EtherSynch, FlashTec, Hyper Speed Control, HyperLight Load, IntelliMOS, Libero, motorBench, mTouch, Powermite 3, Precision Edge, ProASIC, ProASIC Plus, ProASIC Plus logo, Quiet-Wire, SmartFusion, SyncWorld, Temux, TimeCesium, TimeHub, TimePictra, TimeProvider, Vite, WinPath, and ZL are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, BlueSky, BodyCom, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, INICnet, Inter-Chip Connectivity, JitterBlocker, KlearNet, KlearNet logo, memBrain, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PowerSmart, PureSilicon, QMatrix, REAL ICE, Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQL, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

The Adaptec logo, Frequency on Demand, Silicon Storage Technology, and Symmcom are registered trademarks of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2019, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN: 978-1-6683-4700-3

Quality Management System

For information regarding Microchip's Quality Management Systems, please visit www.microchip.com/quality.

Worldwide Sales and Service

AMERICAS	ASIA/PACIFIC	ASIA/PACIFIC	EUROPE
Corporate Office 2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200 Fax: 480-792-7277 Technical Support: www.microchip.com/support Web Address: www.microchip.com	Australia - Sydney Tel: 61-2-9868-6733 China - Beijing Tel: 86-10-8569-7000 China - Chengdu Tel: 86-28-8665-5511 China - Chongqing Tel: 86-23-8980-9588 China - Dongguan Tel: 86-769-8702-9880 China - Guangzhou Tel: 86-20-8755-8029 China - Hangzhou Tel: 86-571-8792-8115 China - Hong Kong SAR Tel: 852-2943-5100 China - Nanjing Tel: 86-25-8473-2460 China - Qingdao Tel: 86-532-8502-7355 China - Shanghai Tel: 86-21-3326-8000 China - Shenyang Tel: 86-24-2334-2829 China - Shenzhen Tel: 86-755-8864-2200 China - Suzhou Tel: 86-186-6233-1526 China - Wuhan Tel: 86-27-5980-5300 China - Xian Tel: 86-29-8833-7252 China - Xiamen Tel: 86-592-2388138 China - Zhuhai Tel: 86-756-3210040	India - Bangalore Tel: 91-80-3090-4444 India - New Delhi Tel: 91-11-4160-8631 India - Pune Tel: 91-20-4121-0141 Japan - Osaka Tel: 81-6-6152-7160 Japan - Tokyo Tel: 81-3-6880-3770 Korea - Daegu Tel: 82-53-744-4301 Korea - Seoul Tel: 82-2-554-7200 Malaysia - Kuala Lumpur Tel: 60-3-7651-7906 Malaysia - Penang Tel: 60-4-227-8870 Philippines - Manila Tel: 63-2-634-9065 Singapore Tel: 65-6334-8870 Taiwan - Hsin Chu Tel: 886-3-577-8366 Taiwan - Kaohsiung Tel: 886-7-213-7830 Taiwan - Taipei Tel: 886-2-2508-8600 Thailand - Bangkok Tel: 66-2-694-1351 Vietnam - Ho Chi Minh Tel: 84-28-5448-2100	Austria - Wels Tel: 43-7242-2244-39 Fax: 43-7242-2244-393 Denmark - Copenhagen Tel: 45-4485-5910 Fax: 45-4485-2829 Finland - Espoo Tel: 358-9-4520-820 France - Paris Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79 Germany - Garching Tel: 49-8931-9700 Germany - Haan Tel: 49-2129-3766400 Germany - Heilbronn Tel: 49-7131-72400 Germany - Karlsruhe Tel: 49-721-625370 Germany - Munich Tel: 49-89-627-144-0 Fax: 49-89-627-144-44 Germany - Rosenheim Tel: 49-8031-354-560 Israel - Ra'anana Tel: 972-9-744-7705 Italy - Milan Tel: 39-0331-742611 Fax: 39-0331-466781 Italy - Padova Tel: 39-049-7625286 Netherlands - Drunen Tel: 31-416-690399 Fax: 31-416-690340 Norway - Trondheim Tel: 47-72884388 Poland - Warsaw Tel: 48-22-3325737 Romania - Bucharest Tel: 40-21-407-87-50 Spain - Madrid Tel: 34-91-708-08-90 Fax: 34-91-708-08-91 Sweden - Gothenberg Tel: 46-31-704-60-40 Sweden - Stockholm Tel: 46-8-5090-4654 UK - Wokingham Tel: 44-118-921-5800 Fax: 44-118-921-5820