

Introduction [\(Ask a Question\)](#)

The MSS Embedded Nonvolatile Memory (eNVM) configurator allows you to create memory regions (clients) that must be programmed in SmartFusion[®] 2 device eNVM blocks.

This document describes how to configure eNVM blocks. For more details about eNVM, see the [SmartFusion 2 SoC](#) product page.

Table of Contents

Introduction.....	1
1. Important Information About eNVM Reserved Pages.....	3
2. Creating Clients.....	4
3. Configuring a Data Storage Client.....	5
4. Memory File Formats.....	6
4.1. Intel HEX Memory File Format.....	6
4.2. Motorola S-Record Memory File Format.....	7
4.3. Microsemi BINARY Memory File Format.....	8
4.4. Microsemi-HEX Memory File Format.....	8
5. Interpreting Memory Content.....	9
5.1. Relative vs. Absolute Addressing.....	9
5.2. Data Interpretation Example.....	9
6. Revision History.....	11
Microchip FPGA Support.....	12
Microchip Information.....	12
The Microchip Website.....	12
Product Change Notification Service.....	12
Customer Support.....	12
Microchip Devices Code Protection Feature.....	12
Legal Notice.....	13
Trademarks.....	13
Quality Management System.....	14
Worldwide Sales and Service.....	15

1. Important Information About eNVM Reserved Pages [\(Ask a Question\)](#)

A few eNVM pages are reserved to store the certificate, digest, and security information. These pages are located at the top of the eNVM address space. The total number of reserved pages in the eNVM is device-dependent, as listed in the following table.

Table 1-1. Device Type and eNVM Reserved Pages

SmartFusion 2 Device	Reserved Pages for Certificate/Digest
M2S005, M2S010, M2S025, M2S050	16
M2S060, M2S090, M2S150	64



Important: Your application must not write into these reserved pages because it might cause a runtime failure for your design.

The number of Available Pages displayed in the eNVM Configurator is the total number of pages available after the Reserved Pages have been considered. For example, the M2S050 device data sheet shows a total of 2048 pages in the eNVM, but the eNVM Configurator shows 2032 Available Pages, because 16 pages have been reserved by MSS.

2. Creating Clients [\(Ask a Question\)](#)

The main page of the eNVM Configurator allows you to add clients to your eNVM block. The main grid displays the characteristics of any configured clients, along with usage statistics.

The **Optimize** option allows you to resolve the conflicts on overlapping base addresses for clients. This operation does not modify the base addresses for any clients that have **Lock Start Address** selected.

Figure 2-1. eNVM Configurator

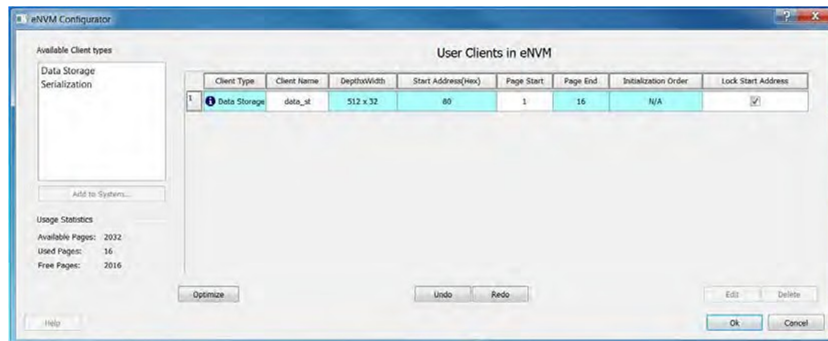



Table 2-1. Elements on the eNVM Configurator Main Page

Element	Description
Available Client Types	
Data Storage	Defines a generic memory region in the eNVM block. This region can be used to hold your application code or any other data content that your application may need.
User Clients in eNVM	
Client Type	Type of the client that is added to the system.
Client Name	Name of the client. Must be unique across the system.
Depth/Width	Depth/Width includes number of words/bits based on the memory file used for initializing the eNVM client.
Start Address(Hex)	Hexadecimal address where the client is located in eNVM. The start address must be on a page boundary. Overlapping addresses between different clients are not allowed.
Word Size	Client word size, in bits.
Page Start	Page on which the start address begins.
Page End	Page on which the client memory region ends. Page end is computed automatically based on the start address, word size, and number of words for a client.
Initialization Order	This field is not used by the SmartFusion eNVM Configurator.
Lock Start Address	Select this option if you do not want the eNVM Configurator to change your start address.
Usage Statistics	
Available Pages	Total number of pages available to create clients. The number of available pages may vary based on the selected die. This number is the total number of pages available to you after the reserved pages have been considered.
Used Pages	Total number of pages used by the configured clients.
Free Pages	Total number of pages still available for configuring data storage and initializing clients.

3. Configuring a Data Storage Client [\(Ask a Question\)](#)

The following image depicts the user interface of the **Add a Data Storage Client** dialog box.

Figure 3-1. Add Data Storage Client Dialog Box

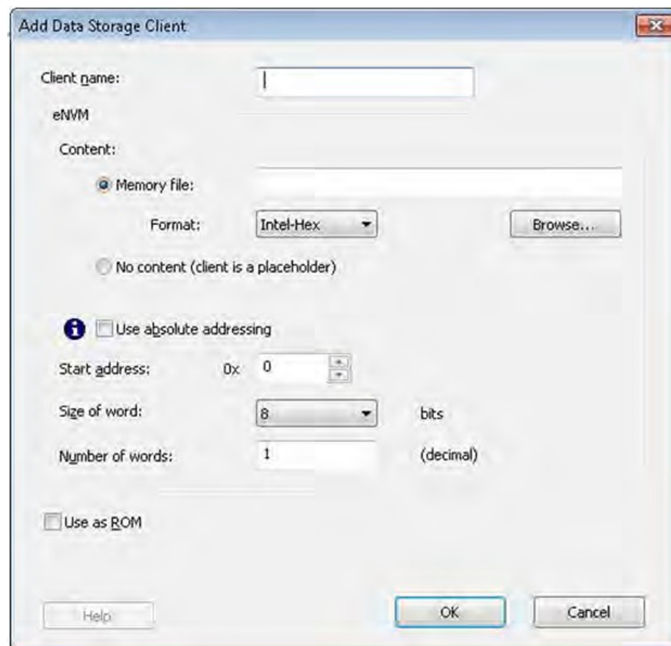

In the dialog box, you must specify the options listed in the following table.

Table 3-1. eNVM Content Description

Field	Description
Content	Specify the memory content you want to program into eNVM. The following options are available: Memory File: Select a file on a disk that matches one of the following memory file formats: Intel HEX, Motorola-S, Microsemi-S, or Microsemi-Binary. No content: Client is a placeholder. You can load a memory file using FlashPro/FlashPoint at programming time without having to return to this configurator.
Use Absolute Addressing	Allows the memory content file to determine where the client is placed in the eNVM block. The addressing in the memory content file for the client becomes absolute to the whole eNVM block. When you select this option, the software extracts the smallest address from the memory content file and uses that address as the start address for the client.
Start Address	The eNVM address where the content is programmed.
Size of Word	Word size, in bits, of the initialized client. The following choices are available: 8 16 32
Number of Words	Number of words of the client.
Use as ROM	If selected, the data storage client content is protected and its content cannot be overwritten.

4. Memory File Formats [\(Ask a Question\)](#)

The following memory file formats are supported as input files into the eNVM Configurator:

- Intel HEX
- Motorola-S
- Microsemi-BINARY
- Microsemi-HEX

The following sections provide information about these memory file formats.

4.1 Intel HEX Memory File Format [\(Ask a Question\)](#)



Important:

The eNVM data storage client in the Libero® SoC's **eNVM Memory Content** client tool supports the import of only normalized HEX files to base address 0x00000000. The data memory client does not support HEX files with an extended linear record since the tool is used to organize multiple HEX files within SmartFusion 2/IGLOO® 2 eNVM.

The normalized HEX file can be generated with any Firmware Development IDE or by using an equivalent GNU toolchain command: `--change-section-lma *-0x60000000`, used in Microchip SoftConsole IDE.

If the source of the HEX file is from IAR/Keil IDE, you must use a similar command to generate the normalized HEX file. There are other alternatives which use software development tools, but these alternatives are outside the scope of Libero SoC tool suite.

For information about SoftConsole IDE, see the [SoftConsole Release Notes](#).

Intel HEX is an industry-standard file format created by Intel. File extensions are `hex` and `ihx` (for example, `file2.hex` and `file3.ihx`).

Memory contents are stored in ASCII files using hexadecimal characters. Each file contains a series of records (lines of text) delimited by new line, '\n', characters. Each record starts with a ':' character. For more information, refer to the Intel HEX Record Format Specification document on the web (search Intel Hexadecimal Object File for several examples).

An Intel HEX record is comprised of five fields, which are arranged as follows:

```
:11aaaaatt[dd...]cc
```

The following table describes the fields of an Intel HEX record.

Table 4-1. Description of Intel HEX Record Fields

Field	Description
:	Start code of every Intel HEX record.
11	Byte count of the data field.
aaaa	16-bit address of the beginning of the memory position for the data. Address is big-endian.

.....continued

Field	Description
tt	Record type that defines the data field. The following record types are available: • 00: Data record • 01: End of file record • 02: Extended segment address record • 03: Start segment address record (ignored by Microchip SoC tools) • 04: Extended linear address record • 05: Start linear address record (ignored by Microchip SoC tools)
[dd...]	Sequence of n bytes of the data, where n is equivalent to the value specified in the 11 field.
cc	Checksum of count, address, and data.

Intel HEX Record Example

```
:10000000112233445566778899FFFA
```

In this example:

- 11 is the Least Significant Bit (LSB) .
- FF is the Most Significant Bit (MSB).

4.2 Motorola S-Record Memory File Format [\(Ask a Question\)](#)

Motorola S-record is an industry-standard file. File extension is .s (for example, file4.s).

Like Intel HEX, Motorola S-record uses ASCII files, hex characters, and records to specify memory content. For more information about this format, refer to the Motorola S-record description document (search Motorola S-record description for several examples). The RAM Content Manager uses only S1 through S3 record types, and ignores the others.

The major differences between Intel HEX and Motorola S-record are the record formats and a few extra error checking features incorporated into Motorola S.

In both formats, memory content is specified by providing a starting address and a data set. The upper bits of the data set are loaded into the starting address and leftovers overflow into the adjacent addresses until the entire data set has been used.

The Motorola S-record is comprised of six fields arranged as follows:

```
S t 11 aaaa [dd...] cc
```

The following table describes the Motorola S-record fields.

Table 4-2. Description of Motorola-S Record Fields

Field	Description
S	Start code of every Motorola S-record.
t	Record type that defines the data field.
11	Byte count of the data field.
aaaa	16-bit address of the beginning of the memory position for the data. Address is big endian.
[dd...]	Sequence of n bytes of the data, where n is equivalent to the value specified in the 11 field.
cc	Checksum of count, address, and data.

Motorola S-Record Example

```
S10a0000112233445566778899FFFA
```

In this example:

- 11 is the LSB.
- FF is the MSB.

4.3 Microsemi BINARY Memory File Format [\(Ask a Question\)](#)

Microsemi BINARY is the simplest of the supported memory formats. Each memfile contains as many rows as there are words. Each row is one word, where the number of binary digits equals the word size in bits.

This format has a very strict syntax. The word size and number of rows must match exactly. File extension is `mem` (for example, `file1.mem`).

Microsemi BINARY Example

In this example, depth is 6 and width is 8.

```
01010011
11111111
01010101
11100010
10101010
11110000
```

4.4 Microsemi-HEX Memory File Format [\(Ask a Question\)](#)

Microsemi-HEX is a simple address/data pair format. All the addresses that have content are specified. Addresses with no content specified are initialized to zeroes. The file extension is `.ahx` (for example, `filex.ahx`).

The format is:

`AA:D0`

where `AA` is the address location in hexadecimal format and `D0` is the MSB. The data size must match the word size.

Microsemi HEX Example

In this example, depth 6 and width is 8.

```
00:FF
01:AB
02:CD
03:EF
04:12
05:BB
```

All other addresses are zeroes.

5. Interpreting Memory Content [\(Ask a Question\)](#)

5.1 Relative vs. Absolute Addressing [\(Ask a Question\)](#)

Relative Addressing

With Relative Addressing, addresses in the memory content file do not determine where the client is placed in memory. You specify the location of the client by entering the start address. This becomes the 0 address from the memory content file perspective and the client is populated accordingly.

For example, if you place a client at 0x80 and the content of the memory file is:

Address: 0x0000 data: 0102030405060708

Address: 0x0008 data: 090A0B0C0D0E0F10

The first set of bytes of this data is written to address 0x80 + 0000 in the eNVM block. The second set of bytes is written to address 0x80 + 0008 = 0x88, and so on.

Consequently, the addresses in the memory content file are relative to the client itself. The location where the client is placed in memory is secondary.

Absolute Addressing

With absolute addressing, the memory content file determines where the client is placed in the eNVM block. Therefore, the addressing in the memory content file for the client becomes absolute to the whole eNVM block. If you enable the absolute addressing option, the software extracts the smallest address from the memory content file and uses that address as the start address for the client.

5.2 Data Interpretation Example [\(Ask a Question\)](#)

The following table lists how the data is interpreted for various word sizes, for the given data:

FF 11 EE 22 DD 33 CC 44 BB 55

where 55 is the MSB and FF is the LSB.

Table 5-1. Data Interpretations for Various Word Sizes

Word Size	Example
32-bit	0x22EE11FF (address 0) 0x44CC33DD (address 1) 0x000055BB (address 2)
16-bit	0x11FF (address 0) 0x22EE (address 1) 0x33DD (address 2) 0x44CC (address 3) 0x55BB (address 4)

.....continued

Word Size	Example
8-bit	0xFF (address 0) 0x11 (address 1) 0xEE (address 2) 0x22 (address 3) 0xDD (address 4) 0x33 (address 5) 0xCC (address 6) 0x44 (address 7) 0xBB (address 8) 0x55 (address 9)

6. Revision History [\(Ask a Question\)](#)

The revision history describes the changes that were implemented in the document. The changes are listed by revision, starting with the most current publication.

Table 6-1. Revision History

Revision	Date	Description
B	07/2024	Added a note to 4.1. Intel HEX Memory File Format .
A	11/2020	Converted this document to the Microchip template. Initial Revision.

Microchip FPGA Support

Microchip FPGA products group backs its products with various support services, including Customer Service, Customer Technical Support Center, a website, and worldwide sales offices. Customers are suggested to visit Microchip online resources prior to contacting support as it is very likely that their queries have been already answered.

Contact Technical Support Center through the website at www.microchip.com/support. Mention the FPGA Device Part number, select appropriate case category, and upload design files while creating a technical support case.

Contact Customer Service for non-technical product support, such as product pricing, product upgrades, update information, order status, and authorization.

- From North America, call **800.262.1060**
- From the rest of the world, call **650.318.4460**
- Fax, from anywhere in the world, **650.318.8044**

Microchip Information

The Microchip Website

Microchip provides online support via our website at www.microchip.com/. This website is used to make files and information easily available to customers. Some of the content available includes:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip design partner program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

Product Change Notification Service

Microchip's product change notification service helps keep customers current on Microchip products. Subscribers will receive email notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, go to www.microchip.com/pcn and follow the registration instructions.

Customer Support

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Embedded Solutions Engineer (ESE)
- Technical Support

Customers should contact their distributor, representative or ESE for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in this document.

Technical support is available through the website at: www.microchip.com/support

Microchip Devices Code Protection Feature

Note the following details of the code protection feature on Microchip products:

- Microchip products meet the specifications contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is secure when used in the intended manner, within operating specifications, and under normal conditions.
- Microchip values and aggressively protects its intellectual property rights. Attempts to breach the code protection features of Microchip product is strictly prohibited and may violate the Digital Millennium Copyright Act.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of its code. Code protection does not mean that we are guaranteeing the product is “unbreakable”. Code protection is constantly evolving. Microchip is committed to continuously improving the code protection features of our products.

Legal Notice

This publication and the information herein may be used only with Microchip products, including to design, test, and integrate Microchip products with your application. Use of this information in any other manner violates these terms. Information regarding device applications is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. Contact your local Microchip sales office for additional support or, obtain additional support at www.microchip.com/en-us/support/design-help/client-support-services.

THIS INFORMATION IS PROVIDED BY MICROCHIP “AS IS”. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, OR WARRANTIES RELATED TO ITS CONDITION, QUALITY, OR PERFORMANCE.

IN NO EVENT WILL MICROCHIP BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL LOSS, DAMAGE, COST, OR EXPENSE OF ANY KIND WHATSOEVER RELATED TO THE INFORMATION OR ITS USE, HOWEVER CAUSED, EVEN IF MICROCHIP HAS BEEN ADVISED OF THE POSSIBILITY OR THE DAMAGES ARE FORESEEABLE. TO THE FULLEST EXTENT ALLOWED BY LAW, MICROCHIP’S TOTAL LIABILITY ON ALL CLAIMS IN ANY WAY RELATED TO THE INFORMATION OR ITS USE WILL NOT EXCEED THE AMOUNT OF FEES, IF ANY, THAT YOU HAVE PAID DIRECTLY TO MICROCHIP FOR THE INFORMATION.

Use of Microchip devices in life support and/or safety applications is entirely at the buyer’s risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Trademarks

The Microchip name and logo, the Microchip logo, Adaptec, AVR, AVR logo, AVR Freaks, BesTime, BitCloud, CryptoMemory, CryptoRF, dsPIC, flexPWR, HELDO, IGLOO, JukeBlox, KeeLoq, Kleer, LANCheck, LinkMD, maXStylus, maXTouch, MediaLB, megaAVR, Microsemi, Microsemi logo, MOST, MOST logo, MPLAB, OptoLyzer, PIC, picoPower, PICSTART, PIC32 logo, PolarFire, Prochip Designer, QTouch, SAM-BA, SenGenuity, SpyNIC, SST, SST Logo, SuperFlash, Symmetricom, SyncServer, Tachyon, TimeSource, tinyAVR, UNI/O, Vectron, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

AgileSwitch, ClockWorks, The Embedded Control Solutions Company, EtherSynch, Flashtec, Hyper Speed Control, HyperLight Load, Libero, motorBench, mTouch, Powermite 3, Precision Edge, ProASIC, ProASIC Plus, ProASIC Plus logo, Quiet-Wire, SmartFusion, SyncWorld, TimeCesium, TimeHub, TimePictra, TimeProvider, and ZL are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, Augmented Switching, BlueSky, BodyCom, Clockstudio, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic

Average Matching, DAM, ECAN, Espresso T1S, EtherGREEN, EyeOpen, GridTime, IdealBridge, IGaT, In-Circuit Serial Programming, ICSP, INICnet, Intelligent Paralleling, IntelliMOS, Inter-Chip Connectivity, JitterBlocker, Knob-on-Display, MarginLink, maxCrypto, maxView, memBrain, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, mSiC, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICKit, PICtail, Power MOS IV, Power MOS 7, PowerSmart, PureSilicon, QMatrix, REAL ICE, Ripple Blocker, RTAX, RTG4, SAM-ICE, Serial Quad I/O, simpleMAP, SimpliPHY, SmartBuffer, SmartHLS, SMART-I.S., storClad, SQL, SuperSwitcher, SuperSwitcher II, Switchtec, SynchroPHY, Total Endurance, Trusted Time, TSHARC, Turing, USBCheck, VariSense, VectorBlox, VeriPHY, ViewSpan, WiperLock, XpressConnect, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

The Adaptec logo, Frequency on Demand, Silicon Storage Technology, and Symmcom are registered trademarks of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2024, Microchip Technology Incorporated and its subsidiaries. All Rights Reserved.

ISBN: 978-1-6683-4869-7

Quality Management System

For information regarding Microchip's Quality Management Systems, please visit www.microchip.com/quality.

Worldwide Sales and Service

AMERICAS	ASIA/PACIFIC	ASIA/PACIFIC	EUROPE
Corporate Office 2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200 Fax: 480-792-7277 Technical Support: www.microchip.com/support Web Address: www.microchip.com	Australia - Sydney Tel: 61-2-9868-6733 China - Beijing Tel: 86-10-8569-7000 China - Chengdu Tel: 86-28-8665-5511 China - Chongqing Tel: 86-23-8980-9588 China - Dongguan Tel: 86-769-8702-9880 China - Guangzhou Tel: 86-20-8755-8029 China - Hangzhou Tel: 86-571-8792-8115 China - Hong Kong SAR Tel: 852-2943-5100 China - Nanjing Tel: 86-25-8473-2460 China - Qingdao Tel: 86-532-8502-7355 China - Shanghai Tel: 86-21-3326-8000 China - Shenyang Tel: 86-24-2334-2829 China - Shenzhen Tel: 86-755-8864-2200 China - Suzhou Tel: 86-186-6233-1526 China - Wuhan Tel: 86-27-5980-5300 China - Xian Tel: 86-29-8833-7252 China - Xiamen Tel: 86-592-2388138 China - Zhuhai Tel: 86-756-3210040	India - Bangalore Tel: 91-80-3090-4444 India - New Delhi Tel: 91-11-4160-8631 India - Pune Tel: 91-20-4121-0141 Japan - Osaka Tel: 81-6-6152-7160 Japan - Tokyo Tel: 81-3-6880-3770 Korea - Daegu Tel: 82-53-744-4301 Korea - Seoul Tel: 82-2-554-7200 Malaysia - Kuala Lumpur Tel: 60-3-7651-7906 Malaysia - Penang Tel: 60-4-227-8870 Philippines - Manila Tel: 63-2-634-9065 Singapore Tel: 65-6334-8870 Taiwan - Hsin Chu Tel: 886-3-577-8366 Taiwan - Kaohsiung Tel: 886-7-213-7830 Taiwan - Taipei Tel: 886-2-2508-8600 Thailand - Bangkok Tel: 66-2-694-1351 Vietnam - Ho Chi Minh Tel: 84-28-5448-2100	Austria - Wels Tel: 43-7242-2244-39 Fax: 43-7242-2244-393 Denmark - Copenhagen Tel: 45-4485-5910 Fax: 45-4485-2829 Finland - Espoo Tel: 358-9-4520-820 France - Paris Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79 Germany - Garching Tel: 49-8931-9700 Germany - Haan Tel: 49-2129-3766400 Germany - Heilbronn Tel: 49-7131-72400 Germany - Karlsruhe Tel: 49-721-625370 Germany - Munich Tel: 49-89-627-144-0 Fax: 49-89-627-144-44 Germany - Rosenheim Tel: 49-8031-354-560 Israel - Hod Hasharon Tel: 972-9-775-5100 Italy - Milan Tel: 39-0331-742611 Fax: 39-0331-466781 Italy - Padova Tel: 39-049-7625286 Netherlands - Drunen Tel: 31-416-690399 Fax: 31-416-690340 Norway - Trondheim Tel: 47-72884388 Poland - Warsaw Tel: 48-22-3325737 Romania - Bucharest Tel: 40-21-407-87-50 Spain - Madrid Tel: 34-91-708-08-90 Fax: 34-91-708-08-91 Sweden - Gothenberg Tel: 46-31-704-60-40 Sweden - Stockholm Tel: 46-8-5090-4654 UK - Wokingham Tel: 44-118-921-5800 Fax: 44-118-921-5820