


# **AVR1300: Using the AVR XMEGA ADC**

# Introduction

The Microchip AVR® XMEGA® ADC module is a high-performance Analog-to-Digital converter capable of conversion rates up to 2 Million Samples Per Second (MSPS) with a resolution of 12 bits. A wide range of multiplexer (MUX) settings, integrated gain stage, and four virtual input channels make this a flexible module suitable for a wide range of applications, such as data acquisition, embedded control, and general signal processing. This application note describes the basic functionality of the XMEGA ADC with code examples to get up and running quickly. The example code is available through Atmel | START. Example applications are XMEGA ADC Polled and XMEGA ADC Interrupt . The application covers single-ended conversion of ADC using different channels in polled mode and using interrupt using device XMEGA128A1U. Advanced usage, such as Direct Memory Access (DMA) and the XMEGA Event System, is outside the scope of this application note. Refer to the device data sheets and other relevant application notes such as "AVR1304: Using the XMEGA DMA Controller" and "AVR1001: Getting Started With the XMEGA Event System".

Figure 1. ADC Overview

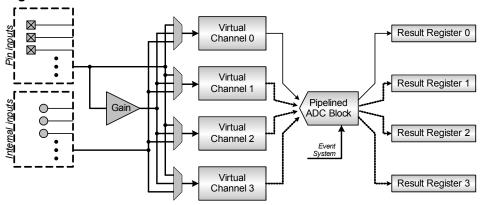

# **Features**

- Up to 12 bit resolution
- Up to 2 Msps (Mega samples per second)
- Signed and unsigned mode
- Selectable gain
- Pipelined architecture
- · Up to four virtual channels
- Result comparator
- Automatic calibration
- Internal connection to DAC output
- · Driver source code included

# **Table of Contents**

Int	roduc	etion	1			
Fe	atures	S	1			
1.	Module Overview					
	1.1.	Pipeline Architecture and Virtual Channels				
	1.2.	Gain Stage	6			
	1.3.	Conversion Mode				
	1.4.	Multiplexer Settings	7			
		1.4.1. Differential Input without Gain	8			
		1.4.2. Differential Input with Gain Stage	8			
		1.4.3. Single-Ended Input	9			
		1.4.4. Internal Input	10			
		1.4.5. Temperature Sensor	11			
	1.5.	Conversion Result	12			
		1.5.1. Signed Mode	12			
		1.5.2. Unsigned Mode				
	1.6.	.6. Result Presentation				
	1.7.	Voltage References				
	1.8.	Conversion Speed				
	1.9.	Free-Running Mode				
	1.10.	and the second s				
		Result Comparator Interrupt				
	1.12.	Calibration				
		1.12.1. Offset Error				
		1.12.2. Offset Error – Single-Ended Channels				
		1.12.3. Offset Error – Differential Channels				
		1.12.4. Gain Error				
		1.12.5. Non-Linearity				
		1.12.6. Differential Non-Linearity				
		1.12.7. Integral Non-Linearity				
		1.12.8. Measurements and Compensation				
		1.12.9. Decoupling				
		1.12.10. Source Impedance				
	1.13.	21				
2.	Getti	ing Started	23			
	2.1.	Single Conversion	23			
	2.2.	Multiple Channels	23			
	2.3.	Free-Running Mode	23			
3.	. Advanced Features					
	3.1.	3.1. DMA Controller				
	3.2.					

4.	Get Source Code from Atmel   START	. 26
5.	Revision History	27
Th	e Microchip Web Site	. 28
Customer Change Notification Service		
Сι	stomer Support	. 28
Mi	crochip Devices Code Protection Feature	. 28
Le	gal Notice	29
Tra	ademarks	. 29
Qι	ality Management System Certified by DNV	30
\/\/a	orldwide Sales and Service	31

# 1. Module Overview

This chapter provides an overview of the functionality and basic configuration options of the ADC, and walk you through the basic setup and usage of ADC on register level.

# 1.1 Pipeline Architecture and Virtual Channels

The ADC conversion block has a 12-stage pipelined architecture capable of sampling several signals in parallel. There are four input selection multiplexers with individual configurations. The separate configuration settings for the four multiplexers can be viewed as virtual channels, with one set of result registers each, all sharing the same ADC conversion block. Refer to Figure 1 on page 1.

On the AVR XMEGA A series the multiplexer outputs can be sampled every ADC clock cycle. On the XMEGA D series a new measurement can be sampled once the previous conversion is done. Each signal propagates through the pipeline, where one bit is converted at each stage. In this way, the ADC in the XMEGA A is capable of sampling one signal every ADC clock cycle, even if each signal must propagate through all stages in the pipeline before the result is ready in the result register. The propagation time for one single signal conversion through the pipeline is seven ADC clock cycles for 12-bit conversions and five cycles for 8-bit conversions. If Gain is used the propagation time increases by one cycle. At full utilization the XMEGA A ADC delivers one result every ADC clock cycle while the XMEGA D ADC delivers one sample every 5 – 8 ADC clock cycle depending on operating mode. The relation between the XMEGA peripheral clock and the ADC clock is described in Section Conversion Speed.

The figure below shows a simplified 4-stage pipeline during conversion of two input signals. The figure shows that once the signal has been sampled into the pipeline, the first stage converts the MSB of the first signal. While the second stage is converting the next bit of the signal, the first stage now converts the MSB of the second signal.

**Note:** The XMEGA D3/D4 families do not have a pipelined ADC and four virtual channels per ADC.

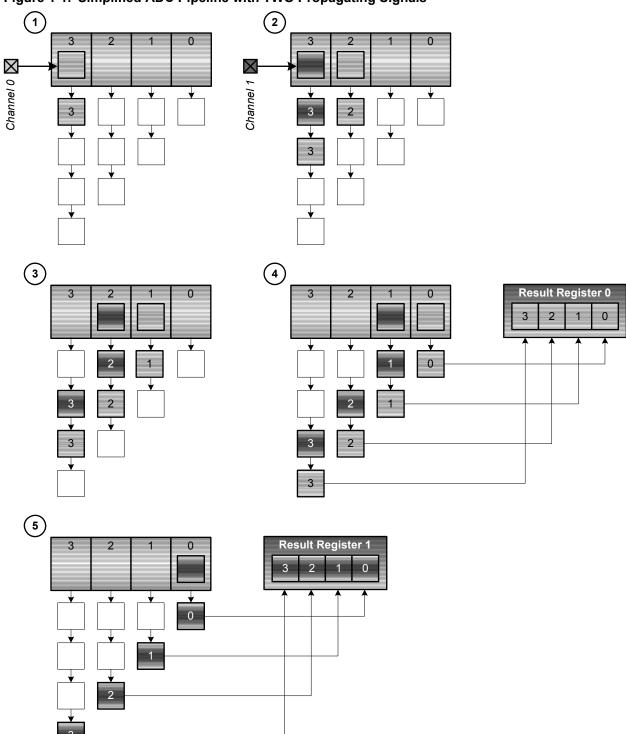


Figure 1-1. Simplified ADC Pipeline with TWO Propagating Signals

All the four virtual channels have one MUX Control register (CHn.MUXCTRL), one Channel Control register (CHn.CTRL), and one Result register pair (CHn.RESL/CHn.RESH) each, in addition to several control bits distributed in shared registers.

# 1.2 Gain Stage

The ADC has an internal gain stage, which can be configured to amplify a voltage to allow measurement of smaller voltages in differential mode.

This is a shared gain stage that can be used by all the channels. When the channel is configured to use gain, the gain stage is inserted between the channel input selection MUX and the conversion block. The available gain settings are 1x, 2x, 4x, 8x, 16x, 32x, and 64x. The AVR XMEGA D series can also do 1/2x gain (div2). The Gain Factor bit field (GAINFACT) in the Channel Control register (CHn.CTRL) set the gain factor for the channel. It is possible to have individual gain settings for all the virtual channels.

The propagation delay for an ADC sample through the ADC module increases by one ADC clock cycle flat on the XMEGA A series when using the gain stage, on the XMEGA D series the propagation delay is depended of the gain setting.

- Propagation delay = 1 for 1/2x, 1x, 2x, and 4x gain settings
- Propagation delay = 2 for 8x and 16x gain settings
- Propagation delay = 3 for 32x and 64x gain settings

To minimize the analog signal path for best possible ADC result it is recommended to disable the gain when not needed.

### 1.3 Conversion Mode


The conversion block can be put in the unsigned or signed conversion mode. Changing between unsigned/signed and single-ended/differential modes will corrupt data already in the pipeline.


Signed mode can be used as input mode for both differential and single-ended inputs, while unsigned mode is only available for the single-ended or internal input.

In unsigned mode the conversion range is from ground to the reference voltage. To be able to have zero-cross detection a  $\Delta V$  is subtracted. The  $\Delta V$  is approximately 0.05\*  $V_{REF}$ , so the ground level will be approximately 0.05 of the total value range (0.05 \* 4095 with 12-bit resolution). This will also limit the maximum input voltage of 0.05\*  $V_{REF}$ , so the maximum input voltage is  $V_{REF}$  -  $\Delta V$ . This is illustrated in the figure below, "Unsigned and Signed Conversion Mode".

In signed mode the range is from negative to positive reference voltage, but the input voltage must be within GND and  $V_{REF}$ . Figure "Unsigned and Signed Conversion Mode" shows the difference in conversion ranges.

Figure 1-2. Unsigned and Signed Conversion Mode **Unsigned Mode** 

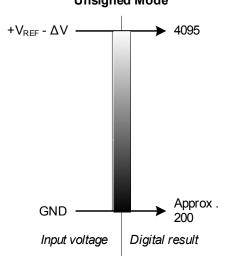

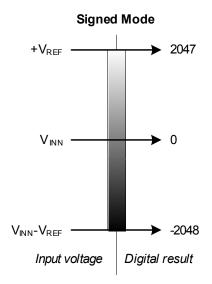

The figure above shows that the unsigned mode gives higher resolution on positive values than signed mode, but cannot convert negative values. The signed mode can convert negative values, but at the cost of lower resolution overall.

Note: Negative values are not negative inputs on the I/O pins, but higher voltage level on the negative input in respect to the positive input. Even though the resulting value can be negative, voltages below GND or above VCC should under no circumstances be applied to any input port.

When the ADC uses differential input, signed mode must be used. When using single-ended input both signed and unsigned mode can be used.

Note: Conversion mode is configured for the whole ADC, not individually for each channel, which means that the ADC must be put in the signed mode even if only one of the channels uses differential inputs. The conversion mode is configured using the Conversion Mode bit (CONVMODE) in Control Register B (CTRLB).

#### 1.4 Multiplexer Settings

The MUXes are used to select input signal for each virtual channel. There are four different configuration choices that can be selected using the Channel Input mode bitfield (INPUTMODE) in the Channel Control register (CHnCTRL):

- XDifferential XInput without Gain (see Section 1.4.1)
- XDifferential Input with Gain Stage (see Section 1.4.2)
- XSingle-ended Input (see Section 1.4.3)
- XInternal Input (see Section 1.4.4)

The positive and negative inputs are selected using the MUX Positive Input and MUX Negative Input bitfields (MUXPOS and MUXNEG) in the Channel MUX Control register (MUXCTRL). An alternative name for the MUX Positive Input bitfield used in the header files is MUX Internal Input (MUXINT) when measuring internal inputs.

In devices with two ADCs, the inputs can only be connected to the corresponding port. Meaning that ADC A can be connected only to PORT A, and ADC B can be connected only to PORT B. The positive input can be connected to anyone of the eight input signals of the corresponding port. The negative input can be connected to one of the first four input signals (PIN0 - PIN3) of the corresponding port for differential without Gain and the second four input signals (PIN4 – PIN7) for differential with Gain.

**Application Note** DS00002535A-page 7 © 2017 Microchip Technology Inc.

In devices with only one ADC but several analog ports, the positive input can be connected to any of the available input signals from both PORT A and PORT B. The negative input can be connected to one of the first four input signals (PIN0 – PIN3) of the corresponding port for differential without Gain and the second four input signals (PIN4 –PIN7) for differential with Gain.


Refer to the data sheet to determine the number of ADCs and the devices pin configuration.

**Note:** The sampling capacitor is drained between each sample for all modes except for differential mode with gain. In the differential mode with gain, the charge on the sampling capacitor is maintained and this can be used to get a higher sample rate on slow changing signals. This can be used to get higher sampling rates on high impedance sources compared to single channel or differential channel (without gain) sampling. This will, however, propagate to other channels if the sample rate is too high compared to the source impedance.

# 1.4.1 Differential Input without Gain

With this setting, the MUX measures the difference between two input signals. In differential mode without gain, all ADC inputs can be used for the positive input of the ADC but only the lower four pins can be used as the negative input. When using differential mode, the offset can be measured quite easily by setting up the positive and negative input on the same pin, and the offset can be measured directly as the ADC does not need to know where the ground level is.


Figure 1-3. Differential Input without Gain Stage

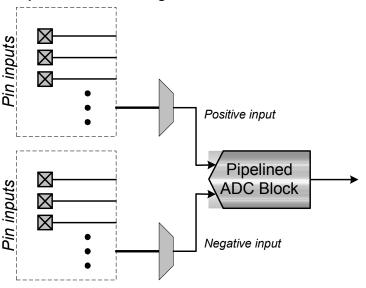

#### 1.4.2 Differential Input with Gain Stage

This setting is almost identical to differential input without gain stage. With this setting the gain stage is inserted in the signal path for this channel, providing up to 64 times amplification of the differential input signal. Maximum sampling speed while using the gain stage is 1 Msps.

Figure 1-4. Differential Input with Gain Stage

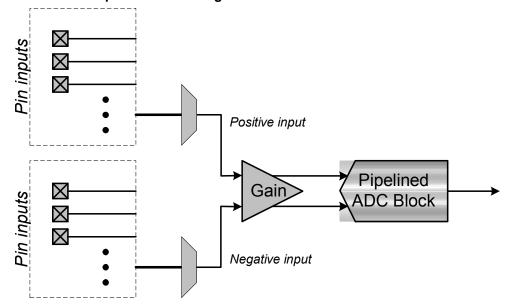


Note: The gain stage does not load the input; hence external signal sources will see very high input impedance for channels that use the gain stage. This is useful for measuring weak signal sources. More details can be found in the data sheet for the specific device.

The voltage on any of the two inputs can be between GND and VREF, but the difference between them must not be larger than VREF/GAIN because this will saturate the ADC and the converted value will only equal the top value of the ADC.

#### 1.4.3 Single-Ended Input

With this setting, the ADC measures the value of one input signal. The difference between this setting and differential measurement is that the negative input is always connected internally to a defined level depending on if signed or unsigned mode is being used. For signed mode the negative input is tied to GND while in unsigned mode it is connected to VREF/2 –  $\Delta$ V.

Figure 1-5. Single-ended Input in Signed Mode

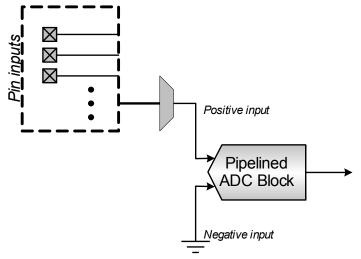


ΔV is a fixed and internally generated voltage of approximately 0.05\* VREF. This offset needs to be measured by connecting the positive input to ground (GND). The offset will typically correspond to a value of about 200 when measured.

**Application Note** DS00002535A-page 9 © 2017 Microchip Technology Inc.

The advantage of  $\Delta V$  is that it will be possible to measure a negative offset in the ADC block because  $\Delta V$  will be larger than any offset.  $\Delta V$  will allow the XMEGA ADC to be used in applications where it is essential to know and compensate for offset errors. The disadvantage is that some of the upper range is lost since any measurement above VREF –  $\Delta V$  will saturate to the top value.

In addition to connecting the negative input the ADC will in unsigned single ended mode automatically add 2048 to the result. This gives a possible output range from 0 to 4096 as opposed to -2048 to 2047 for signed mode.

Figure 1-6. Single-ended Input in Unsigned Mode

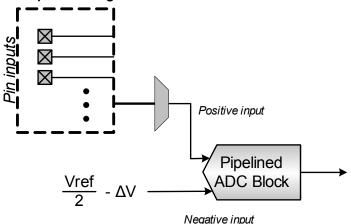

**Note:** Since the ADC is differential, unsigned mode is achieved by dividing the reference by two (internally), resulting in an input range from VREF to zero for the positive single ended input. The offset enables the ADC to measure zero cross detection in unsigned mode, and to calibrate any positive offset where the internal ground in the device is higher than the external ground.

#### 1.4.4 Internal Input

With this setting, the MUX measures one of several internal signals. The negative input is always connected to GND while the positive input can be connected to one of the following internal sources: Temperature Reference, DAC Internal Output, AVCC/10 (for supply voltage measurement), or Bandgap Reference.

#### Note:

Two channels can select different internal sources. They are not limited to one common setting, as opposed to the shared gain stage setting.

The internal DAC input can be used for calibration of the DAC. For more information about DAC configuration, refer to the device data sheet or the "AVR1301: Using the XMEGA DAC" application note.

The Bandgap Reference can be used as a reference to calculate the external reference, like a battery voltage, if the voltage is unknown. With a measurement of a known voltage (the Bandgap Reference, 1.1V) using an unknown reference, it is easy to calculate the actual voltage of the external reference.

Figure 1-7. Internal Input in Signed Mode


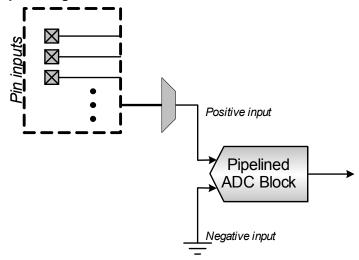


Figure 1-8. Internal Input in Unsigned Mode

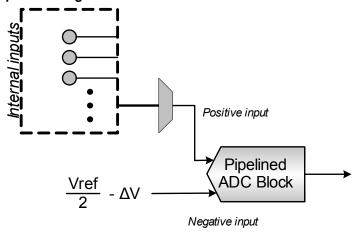

Note: If no other modules are using the Bandgap Reference it must be turned ON using the Bandgap Enable bit (BANDGAP) in the Reference Control register (REFCTRL).

The same goes for the Temperature Reference, which is not shared with any other modules. The Temperature Reference is turned ON using the Temperature Reference Enable bit (TEMPREF). Also note that there is a certain settling time for both Bandgap and Temperature Reference, hence they should be enabled in due time before starting any conversions.

**Note:** Maximum sampling speed of the internal inputs is 125 ksps.

#### 1.4.5 **Temperature Sensor**

The internal temperature sensor is linear, and is intended to give a rough approximation of the ambient temperature (not a PT100 sensor replacement). The target value at 0K is 0 mV from the analog sensor, resulting in "0x00" from the ADC (plus ΔV from single-ended measurements – refer to the device manual/ data sheet for this value). An approximate linear line can be made from the 0K point to the production calibration value in the signature row. This value is stored in the signature row and corresponds to a temperature measurement done at 85°C (358K) with a typical accuracy of ±15°C. The inaccuracy will result in some gain error when measuring temperatures.

The measurement stored in the signature row is done in an unsigned mode with 12 bits resolution with the internal 1V reference. VCC is 3.2V and the ADC clock is 62.5 kHz. The ADC setup has to be the same if this value is going to be used for calibration in the application.

DS00002535A-page 11 **Application Note** © 2017 Microchip Technology Inc.

The best way to get more accurate results is to do a 2-point calibration to get the incline of the curve. To do a 2-point calibration, select two temperatures where you can do the measurements and where the temperatures are known and accurate. Do a measurement at both temperatures with the wanted setup of the ADC (mode, sample rate/frequency with a maximum of 125 kHz, resolution). When you have these values, you can calculate the coefficient for the curve and you can use this in your application. The formula below can be used to calculate the temperature change per bit:

$$Temp/bit = \frac{TempHigh - TempLow}{ValueHigh - ValueLow}$$

For a single point calibration, use the same formula, but replace TempLow and ValueLow with  $0^{\circ}$ K and "0x00" result from the ADC (plus  $\Delta$ V).

#### 1.5 Conversion Result

#### 1.5.1 Signed Mode

In signed mode the conversion result from the ADC is:

$$RES = \frac{V_{INP} - V_{INN}}{V_{REF}} * GAIN * TOP$$

 $V_{\text{INP}}$  is the positive input and  $V_{\text{INN}}$  is the negative input to the ADC. GAIN corresponds to the gain setting used. GAIN is 1 if gain is not used. TOP is the top value given by the configured resolution, which is 2048 for 12-bit mode and 128 for 8-bit mode.

In signed mode the result is returned as a signed number represented on a two's complement format where the MSB represents the sign bit. In 12-bit right adjusted mode, the sign bit (bit 11) is padded to bits 12-15 to create a signed 16-bit number directly. In 8-bit mode, the sign bit (bit 7) is padded to the entire high byte.

With 12-bit resolution the range from  $-V_{REF}$  to  $+V_{REF}$  will be -2048 to +2047 (0xF800 - 0x07FF).

#### 1.5.2 Unsigned Mode

In unsigned mode the conversion result from the ADC is:

$$RES = \frac{V_{INP} + \Delta V}{V_{REF}} \times TOP$$

 $V_{INP}$  is the single ended input and  $\Delta V$  = VREF x 0.05. TOP is the top value given by the configured resolution. For 12-bit mode TOP is 4096 and 8-bit mode TOP is 256.

The positive offset given by  $\Delta V$  is typically 0.05\*VREF. This typically corresponds to a measurement result of approximately 200 when the input pin is connected to ground. In order to measure this offset accurately the ADC should be configured as it will be used in the application (i.e. voltages, speed, and other settings) and the input pin should be connected externally to ground.

This offset is not automatically compensated, and the software needs to subtract the measured offset from the conversion results.

With 12-bit resolution the range from GND to VREF –  $\Delta V$  will be from approximately 200 to 4095 (0x00C8 - 0x0FFF).

#### 1.6 Result Presentation

The ADC can be configured to present conversion results in the following formats:

- 12 bits, right adjusted
- 8 bits, right adjusted
- 12 bits, left adjusted

The ADC resolution is configured using the Conversion result Resolution bit field (RESOLUTION) in Control Register B (CTRLB).

The result will be stored in the result registers for each channel. The channels have separate flags to indicate when a new conversion is ready. If the result is not read before a new conversion is done, the current result will be lost.

The DMA can be set up to transfer the result from the result register into the SRAM when a new conversion is ready. This can be done for all channels when doing sweep and store all channels in one burst.

**Note:** A lower resolution gives faster conversions, as there are fewer pipeline stages for the signal samples to propagate through. Therefore, selecting result presentation is a tradeoff between resolution and conversion speed.

# 1.7 Voltage References

The application can choose between the following voltage references (VREF) for conversion results:

- 12 bits, right adjusted
- · 8 bits, right adjusted
- · 12 bits, left adjusted
- INT1V Internal reference of 1.0V
- INTVCC Internal reference of VCC/1.6V
- AREFA External reference pin on PORTA
- AREFB External reference pin on PORTB
- AVCC/2 Internal reference of AVCC/2 for the XMEGA D devices

The internal INT1V reference is a 1.00V reference from the bandgap of the device. The bandgap voltage is 1.10V and the reference voltage is 10/11 of the bandgap voltage, giving the 1.00V reference. The accuracy of the reference is dependent on the bandgap. The accuracy of the bandgap is stated in the device's data sheet.

The INTVCC is a reference voltage based on VCC divided by 1.6. The accuracy is depending on the accuracy and stability of the analog supply voltage (AVCC) and filtering should be used if the AVCC is connected to the digital VCC.

**Note:** The external reference pin AREFA/B is shared with the DAC module. The voltage reference is configured using the Reference Selection bitfield (REFSEL) in the Reference Control register (REFCTRL). The external reference is located at pin 0 on PORTA and PORTB (AREFA and AREFB).

**Note:** For the external references the maximum voltage to be used is VCC - 0.6V and the minimum voltage is 1V. The accuracy of the external reference is depending on the external circuitry and this has to be designed to satisfy the required accuracy for the ADC measurements.

# 1.8 Conversion Speed

The ADC clock is derived from a prescaled version of the AVR XMEGA peripheral clock, where the available factors are 1/4, 1/8, 1/16, 1/32, 1/64, 1/128, 1/256, and 1/512. The ADC clock has to be set

within the minimum and maximum recommended speed for the ADC module to guarantee correct operation. The ADC Clock is configured using the Clock Prescaler register (PRESCALER).

Having a fast ADC clock gives a short propagation time for each sample, but does not mean that you cannot sample a signal at a much slower rate. For instance, an application could sample at a rate of 10kHz even if the ADC clock is 2 MHz. However, it is not possible to sample at a rate higher than one fourth of the system clock speed since the maximum ADC clock is 1/4<sup>th</sup> of the peripheral clock. For XMEGA A devices the ADC clock should not be set higher than 2 MHz, for XMEGA D devices the top frequency limit is 1.4 MHz. Lowest ADC clock frequency for both XMEGA A and XMEGA D devices are 100 kHz. See the device data sheet for more information.


The conversion rate must satisfy the requirements for the given source impedance. If the sampling rate is too high compared to the source impedance, the results will not be accurate. It is important that you do not sample faster than the inclination rate of the signal to follow. The maximum sample rate is defined by the formula:

$$f_{ADC} = \frac{1}{2 \cdot (R_{source} + R_{channel}) \cdot C_{sample} \cdot \ln(2^{n+1})}$$

The values for  $C_{SAMPLE}$  and  $R_{CHANNEL}$  ( $R_{CHANNEL}$  =  $R_{CHANNEL}$  +  $R_{SWITCH}$ ) can be found in the data sheet for the device. The n represent the number of bits in the conversion and can be either 8 or 12. The  $R_{SOURCE}$  is the impedance of the analog signal source, which can be calculated from the circuitry or found in the data sheet of the device if using integrated sensors.

To give an illustration of how this will affect the sampling rate, we will use worst-case numbers for  $R_{CHANNEL}$ ,  $R_{SOURCE}$ , and  $C_{SAMPLE}$ . This is 4.5 k $\Omega$  for  $R_{CHANNEL}$ +  $R_{SWITCH}$  and 5 pF for  $C_{SAMPLE}$ . This will give the relationship between source impedance and the maximum sampling rate, as shown in the figure below.



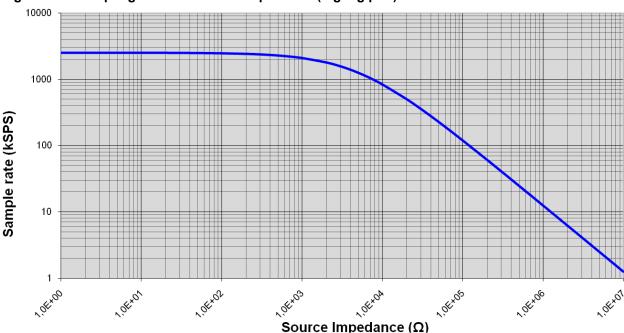

# 1.9 Free-Running Mode

Instead of manually starting conversions by setting one or more of the Start Conversion bits (CHnSTART) in Control Register A (CTRLA) or assigning events to virtual channels, the ADC can be put in free-running mode. This means that a number of channels are repeatedly converted in sequence as long as the mode is active.

The Channel Sweep Selection bitfield (SWEEP) in the Event Control register (EVCTRL) selects which channels to include in free-running mode. You can choose between channel 0 only, channel 0 and 1, channel 0 to 2, or all four channels.

**Note:** The same bits are used to select the channels to include in an event-triggered conversion sweep, but this is outside the scope of this application note.

Care should be taken not to change any involved MUX settings when in free-running mode, as this would corrupt conversion results.

# 1.10 Interrupts

To avoid having to poll a register to check when conversions are finished, the ADC can be configured to issue interrupt requests upon conversion complete. This can be used to do result processing using interrupt handler code while leaving the CPU ready for other tasks most of the time.

For more information, refer to the device data sheet or the "AVR1305: XMEGA Interrupts and the Programmable Multi-level Interrupt Controller" application note.

# 1.11 Result Comparator Interrupt

Instead of merely converting an input value, the ADC can be configured to compare the result to a given value and only issue an interrupt or event when the result is above or below that value. Interrupts on compare match (above/below) can be configured individually on each channel, but the compare register is shared between all four virtual channels.


Typical use of this feature is to leave one or more ADC channels in free-running mode and configure the ADC to issue an interrupt when one of the input signals reach a certain threshold.

### 1.12 Calibration

The ADC module has been calibrated during the production of the device. This calibration value is stored in the production signature row of the device. The calibration value compensates for the mismatch between the individual steps of the ADC pipeline and it improves the linearity of the ADC.

The calibration value is not loaded automatically, and should always be loaded from the production signature row (ADC x CAL0/1) and written to the corresponding ADC calibration registers (CALL/CALH) before enabling the ADC. Flowcharts for loading stored calibration settings are shown in figure "Using Stored Calibration Settings".

Figure 1-10. Using Stored Calibration Settings

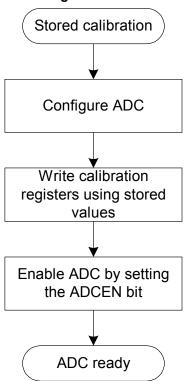

The calibration value is factory calibrated with high accuracy equipment to the data sheet accuracy, and is not intended for user calibration.

The application note "AVR120: Characterization and Calibration of the ADC on an AVR" contains more information on characteristics of ADCs and how to compensate for gain and offset errors.

### 1.12.1 Offset Error

The offset error is defined as the deviation of the actual ADC's transfer function from the ideal straight line at zero input voltage.

When the transition from output value 0 to 1 does not occur at an input value of ½ LSB, then we say that there is an offset error. With positive offset errors, the output value is larger than 0 when the input voltage approaches ½ LSB from below. With negative offset errors, the input value is larger than ½ LSB when the first output value transition occurs. In other words, if the actual transfer function lies below the ideal line, there is a negative offset and vice versa. Negative and positive offsets are shown in the figure below.

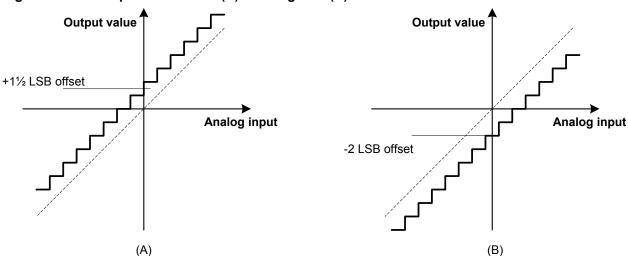


Figure 1-11. Examples of Positive (A) and Negative (B) Offset Errors

Since single-ended conversion gives positive results only, the offset measurement procedures are different when using single-ended and differential channels.

### 1.12.2 Offset Error – Single-Ended Channels

To measure the offset error, increase the input voltage from GND until the first transition in the output value occurs. Calculate the difference between the input voltage for which the perfect ADC would have shown the same transition and the input voltage corresponding to the actual transition. This difference, converted to LSB, equals the offset error.

In Figure A, the first transition occurs at 1 LSB. The transition is from 2 to 3, which equals an input voltage of 2½ LSB for the perfect ADC. The difference is +1½ LSB, which equals the offset error. The double-headed arrows show the differences.

The same procedure applies to Figure B. The first transition occurs at 2 LSB. The transition is from 0 to 1, which equals an input voltage of ½ LSB for the perfect ADC. The difference is -1½ LSB, which equals the offset error.

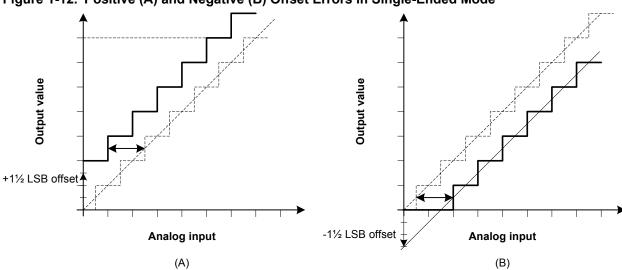


Figure 1-12. Positive (A) and Negative (B) Offset Errors in Single-Ended Mode

To compensate for offset errors when using single-ended channels, subtract the offset error from every measured value. Be aware that offset errors limit the available range for the ADC. A large positive offset

error causes the output value to saturate at maximum before the input voltage reaches maximum. A large negative offset error gives output value 0 for the lowest input voltages.

#### 1.12.3 Offset Error – Differential Channels

With differential channels, the offset measurement can be performed much easier since no external input voltage is required. The two differential inputs can be connected to the same voltage internally and the resulting output value is then the offset error. Since this method gives no exact information on where the first transition occurs, it gives an error of  $\frac{1}{2}$  to 1 LSB (worst case).

To compensate for offset errors when using differential channels, subtract the offset error from every measured value.

In signed mode compensating for offset error caused by temperature, VCC or reference drift can easily be done using two channels. E.g. set the ADC channel 0 MUXPOS to ADC pin 0 and MUXNEG to ADC pin 1. With channel 1 you do the opposite, set MUXPOS to ADC pin 1 and MUXNEG to ADC pin 0. Channel 0 should give you a positive value and channel 1 should give you a negative value.

From these values you should get a real-time offset compensated result by applying this formula: (CH0 + CH1\*-1)/2.

#### 1.12.4 Gain Error


The gain error is defined as the deviation of the last output step's midpoint from the ideal straight line, after compensating for offset error.


After compensating for offset errors, applying an input voltage of 0 always give an output value of 0. However, gain errors cause the actual transfer function slope to deviate from the ideal slope. This gain error can be measured and compensated for by scaling the output values.

Run-time compensation often uses integer arithmetic, since floating point calculation takes too long to perform. Therefore, to get the best possible precision, the slope deviation should be measured as far from 0 as possible. The larger the values, the better precision you get. This is described in detail later in this document.

The example of a 3-bit ADC transfer functions with gain errors is shown in the figure below. The following description holds for both single-ended and differential modes.

Figure 1-13. Examples of Positive (A) and Negative (B) Gain Errors

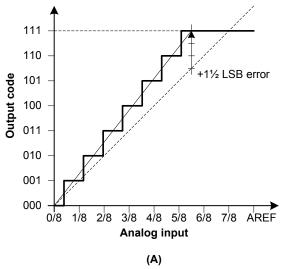

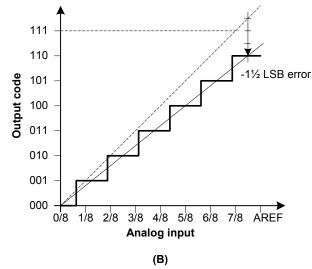



To measure the gain error, the input value is increased from 0 until the last output step is reached. The scaling factor for gain compensation equals the ideal output value for the midpoint of the last step divided by the actual value of the step.

# 1.12.5 Non-Linearity

When offset and gain errors are compensated, the actual transfer function should be equal to the transfer function of perfect ADC. However, non-linearity in the ADC may cause the actual curve to deviate slightly from the perfect curve, even if the two curves are equal around 0 and at the point where the gain error was measured. There are two methods for measuring non-linearity, both described below. The figure below shows examples of both measurements.

Figure 1-14. Example of Non-Linear ADC Conversion Curve

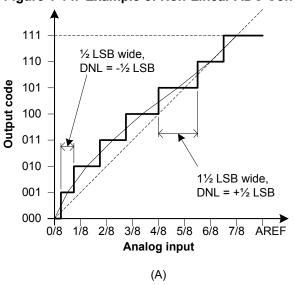

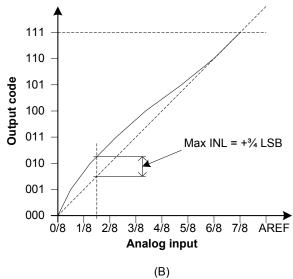

#### 1.12.6 Differential Non-Linearity

Differential Non-Linearity (DNL) is defined as the maximum and minimum difference between the step width and the perfect width (1 LSB) of any output step.

Non-linearity produces quantization steps with varying widths. All steps should be 1 LSB wide, but some are narrower or wider.

To measure DNL, a ramp input voltage is applied and all output value transitions are recorded. The step lengths are found from the distance between the transitions, and the most positive and negative deviations from 1 LSB are used to report the maximum and minimum DNL.

### 1.12.7 Integral Non-Linearity

Integral Non-Linearity (INL) is defined as the maximum vertical difference between the actual and the perfect curve.

INL can be interpreted as a sum of DNLs. E.g. several consecutive negative DNLs raise the actual curve above the perfect curve as shown in Figure 1-14. Negative INLs indicate that the actual curve is below the perfect curve.

The maximum and minimum INL are measured using the same ramp input voltage as in DNL measurement. Record the deviation at each conversion step midpoint and report the most positive and negative deviations as maximum and minimum INL.

### 1.12.8 Measurements and Compensation

It is important that DNL and INL values are measured after offset and gain error compensation. If not, the results will be infected by the offset and gain error and thus not reveal the true DNL and INL.

Non-linearity cannot be compensated for with simple calculations. Polynomial approximations or table lookups can be used for that purpose. However, the typical DNL and INL values are less than ±2 LSB for the 12-bit ADC of the XMEGA, and are rarely of any concern in real life applications.

## 1.12.9 Decoupling

To get stable results, we need decoupling. This is needed both for the analog signals measured and for the reference used.

To be able to have a common reference for all signals measured over time, the voltage reference has to be exactly the same. To achieve this, the reference has to be decoupled with a large capacitor. For internal references this is not directly possible, but the AVCC and VCC have to be decoupled sufficiently. For both AVCC and for the external references, decoupling and filtering should be done. Using a filter inductor and a large capacitor will help keeping the reference stable. The larger the capacitor, the better stability is achieved. A 1  $\mu$ F or larger capacitor is recommended. When using the ADC you have to wait until the capacitor is fully charged and stable, before any measurements can be done. The time until stable has to be calculated from the rise time of the RC connection of the capacitor.

For the analog signals, decoupling should also be done. When having single-ended signals, the decoupling should be done between the signal and ground and for differential signals the decoupling has to be between the positive and negative input. Decoupling of the signals is a more complex situation than the reference and this has to take the signals into account. If the signals are switching fast, the decoupling capacitor has to be lower. The decoupling capacitor should be as high as possible without changing the rise and fall time of the signal. It is therefore hard to give an exact value for the decoupling, and this has to be calculated as an RC circuit.

#### 1.12.10 Source Impedance

This is a very common problem when doing ADC designs. The source impedance is the sources capability to deliver charge to the internal sampling capacitor fast enough. If the internal capacitor is not charged to the same level as the analog signal, the result will be wrong.

When using a direct connection from a sensor IC, the impedance is usually stated in the data sheet of the device and it is easy to adjust the speed for the given impedance. When the circuitry is made up by passive components, calculations have to be done to find the actual source impedance. For example, a resistor ladder dividing a high voltage down to a voltage that can be handled by the microcontroller can have very high impedance as large resistors are used to get the voltage sufficiently down. The solution is to either lower the sample rate to be able to measure the correct signal, or to lower the resistance value. Lowering the resistance would cause more leakage current and this can again be solved by adding switching FET to enable and disable the analogue source. An example of this can be seen in the figure below.

Another thing to be aware of in such an application is the time for the source to be stable, as the decoupling will take some time to charge to the correct level after enabling the analog source.

Figure 1-15. Schematic V4 4.2V V2 4.2V V3 4.2V V1 ,4.2V PWR R5 R3 R1 R7 320k 740k 1160k 1580k **M3 M2 M1** NMOS NMOS **NMOS** FET CTRL C9 C8 C7 C5 R8 R6 R4 R2 100k 100k 100k 100k

#### 1.13 Tips for Improving Accuracy

The accuracy of the AVR XMEGA ADC depends on the quality of the input signals and power supplies. The following items should be taken into consideration for best possible accuracy of the ADC measurements:

- Understand the ADC, its features and how they are intended used
- Understand the applications requirements
- Make sure the source impedance is not too high compared to the sampling rate that is used. If the source impedance is too high, the internal sampling capacitor will not be charged to the correct level and the result will not be accurate.
- It is important to take great care when designing the analog signal paths like analog reference (VREF) and analog power supply (AVCC). Filtering should be used if the analog power supply is connected to the digital power supply.
- Avoid having the analog signal path close to a digital signal path with high switching noise (i.e. communication lines, clock signals)
- Consider decoupling of the analog signal. Decoupling between signal and ground for single ended inputs and decoupling between the differential signal pair for differential measurements.
- Try toggling as few pins as possible while the ADC is converting to avoid switching noise internally and on power supply. The ADC is most sensitive to switching the I/O pins that are powered by the analog power supply (PORTA/PORTB).
- Switch off unused peripherals by setting PRR registers to eliminate noise from unused peripherals

**Application Note** DS00002535A-page 21 © 2017 Microchip Technology Inc.

- Put the XMEGA in the "Idle" sleep mode directly after starting the ADC conversion to reduce noise from the CPU
- Load the calibration values from the signature row into the calibration register in the ADC
- Use the lowest gain possible to avoid amplifying external noise
- Wait until the ADC, reference, or sources are stabilized before sampling as some sources (e.g. bandgap) need time to stabilize after they are enabled
- Apply offset and gain calibration to the measurement
- · Use over-sampling to increase resolution and eliminate random noise
- JTAG debugging interface create a lot of noise and should not be used while debugging an ADC application

For randomly distributed noise, using oversampling will help reducing any noise and improve accuracy. Using 8x oversampling will increase resolution by two bits and due to the pipelined design of the ADC it will take only eight additional ADC clock cycles. See the "AVR121: Enhancing ADC resolution by oversampling" application note for more information on oversampling.

# 2. Getting Started

This chapter walks you through the basic steps for getting up and running with simple conversion and experimenting with MUX settings. The necessary registers are described along with relevant bit settings.

**Note:** This chapter only covers manual polling of status bits. Interrupt control is not covered, but is an easy step after studying the "AVR1305: XMEGA Interrupts and the Programmable Multi-level Interrupt Controller" application note.

# 2.1 Single Conversion

Task: One single-ended conversion of ADC input 1 using virtual channel 2.

- Configure the Input Mode bitfield (INPUTMODE) in Channel 2 Control Register (CH2CTRL) equal to 0x01 to select single-ended input
- Configure the MUX Positive Input bitfield (MUXPOS) in Channel 2 MUX Control Register (CH2MUXCTRL) equal to 0x01 to select ADC input 1
- Configure the Enable bit (ENABLE) in Control Register A (CTRLA) to enable the ADC module without calibrating. Wait for the ADC start-up time (typical max. 24 ADC clocks).
- Configure the Start Conversion bit for channel 2 (CH2START) in Control Register A (CTRLA) to start a single conversion
- Wait for the Interrupt Flag bit for channel 2 (CH2IF) in the Interrupt Flags register (INTFLAGS) to be set, indicating that the conversion is finished
- Read the Result register pair for channel 2 (CH2RESL/CH2RESH) to get the 12-bit conversion result as a 2-byte value

## 2.2 Multiple Channels

Task: One single-ended conversion of ADC input 3 and 6 using virtual channel 1 and 3.

- Configure the Input Mode bitfield (INPUTMODE) in Channel 1 Control Register (CH1CTRL) and Channel 3 Control Register (CH3CTRL) equal to 0x01 to select single-ended input on both channels
- Configure the MUX Positive Input bitfield (MUXPOS) in the MUX Control Register for channel 1 and 3 (CH1MUXCTRL and CH3MUXCTRL) equal to 0x03 and 0x06 respectively
- Configure the Enable bit (ENABLE) in Control Register A (CTRLA) to enable the ADC module without calibrating. Wait for the ADC start-up time (typical max. 24 ADC clocks).
- Configure the Start Conversion bit for channel 1 and 3 (CH1START and CH3START) in Control Register A (CTRLA) to start two conversions
- Wait for the Interrupt Flag bits for channel 1 and 3 (CH1IF and CH3IF) in the Interrupt Flags register (INTFLAGS) to be set, indicating that the conversions are finished
- Read the Result register pair for channel 1 and 3 (CH1RESL/CH1RESH and CH3RESL/ CH3RESH) to get the 12- bit conversion results as 2-byte values

## 2.3 Free-Running Mode

Task: Free-running differential conversion on channel 0, using ADC0 and ADC3 as positive and negative inputs.

 Configure the MUX Positive Input and MUX Negative Input bitfields (MUXPOS and MUXNEG) in Channel 0 (CH0MUXCTRL) to 0x00 and 0x03 respectively

- Configure the Free Run bit (FREERUN) in Control Register B (CTRLB) to enable free running mode
- Configure the Enable bit (ENABLE) in Control Register A (CTRLA) to enable the ADC module without calibrating. Wait for the ADC start-up time (typical max. 24 ADC clocks)
- Optionally, wait for the Interrupt Flag bit for channel 0 (CH0IF) in the Interrupt Flags register (INTFLAGS) to be set, indicating that a new conversion is finished. Clear the flag by writing a 1 to it, as it is going to be used later.
- Read the Result register pair for channel 0 (CH0RESL/CH0RESH) to retrieve the latest 12-bit conversion results as a 2-byte value

**Note:** It is not strictly required to wait for the interrupt flag when using free-running mode. However, to make sure that a new conversion is done, wait for the flag, clear it, and then read the result. Also note that it is recommended to use the Free-Running Mode together with DMA data transfer to offload work from the CPU.

# 3. Advanced Features

This chapter introduces more advanced features and possibilities with the ADC. In-depth treatment is outside the scope of this application note and the user is advised to study the device data sheet and relevant application notes.

## 3.1 DMA Controller

Instead of using interrupt handlers to read and process the result registers, it is possible to use the AVR XMEGA DMA Controller to move data from one or more result registers to memory buffers or other peripheral modules. This moving of data is done without CPU intervention, and leaves the CPU ready for other tasks, even without having to execute interrupt handlers.

For more information, refer to the device data sheet or the "AVR1304: Using the XMEGA DMA Controller" application note.

# 3.2 Event System

To improve conversion timing and further offload work from the CPU, the ADC is connected to the XMEGA Event System. This makes it possible to use incoming events to trigger single conversions or conversion sweeps across several channels. The ADC conversion complete conditions also serve as event sources available for other peripheral modules connected to the event system.

For more information, refer to the device data sheet or the "AVR1001: Getting Started with the XMEGA Event System" application note.

# 4. Get Source Code from Atmel | START

The example code is available through Atmel | START, which is a web-based tool that enables configuration of application code through a Graphical User Interface (GUI). The code can be downloaded for both Atmel Studio 7 and IAR Embedded Workbench® via the direct example code-link(s) below, or the BROWSE EXAMPLES button on the Atmel | START front page.

Atmel | START web page: http://start.atmel.com/

#### **Example Code**

XMEGA ADC Polled, XMEGA ADC Interrupt: http://start.atmel.com/

Press *User guide* in Atmel | START for details and information about example projects. The *User guide* button can be found in the example browser, and by clicking the project name in the dashboard view within the Atmel | START project configurator.

#### **Atmel Studio**

Download the code as an .atzip file for Atmel Studio from the example browser in Atmel | START, by clicking *DOWNLOAD SELECTED EXAMPLE*. To download the file from within Atmel | START, click *EXPORT PROJECT* followed by *DOWNLOAD PACK*.

Double-click the downloaded .atzip file and the project will be imported to Atmel Studio 7.

#### IAR Embedded Workbench

For information on how to import the project in IAR Embedded Workbench, open the Atmel | START User guide, select *Using Atmel Start Output in External Tools*, and *IAR Embedded Workbench*. A link to the Atmel | START user guide can be found by clicking *About* from the Atmel | START front page or *Help And Support* within the project configurator, both located in the upper right corner of the page.

# 5. Revision History

Doc. Rev.	Date	Comments		
A	08/2017	<ul> <li>Converted to Microchip format and replaced the Atmel document number 8032I</li> <li>A general update of the document</li> </ul>		
8032I	05/2013	Chapter 3.4.5 has been changed. Also several other minor changes have been made. A new template is applied		
8032H	12/2010	Doxygen updated		
8032G	12/2010	Typos fixed		
8032F	11/2010	Minor typos fixed		
8032E	10/2010	Several corrections and a new section in chapter 3.12.3 is added		
8032D	02/2010	Minor typos fixed		
8032C	09/2009	Figures updated		
8032B	08/2009	Several changes and updates		
8032A	10/2008	Initial document release		

# The Microchip Web Site

Microchip provides online support via our web site at <a href="http://www.microchip.com/">http://www.microchip.com/</a>. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- Product Support Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- General Technical Support Frequently Asked Questions (FAQ), technical support requests, online discussion groups, Microchip consultant program member listing
- Business of Microchip Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

# **Customer Change Notification Service**

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at <a href="http://www.microchip.com/">http://www.microchip.com/</a>. Under "Support", click on "Customer Change Notification" and follow the registration instructions.

# **Customer Support**

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or Field Application Engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: http://www.microchip.com/support

# Microchip Devices Code Protection Feature

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.

 Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

# **Legal Notice**

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

## **Trademarks**

The Microchip name and logo, the Microchip logo, AnyRate, AVR, AVR logo, AVR Freaks, BeaconThings, BitCloud, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, Heldo, JukeBlox, KeeLoq, KeeLoq logo, Kleer, LANCheck, LINK MD, maXStylus, maXTouch, MediaLB, megaAVR, MOST, MOST logo, MPLAB, OptoLyzer, PIC, picoPower, PICSTART, PIC32 logo, Prochip Designer, QTouch, RightTouch, SAM-BA, SpyNIC, SST, SST Logo, SuperFlash, tinyAVR, UNI/O, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

ClockWorks, The Embedded Control Solutions Company, EtherSynch, Hyper Speed Control, HyperLight Load, IntelliMOS, mTouch, Precision Edge, and Quiet-Wire are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, Anyln, AnyOut, BodyCom, chipKIT, chipKIT logo, CodeGuard, CryptoAuthentication, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, Inter-Chip Connectivity, JitterBlocker, KleerNet, KleerNet logo, Mindi, MiWi, motorBench, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PureSilicon, QMatrix, RightTouch logo, REAL ICE, Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2017, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN: 978-1-5224-2074-3

# **Quality Management System Certified by DNV**

#### ISO/TS 16949

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.



# **Worldwide Sales and Service**

AMERICAS	ASIA/PACIFIC	ASIA/PACIFIC	EUROPE
Corporate Office	Asia Pacific Office	China - Xiamen	Austria - Wels
2355 West Chandler Blvd.	Suites 3707-14, 37th Floor	Tel: 86-592-2388138	Tel: 43-7242-2244-39
Chandler, AZ 85224-6199	Tower 6, The Gateway	Fax: 86-592-2388130	Fax: 43-7242-2244-393
Tel: 480-792-7200	Harbour City, Kowloon	China - Zhuhai	Denmark - Copenhagen
Fax: 480-792-7277	Hong Kong	Tel: 86-756-3210040	Tel: 45-4450-2828
Technical Support:	Tel: 852-2943-5100	Fax: 86-756-3210049	Fax: 45-4485-2829
http://www.microchip.com/	Fax: 852-2401-3431	India - Bangalore	Finland - Espoo
support	Australia - Sydney	Tel: 91-80-3090-4444	Tel: 358-9-4520-820
Web Address:	Tel: 61-2-9868-6733	Fax: 91-80-3090-4123	France - Paris
www.microchip.com	Fax: 61-2-9868-6755	India - New Delhi	Tel: 33-1-69-53-63-20
Atlanta	China - Beijing	Tel: 91-11-4160-8631	Fax: 33-1-69-30-90-79
Duluth, GA	Tel: 86-10-8569-7000	Fax: 91-11-4160-8632	France - Saint Cloud
Tel: 678-957-9614	Fax: 86-10-8528-2104	India - Pune	Tel: 33-1-30-60-70-00
Fax: 678-957-1455	China - Chengdu	Tel: 91-20-3019-1500	Germany - Garching
Austin, TX	Tel: 86-28-8665-5511	Japan - Osaka	Tel: 49-8931-9700
Tel: 512-257-3370	Fax: 86-28-8665-7889	Tel: 81-6-6152-7160	Germany - Haan
Boston	China - Chongqing	Fax: 81-6-6152-9310	Tel: 49-2129-3766400
Westborough, MA	Tel: 86-23-8980-9588	Japan - Tokyo	Germany - Heilbronn
Tel: 774-760-0087	Fax: 86-23-8980-9500	Tel: 81-3-6880- 3770	Tel: 49-7131-67-3636
Fax: 774-760-0088	China - Dongguan	Fax: 81-3-6880-3771	Germany - Karlsruhe
Chicago	Tel: 86-769-8702-9880	Korea - Daegu	Tel: 49-721-625370
Itasca, IL	China - Guangzhou	Tel: 82-53-744-4301	Germany - Munich
Tel: 630-285-0071	Tel: 86-20-8755-8029	Fax: 82-53-744-4302	Tel: 49-89-627-144-0
Fax: 630-285-0075	China - Hangzhou	Korea - Seoul	Fax: 49-89-627-144-44
Dallas	Tel: 86-571-8792-8115	Tel: 82-2-554-7200	Germany - Rosenheim
Addison, TX	Fax: 86-571-8792-8116	Fax: 82-2-558-5932 or	Tel: 49-8031-354-560
Tel: 972-818-7423	China - Hong Kong SAR	82-2-558-5934	Israel - Ra'anana
Fax: 972-818-2924	Tel: 852-2943-5100	Malaysia - Kuala Lumpur	Tel: 972-9-744-7705
Detroit	Fax: 852-2401-3431	Tel: 60-3-6201-9857	Italy - Milan
Novi, MI	China - Nanjing	Fax: 60-3-6201-9859	Tel: 39-0331-742611
Tel: 248-848-4000	Tel: 86-25-8473-2460	Malaysia - Penang	Fax: 39-0331-466781
Houston, TX	Fax: 86-25-8473-2470	Tel: 60-4-227-8870	Italy - Padova
Tel: 281-894-5983	China - Qingdao	Fax: 60-4-227-4068	Tel: 39-049-7625286
Indianapolis	Tel: 86-532-8502-7355	Philippines - Manila	Netherlands - Drunen
Noblesville, IN	Fax: 86-532-8502-7205	Tel: 63-2-634-9065	Tel: 31-416-690399
Tel: 317-773-8323	China - Shanghai	Fax: 63-2-634-9069	Fax: 31-416-690340
Fax: 317-773-5453	Tel: 86-21-3326-8000	Singapore	Norway - Trondheim
Tel: 317-536-2380	Fax: 86-21-3326-8021	Tel: 65-6334-8870	Tel: 47-7289-7561
Los Angeles	China - Shenyang	Fax: 65-6334-8850	Poland - Warsaw
Mission Viejo, CA	Tel: 86-24-2334-2829	Taiwan - Hsin Chu	Tel: 48-22-3325737
Tel: 949-462-9523	Fax: 86-24-2334-2393	Tel: 886-3-5778-366	Romania - Bucharest
Fax: 949-462-9608	China - Shenzhen	Fax: 886-3-5770-955	Tel: 40-21-407-87-50
Tel: 951-273-7800	Tel: 86-755-8864-2200	Taiwan - Kaohsiung	Spain - Madrid
Raleigh, NC	Fax: 86-755-8203-1760	Tel: 886-7-213-7830	Tel: 34-91-708-08-90
Tel: 919-844-7510	China - Wuhan	Taiwan - Taipei	Fax: 34-91-708-08-91
New York, NY	Tel: 86-27-5980-5300	Tel: 886-2-2508-8600	Sweden - Gothenberg
Tel: 631-435-6000	Fax: 86-27-5980-5118	Fax: 886-2-2508-0102	Tel: 46-31-704-60-40
San Jose, CA	China - Xian	Thailand - Bangkok	Sweden - Stockholm
Tel: 408-735-9110	Tel: 86-29-8833-7252	Tel: 66-2-694-1351	Tel: 46-8-5090-4654
Tel: 408-436-4270	Fax: 86-29-8833-7256	Fax: 66-2-694-1350	UK - Wokingham
Canada - Toronto			Tel: 44-118-921-5800
Tel: 905-695-1980			Fax: 44-118-921-5820
Fax: 905-695-2078			
	I	T. Control of the con	I