

**DG0841**  
**Demo Guide**  
**PolarFire Burst Mode Receiver**



---

a  MICROCHIP company



a  MICROCHIP company

**Microsemi Headquarters**

One Enterprise, Aliso Viejo,  
CA 92656 USA

Within the USA: +1 (800) 713-4113

Outside the USA: +1 (949) 380-6100

Sales: +1 (949) 380-6136

Fax: +1 (949) 215-4996

Email: [sales.support@microsemi.com](mailto:sales.support@microsemi.com)

[www.microsemi.com](http://www.microsemi.com)

©2018 Microsemi, a wholly owned subsidiary of Microchip Technology Inc. All rights reserved. Microsemi and the Microsemi logo are registered trademarks of Microsemi Corporation. All other trademarks and service marks are the property of their respective owners.

Microsemi makes no warranty, representation, or guarantee regarding the information contained herein or the suitability of its products and services for any particular purpose, nor does Microsemi assume any liability whatsoever arising out of the application or use of any product or circuit. The products sold hereunder and any other products sold by Microsemi have been subject to limited testing and should not be used in conjunction with mission-critical equipment or applications. Any performance specifications are believed to be reliable but are not verified, and Buyer must conduct and complete all performance and other testing of the products, alone and together with, or installed in, any end-products. Buyer shall not rely on any data and performance specifications or parameters provided by Microsemi. It is the Buyer's responsibility to independently determine suitability of any products and to test and verify the same. The information provided by Microsemi hereunder is provided "as is, where is" and with all faults, and the entire risk associated with such information is entirely with the Buyer. Microsemi does not grant, explicitly or implicitly, to any party any patent rights, licenses, or any other IP rights, whether with regard to such information itself or anything described by such information. Information provided in this document is proprietary to Microsemi, and Microsemi reserves the right to make any changes to the information in this document or to any products and services at any time without notice.

**About Microsemi**

Microsemi, a wholly owned subsidiary of Microchip Technology Inc. (Nasdaq: MCHP), offers a comprehensive portfolio of semiconductor and system solutions for aerospace & defense, communications, data center and industrial markets. Products include high-performance and radiation-hardened analog mixed-signal integrated circuits, FPGAs, SoCs and ASICs; power management products; timing and synchronization devices and precise time solutions, setting the world's standard for time; voice processing devices; RF solutions; discrete components; enterprise storage and communication solutions, security technologies and scalable anti-tamper products; Ethernet solutions; Power-over-Ethernet ICs and midspans; as well as custom design capabilities and services. Learn more at [www.microsemi.com](http://www.microsemi.com).

# Contents

---

<b>1</b>	<b>Revision History</b>	<b>1</b>
1.1	Revision 1.0	1
<b>2</b>	<b>PolarFire FPGA Burst Mode Receiver</b>	<b>7</b>
2.1	Prerequisite	7
2.2	Design Requirement	7
2.3	Demo Design	8
2.3.1	Design Implementation	9
2.4	Port Description	13
2.4.1	Clocking Structure	14
2.5	Simulating the PolarFire BMR Design	15
2.5.1	Simulation Flow	15
<b>3</b>	<b>Libero Design Flow</b>	<b>18</b>
3.1	Synthesize	18
3.2	Place and Route	19
3.3	Verify Timing	21
3.4	Generate Bitstream	21
3.5	Run PROGRAM Action	22
<b>4</b>	<b>Programming the Device Using FlashPro</b>	<b>23</b>
<b>5</b>	<b>Running the Demo</b>	<b>25</b>
5.1	Installing the GUI	25
5.2	Running the Demo Design	25

# Tables

---

Table 1	Design Requirements .....	7
Table 2	CDR Modes .....	11
Table 3	I/O Signals .....	13
Table 4	Clocks Used .....	14
Table 5	Resource Utilization .....	20
Table 6	Jumper Settings .....	22

# Figures

---

Figure 1	Demo Design	8
Figure 2	BM Transmitter Subsystem—SmartDesign	9
Figure 3	BM Upstream Burst Data Format	9
Figure 4	BM Receiver —SmartDesign	10
Figure 5	UART—SmartDesign	12
Figure 6	Clocking Structure—UART	14
Figure 7	Use Automatic DO File Option Selected	15
Figure 8	Simulate Option in Libero Design Flow	15
Figure 9	Testbench and BMR Demo Design Interaction	16
Figure 10	Simulation Waveform	17
Figure 11	Libero Design Flow Options	18
Figure 12	Edit with I/O Editor Option	19
Figure 13	I/O Editor Transceiver View	19
Figure 14	Component Locations Updated in user.pdc File	20
Figure 15	Verify Timing	21
Figure 16	Timing Report	21
Figure 17	PolarFire Evaluation Board Setup	22
Figure 18	FlashPro New Project Window	23
Figure 19	Programming File Details in FlashPro	24
Figure 20	Programming Passed	24
Figure 21	Before Connection	25
Figure 22	After Connection	26
Figure 23	Packed Received and Checked	26
Figure 24	Inject Error	27
Figure 25	Error Report	27
Figure 26	Clear Error	28
Figure 27	No Error Status	28

# 1 Revision History

---

The revision history describes the changes that were implemented in the document. The changes are listed by revision, starting with the current publication.

## 1.1 Revision 1.0

The first publication of this document.

## 2 PolarFire FPGA Burst Mode Receiver

Microsemi PolarFire FPGA enables high-speed, point-to-multipoint communication technologies such as XGSPON by implementing a fast Burst Mode Receiver (BMR). The Microsemi PolarFire transceiver is uniquely equipped with the Burst Mode receiver, which can handle Burst data with inter-packet gaps. This feature enables the high speed transceivers to stay in lock when there is no data present and re-synchronize to the incoming data when the data is present on the receive serial lines.

This document describes how to run a 10Gbps BMR demo design on the PolarFire® Evaluation kit hardware. The reference design is created using the PolarFire high-speed transceiver blocks. It operates in loopback mode by sending the BM transmitter (TX) data to the BM Receiver (RX) through the transceiver lanes. A GUI application is packaged along with the design files to run the demo. The demo uses on-board transceiver loopback traces and hence external high speed cables are not required to run the demo.

### 2.1 Prerequisite

Before you start:

- Download the demo design .stp file and the GUI installer from the following location:  
[http://soc.microsemi.com/download/rsc/?f=mpf\\_dg0841\\_liberosocpolarfirev2p3](http://soc.microsemi.com/download/rsc/?f=mpf_dg0841_liberosocpolarfirev2p3)

**Note:** For Libero Design source files contact SOC Tech-support.

- Download and install Libero SoC PolarFire v2.3 on the host PC from the following location:  
<https://www.microsemi.com/product-directory/design-resources/3863-libero-soc-polarfire#downloads>

The latest versions of ModelSim and Synplify Pro are included in the Libero SoC PolarFire installation package.

### 2.2 Design Requirement

The following table lists the resources required to run the demo.

**Table 1 • Design Requirements**

Requirement	Version
Operating System	Windows 7, 8.1, or 10
<b>Hardware</b>	
PolarFire Evaluation Kit (MPF300-EVAL- KIT):	Rev C or later with MPF300T Production devices <sup>1</sup>
<ul style="list-style-type: none"> <li>PolarFire Evaluation Board</li> <li>12 V/5 A power adapter</li> <li>USB 2.0 A-male to mini-B cable for programming and interfacing with GUI</li> </ul>	
<b>Software</b>	
Libero SoC PolarFire	v2.3
FlashPro	v2.3
ModelSim	ME 10.5 Pro

- Note: This demo is not supported on MPF300TES or MPF300XT devices.


## 2.3 Demo Design

The PolarFire BMR demo design is developed to showcase the various CDR modes of transceiver operating at 10Gbps. In this reference design:

1. BM Transmitter subsystem interfaces with the GUI. The GUI enables/disables the data transfer through BM transmitter packet generator. The frame format of the packet is as shown in [Figure 3](#), page 9.
2. BM Receiver subsystem receives the looped back burst data and passes the same to BM packet checker.
3. BM Packet checker detects the delimiter patterns and aligns the data to check for any sequence, CRC or payload errors.
4. The BM receiver subsystem also controls the CDR lock modes as described in [CDR Lock Mode Controller](#), page 11.
5. GUI interacts with the design through UART subsystem interface to log and display the link and error status of the BMR design.

The following figure shows the top-level block diagram of the BMR demo design.

**Figure 1 • Demo Design**

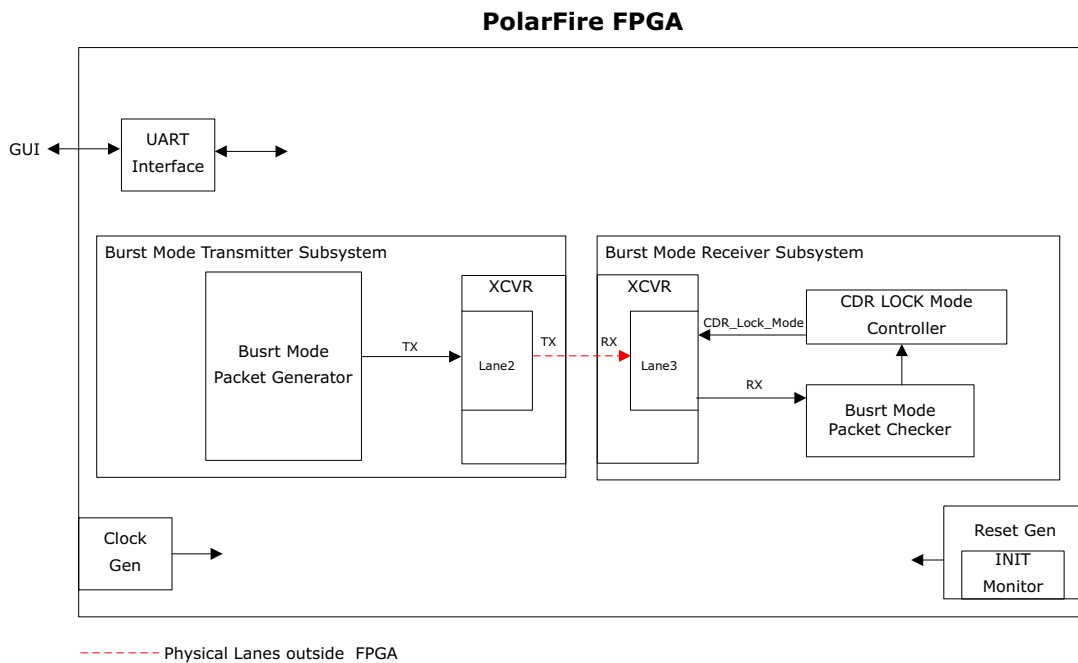

## 2.3.1 Design Implementation

The Top-Level design includes the following SmartDesign components.

- BM Transmitter Subsystem, page 9
- BM Receiver Subsystem, page 10
- UART Subsystem, page 12


### 2.3.1.1 BM Transmitter Subsystem

The BM\_TRANSMITTER\_SUBSYSTEM generates the Burst data using the inputs provided by the user Interface and converts the parallel data in to serial using a PF\_XCVR.

The Subsystem has two main components:

- BM Packet Generator
- BM Transmitter(PF\_XCVR)

Figure 2 • BM Transmitter Subsystem—SmartDesign

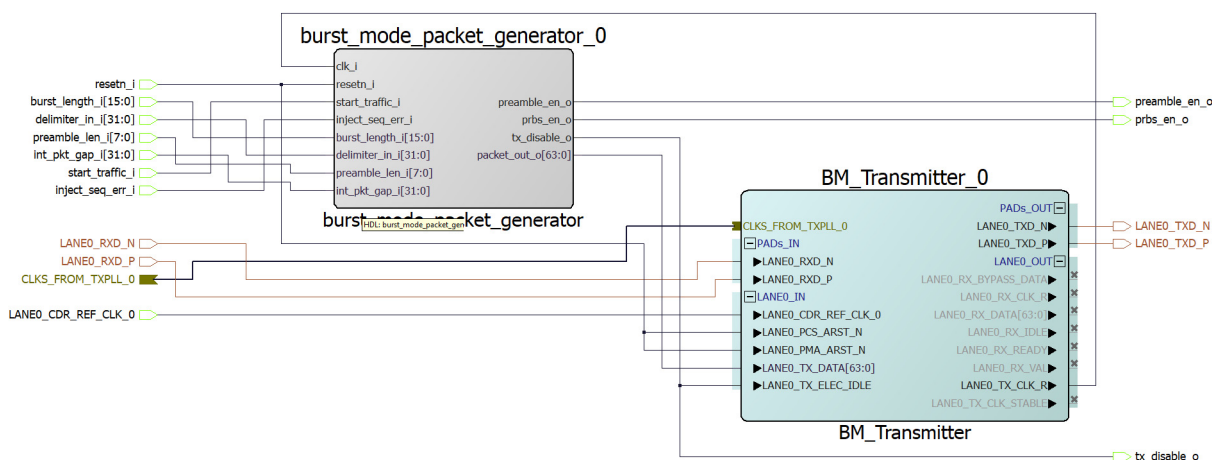


#### 2.3.1.1.1 BM Packet Generator

The BM packet generator consists of the following sub-modules:

- **Framer:** Frames a packet using the input preamble length, delimiter, burst length, burst sequence number, CRC-8 and payload.
- **Inter packet gap generator:** generates inter-packet gap using the variable inter-packet gap value from GUI
- **PRBS-31 generator:** PRBS-31 pattern is used as payload for the packet
- **CRC-8 calculator:** calculates CRC-8 based on the burst length and burst sequence number

A finite state machine in BM packet generator constructs a packet as described in following figure.

Figure 3 • BM Upstream Burst Data Format



Preamble: Configurable [64-8000] bits of alternating 1's and 0's pattern  
 IPG :Configurable (1-100000) clock cycles  
 D: 32-bit Delimiter fixed to 32'hA37670C9  
 S: 8-bit Sequence number, this value increments or each burst  
 L: 16-bit Burst Length, Input from GUI  
 CRC : 8-bit crc value computed using the Sequence number and the Burst length  
 Payload : Configurable (100-50000) words, where one word is 64 bits

When `start_traffic_i` is set to 1, the packet generator finite state machine starts framing a packet using the preamble, delimiter and payload data.

The finite state machine also generates the inter-packet gap using the `int_pkt_gap_i` input from the GUI which is used to enable/disable the `TX_ELEC_IDLE` signal of the `PF_XCVR`. During the IPG the `PF_XCVR` sends an electrical idle condition to emulate the output of squelched optics.

BM transmitter packet generator can induce the errors in sequence number generation using the `inject_seq_err_i` signal. This error injection is provided to demonstrate a logical error from the transmitter to the receiver when the demo is running and passing error free data.

### 2.3.1.1.2 BM Transmitter

The PolarFire high-speed transceiver (PF\_XCVR) is a Hard IP block and supports data rates from 500 Mbps to 12.5 Gbps. The transceiver is configured for:

- 10Gbps data rate
- 64-bit fabric interface at 156.25MHz
- PMA mode (no data encoding)
- TX\_ELEC\_IDLE port provided

Transmitter generates electrical idle during IPG using the TX\_ELEC\_IDLE port.

The transmitter transceiver is a unique physical lane from the receiver transceiver.


### 2.3.1.2 BM Receiver Subsystem

The `BM_RECEIVER_SUBSYSTEM` receives the burst data from `PF_XCVR` interface configured in Burst mode receiver mode. It then sends the received parallel data to burst mode packet checker to perform data integrity checks and to cdr lock mode controller to set the cdr lock modes, for more info on CDR lock modes, see [CDR Lock Mode Controller](#), page 11.

The `BM_RECEIVER_SUBSYSTEM` contains three main components.

- BM Receiver (PF\_XCVR configured as Burst mode receiver)
- Burst mode packet checker
- CDR lock mode controller

Figure 4 • BM Receiver —SmartDesign

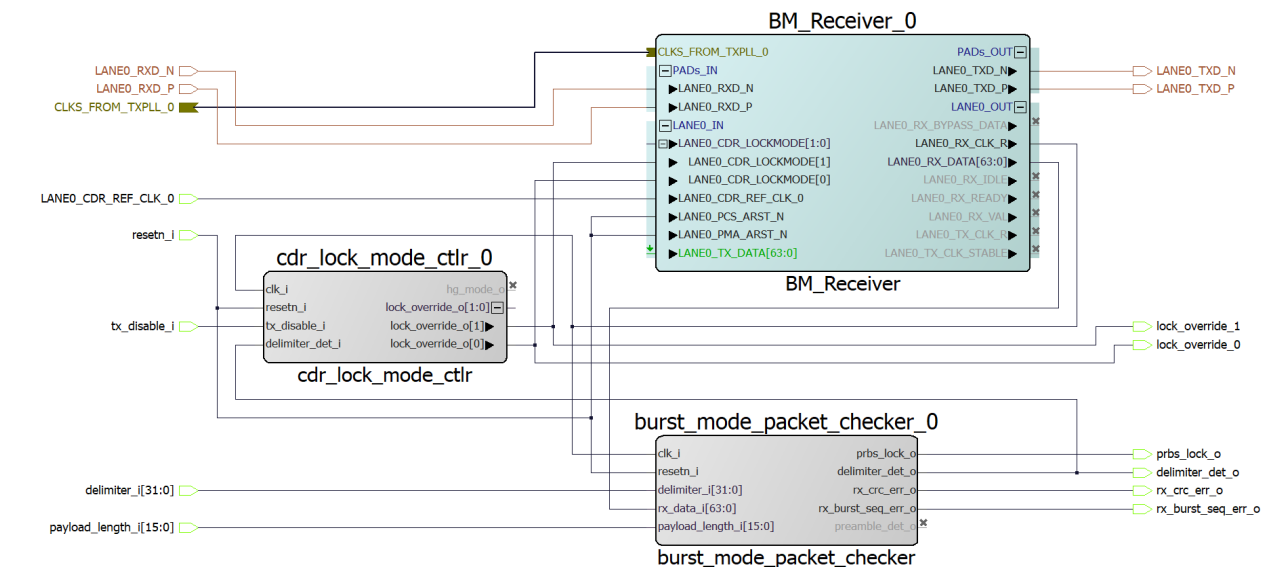

### 2.3.1.2.1 BM Packet Checker

The packet checker receives the parallel data from PF\_XCVR and detects the delimiter pattern. Packet checker also performs PRBS-31 rx data integrity and crc checks.

The BM Receiver packet checker consists of the following logic blocks:

1. **Pattern detector:** detects the delimiter pattern in the incoming `rx_data`.
2. **Word aligner:** aligns the `rx_data` with respect to the detected pattern location.
3. **Data extractor:** Extracts the sequence number, CRC value and payload data and passes to respective checkers.
4. **Internal Sequence number generator:** generates sequence number internally to compare it with the received sequence number.
5. **Internal CRC generator:** generates CRC data using sequence number and burst length to compare it with the received CRC data.
6. **Payload checker:** generates PRBS-31 data to compare it with the received payload.

### 2.3.1.2.2 CDR Lock Mode Controller

CDR Lock Mode Controller switches the transceiver CDR mode by driving the `LANE0_CDR_LOCKMODE[1:0]` signal.

The following table describes the various CDR modes.

**Table 2 • CDR Modes**

<code>LANE0_CDR_LOCKMODE[1:0]</code>	Description
2'b11	<b>Normal mode:</b> This is the normal CDR behavior for continuous data. The CDR is locking to the received data stream.
2'b01	<b>High Gain mode:</b> The CDR gain is set to 4x. This allows the CDR to react faster to phase differences of the incoming data. It is useful to quickly acquire a phase lock, but will increase jitter on the recovered clock. Used during preamble/delimiter detection phase. Once the delimiter has been identified the CDR should be switched to the normal mode for the remainder of the burst. The high gain mode has a minimum time to lock which can be found in the PolarFire datasheet. This is the time from when data is received till the CDR locks to the phase. The high gain mode also has a maximum time. The maximum time is the amount of time the CDR can remain in high gain mode without phase locking to the received data. The CDR will eventually unlock causing the recovered clock to stop if the CDR is held in high gain mode too long without phase locking. Once the CDR unlocks it will take some time to regain lock. The high gain max time and CDR PLL lock time can be found in the PolarFire datasheet.
2'b10	<b>Lock to Reference mode:</b> Demo design default at power-up. The CDR locks to the local reference clock, not the incoming receive data. This mode is used during the IPG to keep the CDR locked.

In the demo design, `LANE0_CDR_LOCKMODE[1:0]` changes its state as follows:

1. When `tx_disable_i` is asserted the CDR Lock Mode Controller forces the PF\_XCVR to switch to Lock to reference mode.
2. When `tx_disable_i` is de-asserted the CDR Lock Mode Controller forces the PF\_XCVR to switch to High Gain mode and remains in High Gain mode till the delimiter is detected in the BM packet checker.
3. When `delimiter_det_i` signal is asserted the CDR Lock Mode Controller forces the PF\_XCVR to switch to Normal mode and remains in Normal mode till the next time `tx_disable_i` is asserted.

If CDR lock mode controller does not receive `delimiter_det_i` signal from BM packet checker, then it utilizes a fail-safe feature to stay in High gain mode till the high gain timeout counter reaches its threshold.

**Note:** When CDR lock mode controller is utilizing the high gain timeout, the lock modes will be switching between High gain and Lock to reference to help the CDR PLL retain its lock.

### 2.3.1.2.3 BM Receiver

The PolarFire high-speed transceiver (PF\_XCVR) is a Hard IP block and supports data rates from 500 Mbps to 12.5 Gbps. The transceiver is configured for:

- 10Gbps data rate
- CDR using Burst Mode Receiver
- PMA mode (no data decoding)
- 64-bit fabric interface at 156.25MHz


### 2.3.1.3 UART Subsystem

The UART subsystem implements fabric UART logic to interface with GUI, which is used as a user interface for control and display status of the running design. The UART subsystem has three sub modules:

- UART RX interface
- UART TX interface
- CORE UART

The following figure shows the SmartDesign implementation of the UART system.

**Figure 5 • UART—SmartDesign**

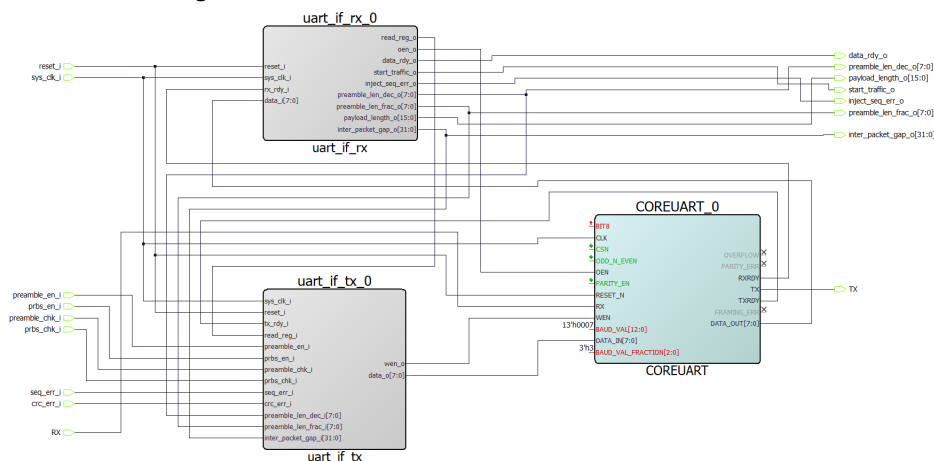

#### 2.3.1.3.1 UART RX Interface

The UART RX finite state machine receives the write request and write data from CORE\_UART and provides the following data to the BM Packet Generator.

- Preamble length
- Payload length
- Inter-packet gap length
- Start/Stop traffic control signal
- Inject sequence error signal

### 2.3.1.3.2 UART TX Interface

The UART TX interface finite state machine receives the following design status and provides the status to CORE\_UART upon receiving read request:

- Preamble enable status
- PRBS/Payload enable status
- Preamble/delimiter check status
- PRBS/Payload check status
- Sequence Error status and CRC error status
- Also read backs the use configured preamble length and interpacket gap values

### 2.3.1.3.3 CoreUART

CORE UART configured at baud value of 92100 and a 125Mhz clock is provided as reference which is generated from a on-chip 160 MHz RC oscillator.

## 2.4 Port Description

The following table lists the important I/O signals of the design.


**Table 3 • I/O Signals**

Port name	Direction	Description
LANE3_RXD_N	IN	BM Receiver XCVR inverted input
LANE3_RXD_P	IN	BM Receiver XCVR non-inverted input
LANE2_TXD_N	IN	BM Transmitter XCVR inverted input
LANE2_TXD_P	IN	BM Transmitter XCVR non-inverted input
REF_CLK_PAD_N	IN	Inverted reference clock obtained from on-board 125 MHz oscillator
REF_CLK_PAD_P	IN	Non-Inverted reference clock obtained from on-board 125 MHz oscillator
RESET_N_I	IN	Reset signal obtained from the SW10 push-button on the board
UART_RX_IF_I	IN	UART receiver interface
DEBUG_PIN_A2_O	OUT	Pin A2 of J7 header used for debug
DEBUG_PIN_A3_O	OUT	Pin A3 of J7 header used for debug
DEBUG_PIN_C3_O	OUT	Pin C3 of J7 header used for debug
DEBUG_PIN_C4_O	OUT	Pin C4 of J7 header used for debug
DEBUG_PIN_D3_O	OUT	Pin D3 of J7 header used for debug
DEBUG_PIN_D4_O	OUT	Pin D4 of J7 header used for debug
LANE3_TXD_N	OUT	BM Transmitter XCVR Inverted output (Not Used)
LANE3_TXD_P	OUT	BM Transmitter XCVR Non-Inverted output (Not Used)
LANE2_RXD_N	OUT	BM Receiver XCVR Inverted output (Not Used)
LANE2_RXD_P	OUT	BM Receiver XCVR Non-Inverted output (Not Used)
UART_TX_IF_O	OUT	UART transmitter Interface

## 2.4.1 Clocking Structure

In the reference design there are three clock domains RX\_CLK (156.25 Mhz) TX\_CLK(156.25 Mhz) and UART\_SYS\_CLK(125 Mhz).

**Figure 6 • Clocking Structure—UART**

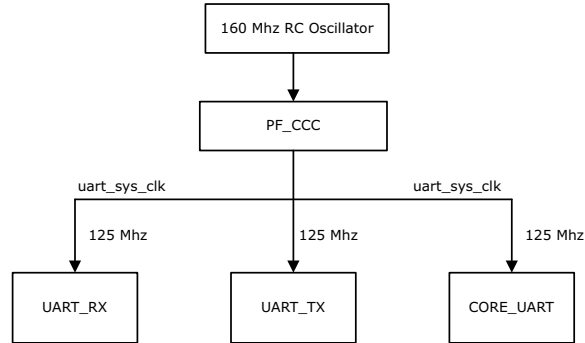

The following tables describes the clocks used in the demo design.

**Table 4 • Clocks Used**

	<b>Clock Name</b>	<b>Source</b>	<b>Frequency</b>
<b>BM Transmitter</b>	TX_CLK_R	Transceiver TX PLL clock (Lane2)	156.25 MHz
	RX_CLK_R	Transceiver RX recovered clock (Lane2)	
<b>BM Receiver</b>	TX_CLK_R	Transceiver TX PLL clock (Lane3)	156.25 MHz
	RX_CLK_R	Transceiver RX recovered clock (Lane3)	
<b>UART</b>	Sys Clock	From UART_REF_CLK_GEN_0	125 MHz

## 2.5 Simulating the PolarFire BMR Design

### 2.5.1 Simulation Flow


The design can be simulated using ModelSim ME 10.5C Pro provided with the Libero SoC PolarFire installation. The following sections describe the simulation flow.

#### 2.5.1.1 Initiating Simulation with ModelSim

To simulate the design using ModelSim:


1. In Libero SoC PolarFire, go to **Project > Project Settings > Simulation options > DO file**, and ensure the **Use automatic DO file** check box is selected, as shown in the following figure.

**Figure 7 • Use Automatic DO File Option Selected**

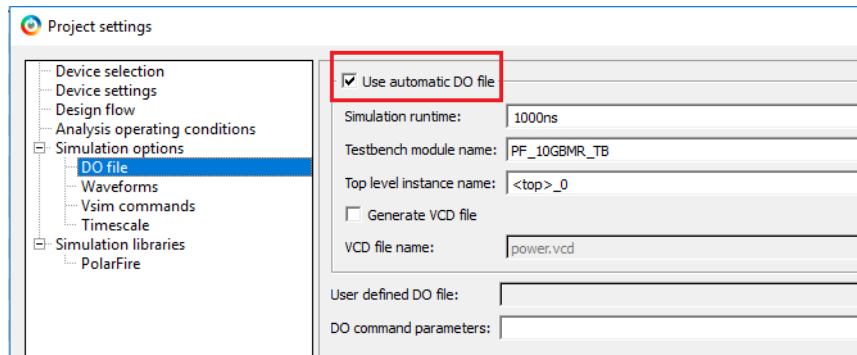

2. Open **Waveforms** to ensure the **Include DO File** check box is selected.
3. Open **Simulate** under **Verify Pre-Synthesized Design** in the **Design Flow** tab of Libero SoC PolarFire, as shown in following figure

**Figure 8 • Simulate Option in Libero Design Flow**

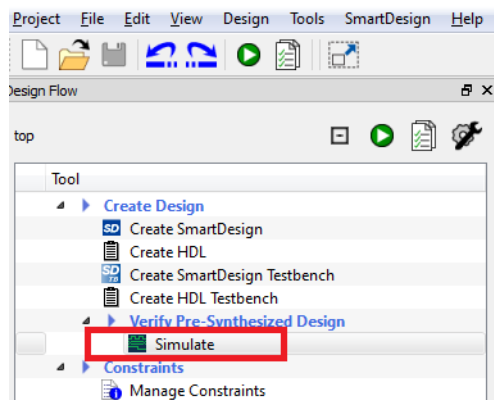


When simulation is initialized, ModelSim compiles all the design source files, runs the simulation and configures the waveform viewer to show simulation signals. The reference design can be simulated from the Libero SoC PolarFire.

## 2.5.1.2 Simulation Results

When the simulation is initiated, ModelSim compiles all the design source files, runs the simulation, and launches the waveform viewer to show the simulation signals.

At 0 ns, the testbench drives the 125-MHz system clock to the DUT. The following figure shows the interaction between the testbench and the design.

**Figure 9 • Testbench and BMR Demo Design Interaction**

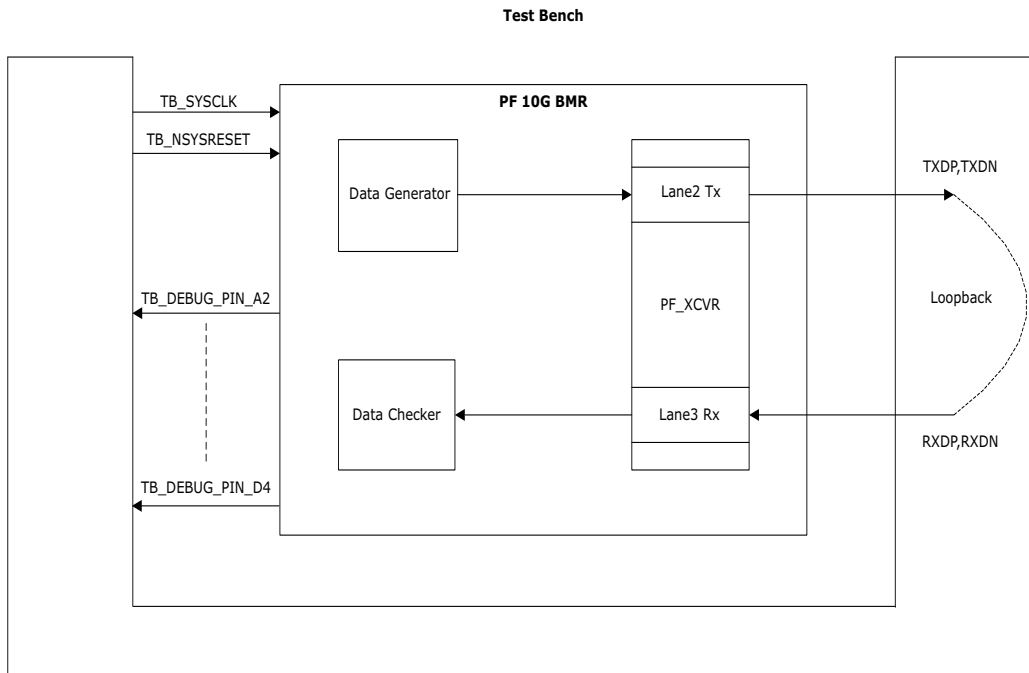


Steps to Simulate the PolarFire BMR demo design.

1. At '0' ns the BM Transmitter packet generator module starts generating the packets as the default value of start\_traffic\_i is '1' after reset.
2. At 16000 ns the Testbench sets the inject\_seq\_err\_i signal to '1' to observe the sequence and CRC related errors in BM packet checker module (Observe the rx\_crc\_err\_o and rx\_seq\_err\_o in the waveform).
3. At 32000 ns the Testbench sets the start\_traffic\_i signal to '0' to show that BM transmitter drives electrical idle when there is no traffic (observe the LANE0\_TXD\_N and LANE0\_TXD\_P in the waveform).
4. At 48000ns the Burst length is changed from 500 words to 2000 words and the change can be clearly observed on the highlighted LANE0\_TXD\_N/P and LANE0\_RXD\_N/P lines in the waveform.
5. At 56000ns the Inter packet gap is changed from 96 words to 256 words and the change can be clearly observed on the highlighted Electrical IDLE on LANE0\_RXD\_N/P in the waveform.
6. The simulation finishes at 80000 ns.

The following figure shows the simulation results of the reference design.

Figure 10 • Simulation Waveform

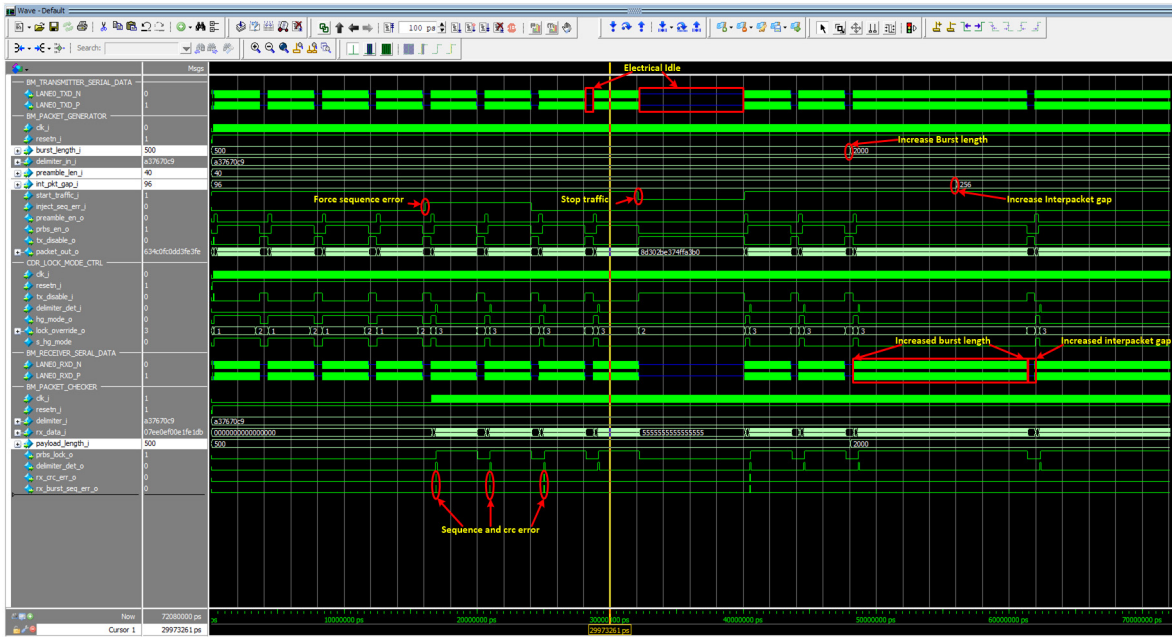


## 3 Libero Design Flow

This chapter describes the Libero design flow, which involves the following steps:

- Synthesize, page 18
- Place and Route, page 19
- Verify Timing, page 21
- Generate Bitstream, page 21
- Run PROGRAM Action, page 22

The following figure shows these options in the Design Flow tab.

**Figure 11 • Libero Design Flow Options**

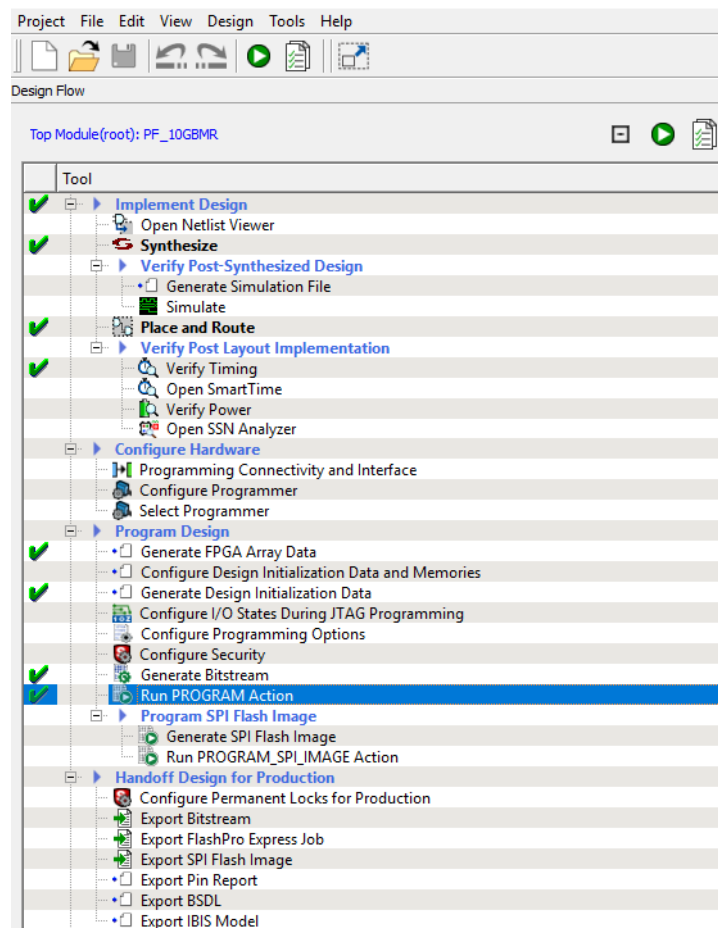

### 3.1 Synthesize

To synthesize this design:


1. Open **Synthesize** from the **Design Flow** tab.  
When the synthesis is successful, a green tick mark appears as shown in the preceding figure.
2. Right-click **Synthesize** and select **View Report** to view the synthesis report and log files in the **Reports** tab.

## 3.2 Place and Route

To place and route the design, TX\_PLL, XCVR\_REF\_CLK, and PF\_XCVR must be configured using the I/O Editor. Follow these steps to configure the components and place and route the design.


1. On the Design Flow tab, double-click Manage Constraints.
2. On the I/O Attributes tab, click Edit with I/O Editor, as shown in the following figure.

Figure 12 • Edit with I/O Editor Option

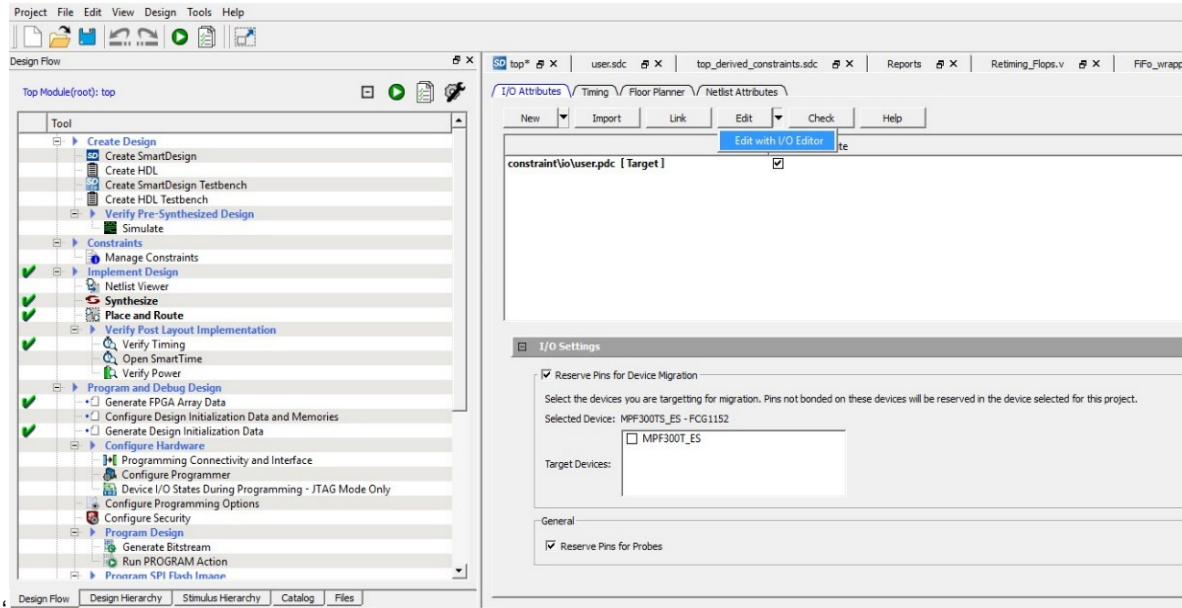


3. Using the XCVR View in I/O Editor, place TX\_PLL, XCVR\_REF\_CLK, and PF\_XCVR as shown in the following figure.

Figure 13 • I/O Editor Transceiver View

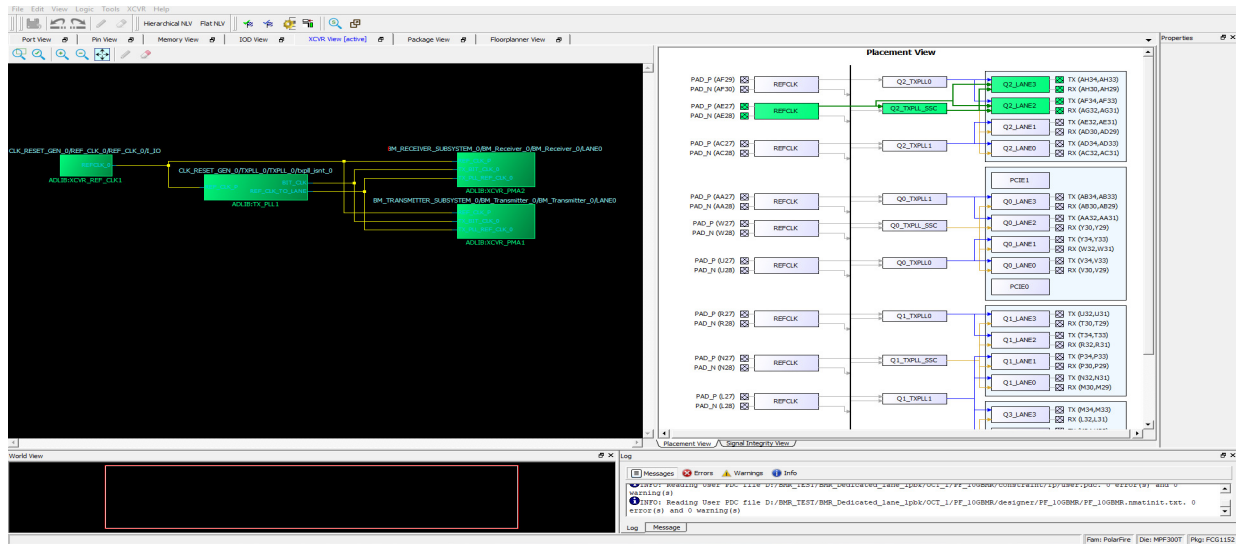

When all the components are placed, the location of the components is updated in the user.pdc file (located in **Constraint Manager > Floor planner** tab), as shown in the following figure.

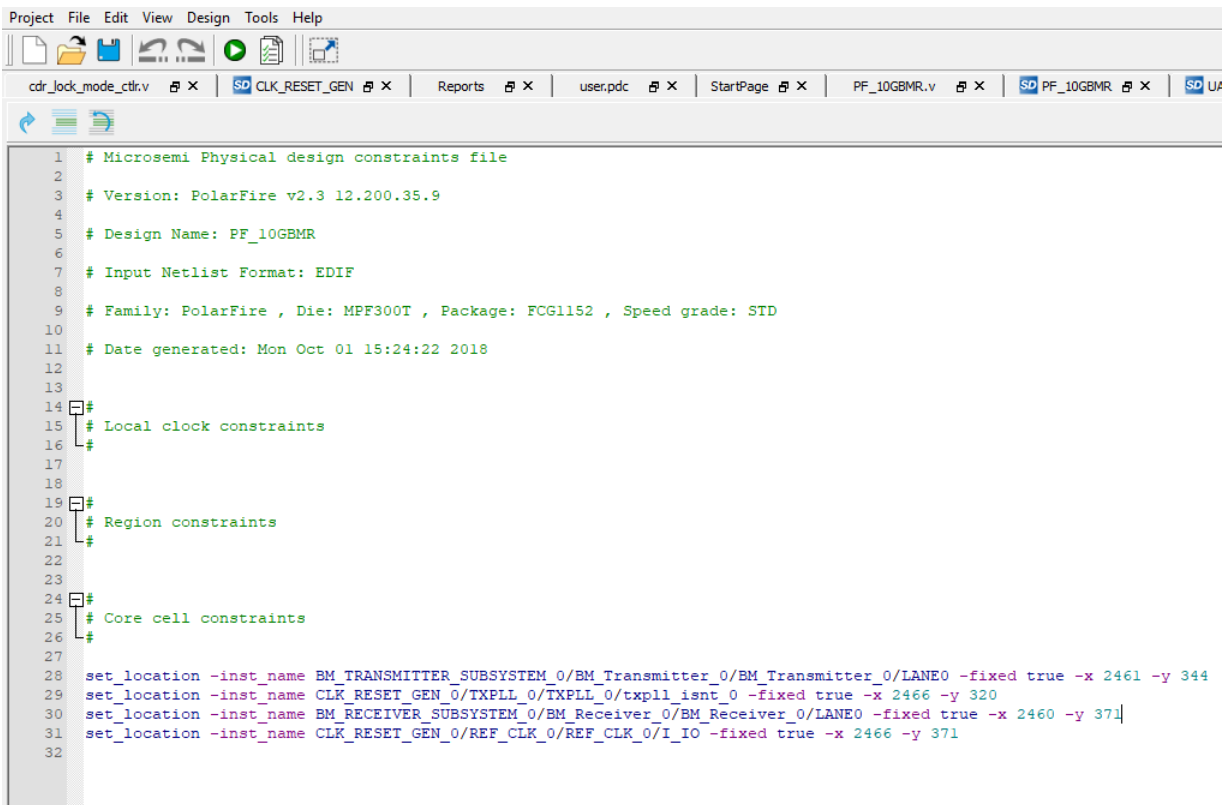**Figure 14 • Component Locations Updated in user.pdc File**


```

1 # Microsemi Physical design constraints file
2
3 # Version: PolarFire v2.3 12.200.35.9
4
5 # Design Name: PF_10GBMR
6
7 # Input Netlist Format: EDIF
8
9 # Family: PolarFire , Die: MPF300T , Package: FCG1152 , Speed grade: STD
10
11 # Date generated: Mon Oct 01 15:24:22 2018
12
13
14 #
15 # Local clock constraints
16 #
17
18
19 #
20 # Region constraints
21 #
22
23
24 #
25 # Core cell constraints
26 #
27
28 set_location -inst_name BM_TRANSMITTER_SUBSYSTEM_0/BM_Transmitter_0/BM_Transmitter_0/LANE0 -fixed true -x 2461 -y 344
29 set_location -inst_name CLK_RESET_GEN_0/TXPLL_0/TXPLL_0/txpll_isnt_0 -fixed true -x 2466 -y 320
30 set_location -inst_name BM_RECEIVER_SUBSYSTEM_0/BM_Receiver_0/BM_Receiver_0/LANE0 -fixed true -x 2460 -y 371
31 set_location -inst_name CLK_RESET_GEN_0/REF_CLK_0/REF_CLK_0/I_IO -fixed true -x 2466 -y 371
32
  
```

4. On the **Design Flow** tab, open **Place and Route**.  
When place and route is successful, a green tick mark appears next to **Place and Route**, as shown in Figure 11, page 18.
5. Right-click **Place and Route** and select **View Report** to view the place and route report and log files in the **Reports** tab. View the PF\_10GBMR\_place\_and\_route\_constraint\_coverage.xml file for place and route constraint coverage.

The resource utilization report is written to the PF\_10GBMR\_layout\_log.log file. To view this file, go to the **Reports** tab > **top reports** > **Place and Route**. The following table lists the resource utilization of the design after place and route. These values may vary slightly for different Libero runs, settings, and seed values.

**Table 5 • Resource Utilization**


Type	Used	Total	Percentage
4LUT	4769	299544	1.59
DFF	1446	299544	0.48
I/O register	0	510	0.00
Logic element	5156	299544	1.72

### 3.3 Verify Timing

On the Design Flow tab, double-click **Verify Timing**.


When the design meets the timing requirements, a green tick mark appears next to **Verify Timing**, as shown in the following figure.

Figure 15 • Verify Timing

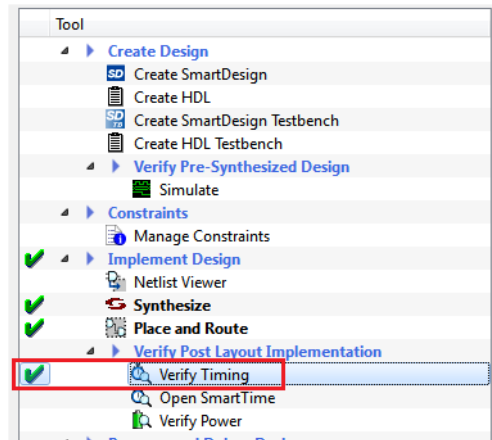

Right-click **Verify Timing** and select **View Report** to view the verify timing report and log files in the Reports tab.

Figure 16 • Timing Report

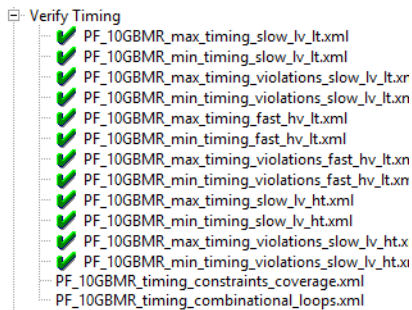

### 3.4 Generate Bitstream

On the **Design Flow** tab, double-click **Generate Bitstream**.

When the bitstream is successfully generated, a green tick mark appears next to **Generate Bitstream**, as shown in Figure 11, page 18.

Right-click **Generate Bitstream** and select **View Report** to view the corresponding log file in the **Reports** tab.

## 3.5 Run PROGRAM Action

After generating the bitstream, the PolarFire device must be programmed. Follow these steps to program the PolarFire device.


1. Ensure that the jumper settings on the board are as listed in the following table.

**Table 6 • Jumper Settings**

Jumper	Pin From	Pin To
J27	2	3
J28	2	3

2. Connect the power supply cable to the J9 connector on the board.
3. Connect the host PC to the J5 connector (FTDI port) on the board using a USB cable.
4. Power on the board using the SW3 slide switch.  
The following figure shows the PolarFire Evaluation Board setup for programming the device and running the reference design.

**Figure 17 • PolarFire Evaluation Board Setup**

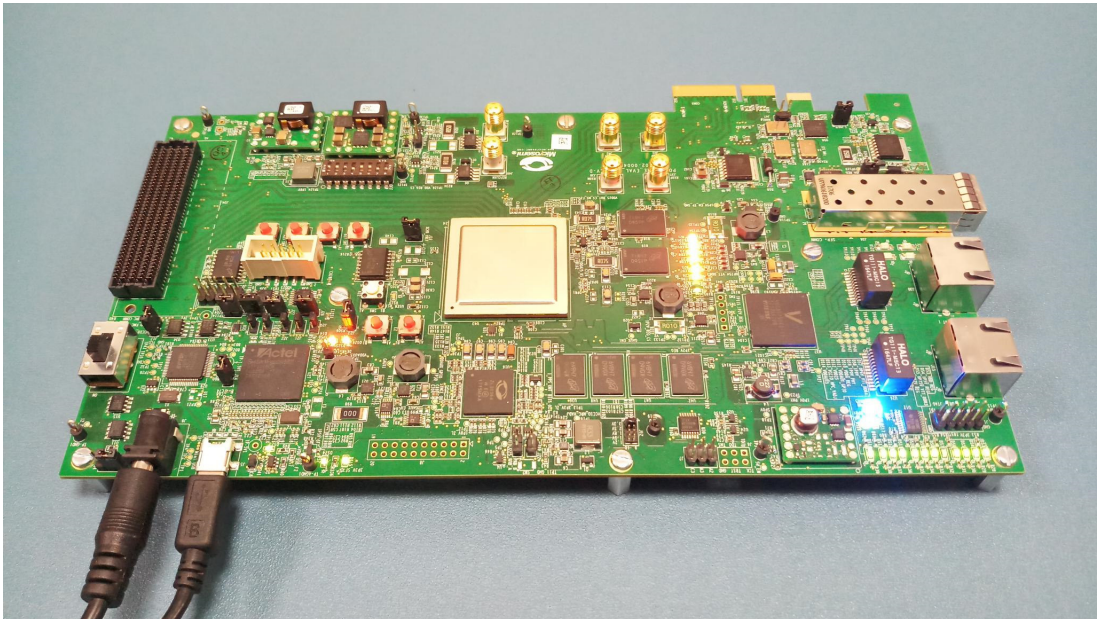

## 4 Programming the Device Using FlashPro


This chapter describes how to program the PolarFire device with the stp programming file using a FlashPro programmer. The default location of the .stp file is:

```
mpf_dg0841_liberosocpolarfirerev2p3\STPL\PF_10GBMR.stp
```

Follow these steps to program the device.

1. Connect the jumpers and set up the PolarFire Evaluation Board as described in steps 1 to 5 of [Run PROGRAM Action](#), page 22.
2. On the host PC, start the FlashPro software.
3. Click **New Project**, and in the **New Project** window, enter the project name.


**Figure 18 • FlashPro New Project Window**

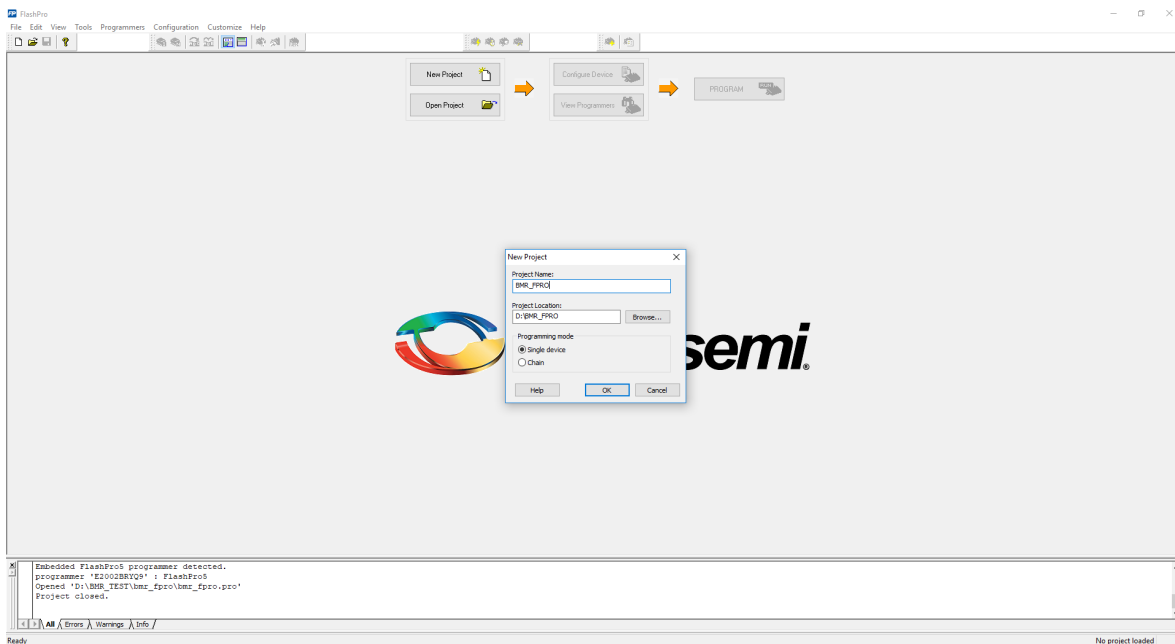

4. Click **Browse**, and navigate to the location where the project is required to be saved.
5. Select **Single device** as the programming mode.
6. Click **OK** to save the project.  
The **Configure Device** option is enabled.
7. Click **Configure Device**.


8. In the **Programming File** section, click **Browse**, navigate to the location where the PF\_10GBMR.stp file is located, and select the file. Details of the selected file are displayed, as shown in the following figure.

**Figure 19 • Programming File Details in FlashPro**

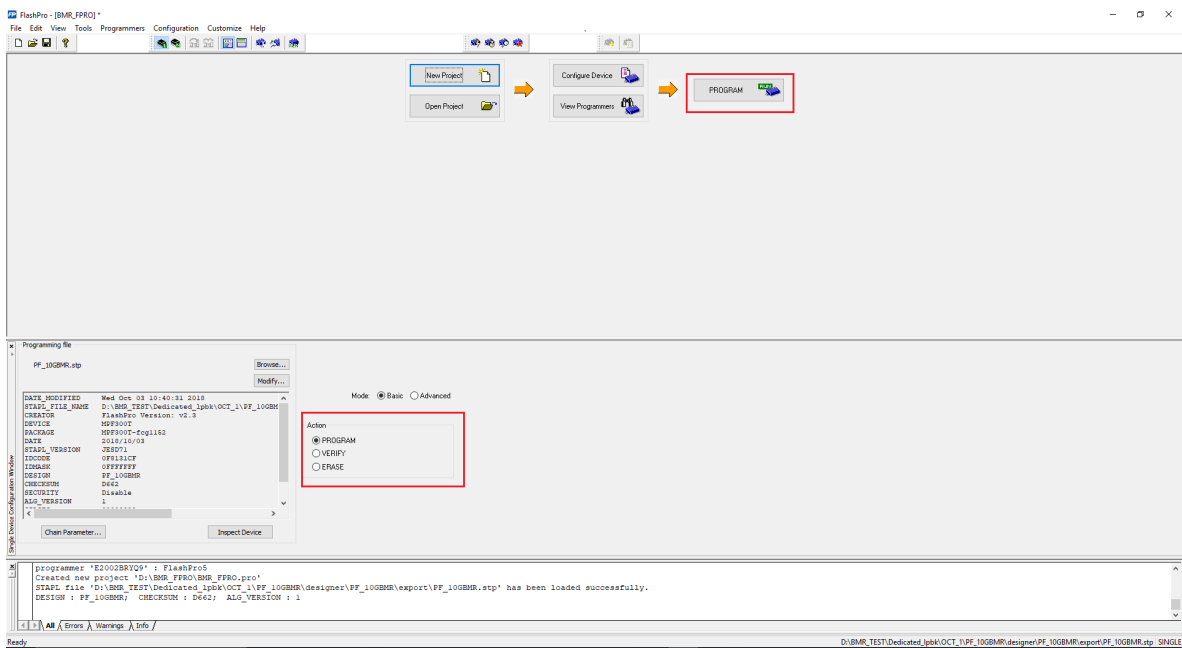

9. In the Action list, select **PROGRAM**, as shown in the preceding figure.
10. Click the main **PROGRAM** option (also highlighted in the preceding figure) to program the device. Wait until the programmer status changes to RUN PASSED and the PROGRAM PASSED message appears in the log window.

**Figure 20 • Programming Passed**

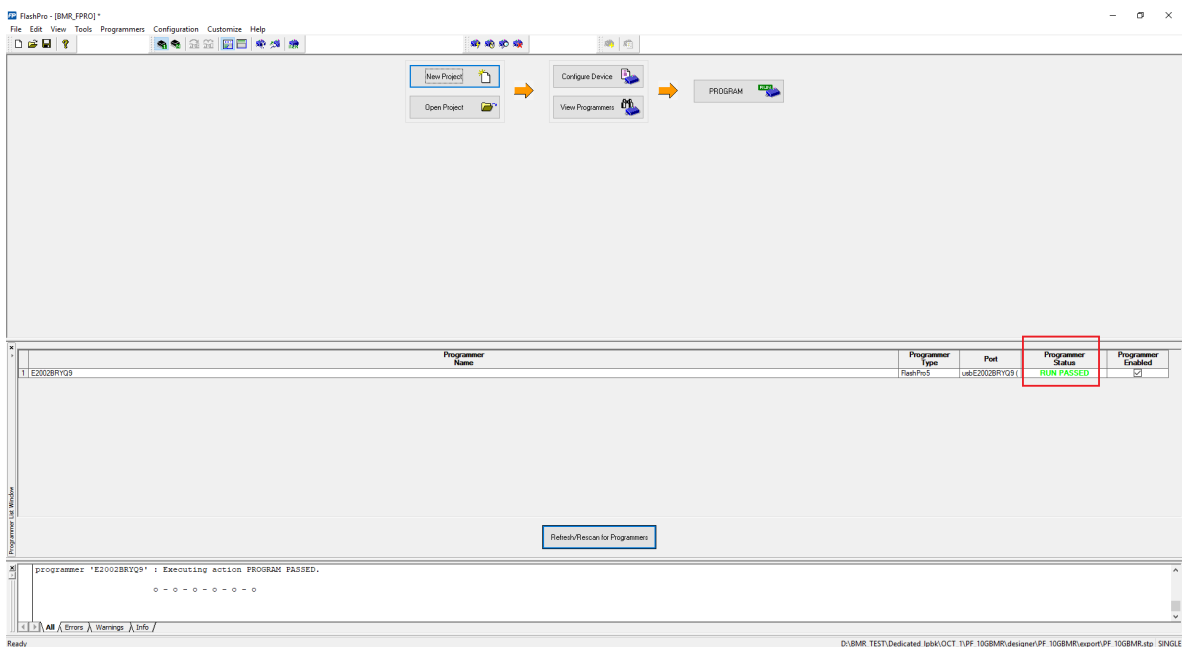

11. Power cycle the board.

## 5 Running the Demo

This chapter describes how to use the BMR Demo GUI to run the PolarFire BMR demo on the PolarFire Evaluation Board.

### 5.1 Installing the GUI

To run the demo, you must first install the BMR Demo GUI. To install the BMR Demo GUI:

1. Extract the contents of the `mpf_dg0841_liberosocpolarfirev2p3.rar` file.
2. From the GUI folder of the extracted RAR file, double-click the `setup.exe` file.
3. Follow the instructions displayed by the installation wizard to complete the installation.


After successful installation, BMR GUI appears on the Start menu of the host PC desktop.

### 5.2 Running the Demo Design

Follow these steps to run the BMR demo.


1. The following figure shows the GUI before connecting to the design.

**Figure 21 • Before Connection**

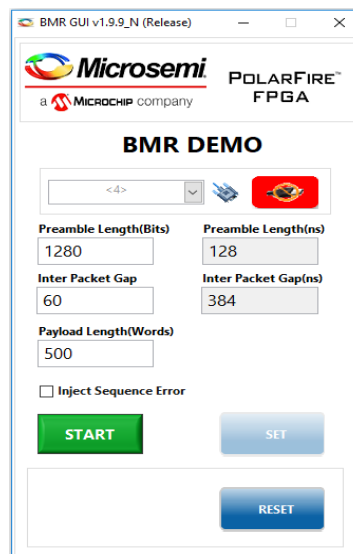

2. Connect the GUI to the design. The following figure shows the GUI after connecting to the design.


**Figure 22 • After Connection**

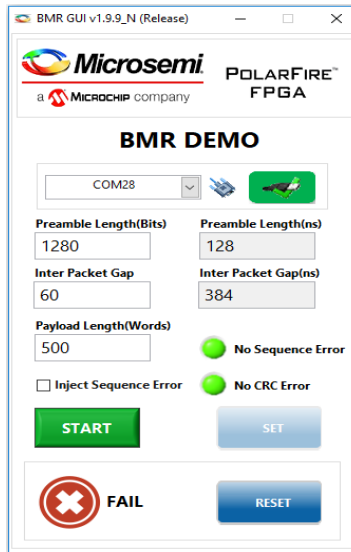

3. Click the **START** button to start the traffic from BM transmitter. The **PASS** indicator indicates that the number of packets generated matches with the number of packet received and checked, as shown in the following figure.

**Note:** Hover the mouse over the parameters (Preamble, Inter Packet Gap and Payload Length) to see the range of the values.

**Figure 23 • Packed Received and Checked**

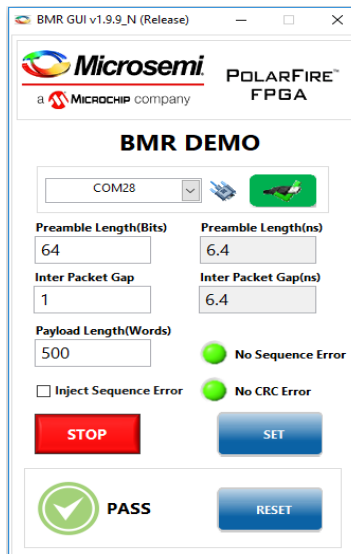


- Inject the sequence number error by selecting the **Inject Sequence Error** check box in the GUI and then click **Set** as shown in the following figure.

**Figure 24 • Inject Error**




- The GUI reports the sequence and CRC errors as shown in the following figure.

**Figure 25 • Error Report**

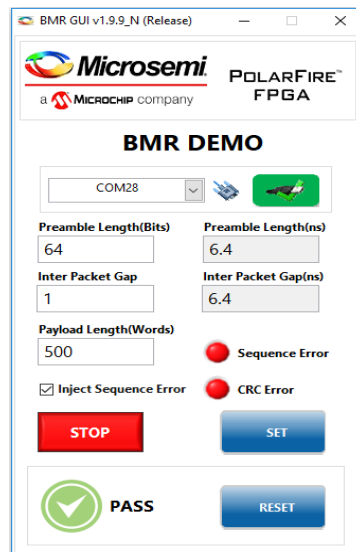

6. Clear the sequence number error by de-selecting the **Inject Sequence Error** check box in the GUI and then click **Set** as shown in the following figure.

**Figure 26 • Clear Error**

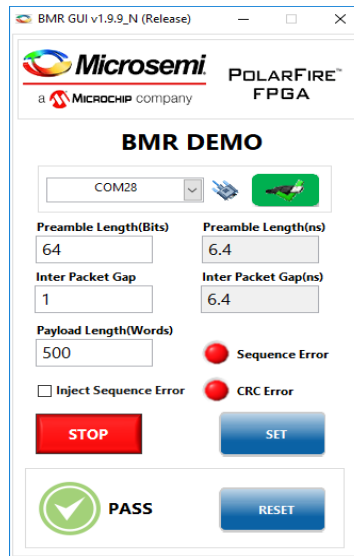

7. Status is displayed in the GUI, after clearing sequence and CRC error as shown in the following figure.

**Figure 27 • No Error Status**

