
Hardware Design Checklist

1.0 INTRODUCTION

This document provides a hardware design checklist for the Microchip LAN9514. These checklist items should be followed when utilizing the LAN9514 in a new design. A summary of these items is provided in [Section 8.0, "Hardware Checklist Summary"](#). Detailed information on these subjects can be found in the corresponding sections:

- [Section 2.0, "General Considerations"](#)
- [Section 3.0, "Power"](#)
- [Section 4.0, "Ethernet Signals"](#)
- [Section 5.0, "USB Signals"](#)
- [Section 6.0, "Clock Circuit"](#)
- [Section 7.0, "Miscellaneous"](#)

2.0 GENERAL CONSIDERATIONS

2.1 Required References

The LAN9514 implementer should have the following document(s) on hand:

- *LAN9514 Data Sheet*

2.2 Pin Check

- Check the pinout of the part against the data sheet. Ensure all pins match the data sheet and are configured as inputs, outputs, or bidirectional for error checking.

2.3 Ground

- The LAN9514 has one exposed pad (VSS) on bottom of package, which must be connected directly to a solid, contiguous digital ground plane. Separate ground planes are not recommended.

2.4 USB-IF Compliant USB Connectors

- USB-IF certified USB Connectors with a valid Test ID (TID) are required for all USB products to be compliant and pass USB-IF product certification.

3.0 POWER

3.1 3.3V Supply

- **VDD33IO** (pins 19, 27, 33, 39, and 46) require a connection to +3.3V. Each pin should have one 0.1 μ F (or smaller) decoupling capacitor. The capacitor size should be SMD_0603 or smaller.
- **VDD33A** (pins 5, 10, 49, 51, 54, 57, and 64) require a connection to +3.3V through a ferrite bead. Each pin should have one 0.1 μ F (or smaller) decoupling capacitor. The capacitor size should be SMD_0603 or smaller.

3.2 VDD18CORE

- **VDD18CORE** (pins 15 and 38) are used to provide bypass for the internal +1.8V core regulator. Each pin requires a 0.1 μ F bypass capacitor located as close as possible to the pin without using vias. In addition, a 4.7 μ F ceramic capacitor with <2.0 Ohm ESR is required on pin 38. Other values, tolerances, and characteristics are not recommended.

LAN9514


Note: Do not connect VDD18CORE to either VDD18USBPLL or VDD18ETHPLL.

3.3 VDD18USBPLL and VDD18ETHPLL

- VDD18ETHPLL (pin 48) supplies power to the core PLL. This pin must be connected to VDD18USBPLL through a ferrite bead.
- The VDD18USBPLL (pin 62) and VDD18ETHPLL (pin 48) should also have a 1.0 μF bypass capacitor in size of SMD_0603 or smaller. The capacitor must have an ESR of no more than 2.0.

Refer to [Figure 3-1](#) for power and ground connections.

FIGURE 3-1: POWER AND GROUND CONNECTIONS

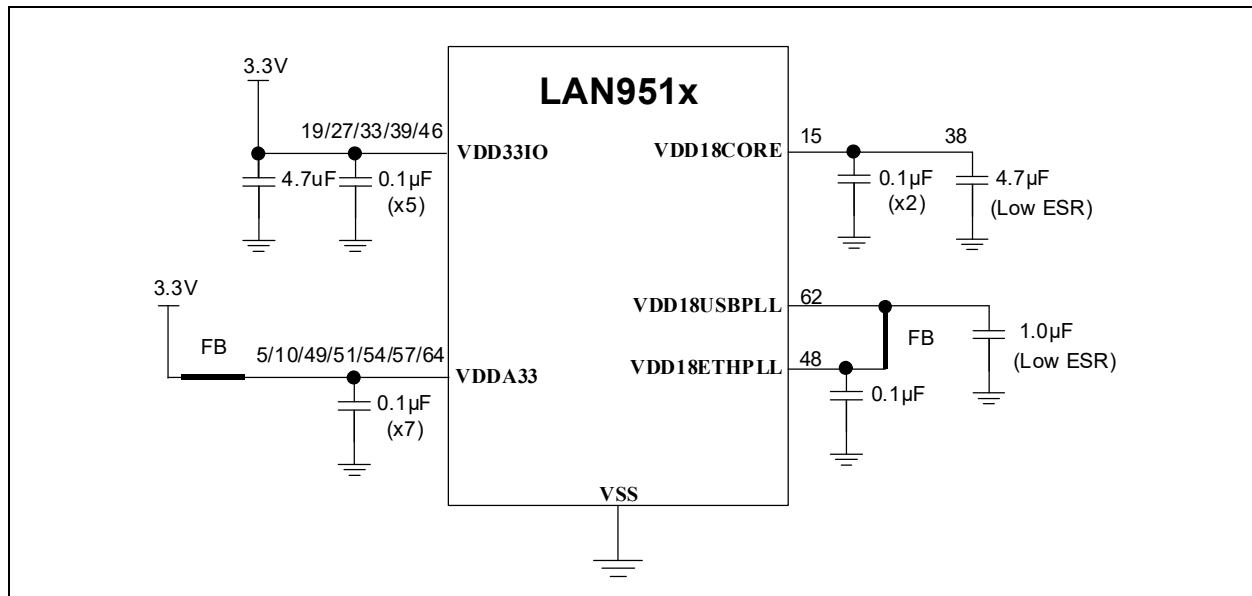


4.0 ETHERNET SIGNALS

4.1 Ethernet PHY Interface

- **TXP** (pin 55) is the transmit twisted pair output positive connection from the internal PHY. It requires a 49.9 ohm, 1.0% pull-up resistor to **VDD33A**. This pin also connects to the transmit channel of the magnetics.
- **TXN** (pin 56) is the transmit twisted pair output negative connection from the internal PHY. It requires a 49.9 ohm, 1.0% pull-up resistor to **VDD33A**. This pin also connects to the transmit channel of the magnetics.
- **RXP** (pin 52) is the receive twisted pair input positive connection from the internal PHY. It requires a 49.9 ohm, 1.0% pull-up resistor to **VDD33A**. This pin also connects to the receive channel of the magnetics.
- **RXN** (pin 53) is the receive twisted pair input negative connection from the internal PHY. It requires a 49.9 ohm, 1.0% pull-up resistor to **VDD33A**. This pin also connects to the receive channel of the magnetics.

For transmit and receive channel connection details, refer to [Figure 4-1](#).

FIGURE 4-1: ETHERNET CHANNEL CONNECTIONS AND TERMINATIONS

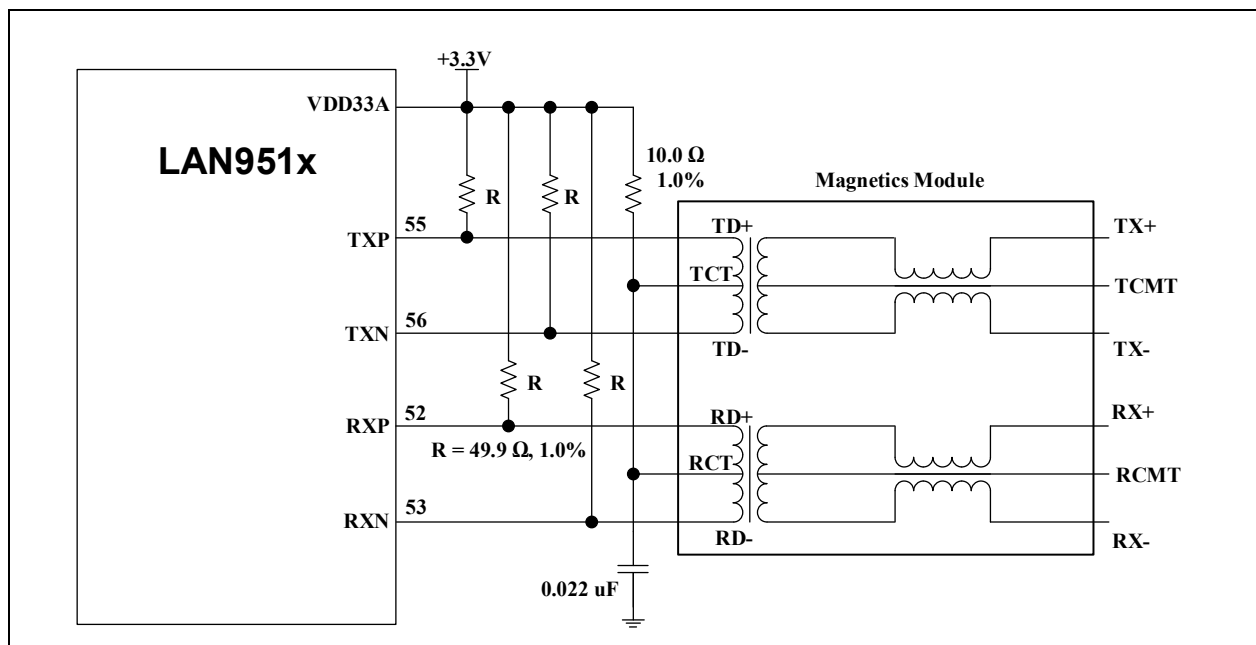

4.2 Magnetics Connection

- The center tap connection on the LAN9514 side for the transmit channel must be connected to **VDD33A** through a 10.0 ohm series resistor with a tolerance of 1.0%. The transmit channel center tap of the magnetics also connects to the receive channel center tap of the magnetics. In addition, a 0.022 μ F capacitor is required from the receive channel center tap of the magnetics to ground.
- The center tap connection on the cable side (RJ45 side) for the transmit and receive channels should be terminated with a 75 ohm resistor through a shared 1000 pF, 2 kV capacitor to chassis ground.
- When in the PHP Auto MDIX mode of operation, the use of an Auto MDIX style magnetics module is required. Please refer to the Microchip application note AN8.13 "Suggested Magnetics" for proper magnetics.

4.3 RJ45 Connector

- Unused pairs 4-5 and 7-8 of the RJ45 connector are tied together and connected to the same 2 kV capacitor through a 75 Ω resistor. This provides direct termination for potential common mode noise on the unused pairs.

LAN9514

5.0 USB SIGNALS


5.1 USB PHY Interface

- **USBDP0** (pin 59) is the positive (+) signal of the upstream USB2.0 differential pair. All necessary USB terminations and resistors are included internal the IC. This pin can connect directly to the D+/DP pin of a USB connector.
- **USBDM0** (pin 58) is the negative (–) signal of the upstream USB2.0 differential pair. All necessary USB terminations and resistors are included internal the IC. This pin can connect directly to the D–/DM pin of a USB connector.
- **USBDP2/USBDP3/USBDP4/USBDP5** (pins 2/4/7/9): These pins are the positive (+) signal of the downstream ports USB2.0 differential pair. All necessary USB terminations and resistors are included internal the IC. These pins can connect directly to the D+/DP pins of USB connectors.
- **USBDM2/USBDM3/USBDM4/USBDM5** (pins 1/3/6/8): These pins are the negative (–) signal of the downstream ports USB2.0 differential pair. All necessary USB terminations and resistors are included internal the IC. These pins can connect directly to the D–/DM pin of USB connectors.

Note: The polarity of any of the USB2.0 differential pairs may be inverted either intentionally due to design constraints or to correct a design error using the Microchip PortSwap feature. This feature may be configured via SMBus/I²C configuration registers.

For transmit and receive channel connections details, refer to [Figure 5-1](#).

FIGURE 5-1: USB DATA SIGNAL CONNECTIONS

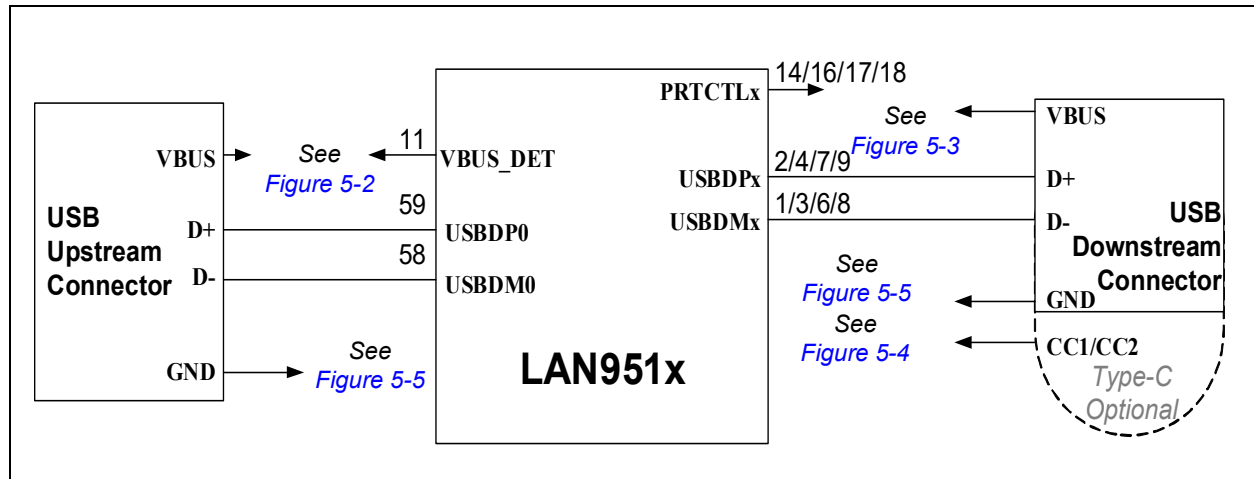

5.1.1 DISABLE DOWNSTREAM PORTS IF UNUSED

- If any downstream of the LAN9514 is unused, it should be disabled through hub configuration (I²C), or through a port disable strap option.

5.2 USB Protection

The use of external protection circuitry may be required to provide additional ESD protection beyond what is included in the hub IC. These are generally grouped into three categories:

1. TVS protection diodes
 - ESD protection for IEC-61000-4-2 system level tests
2. Application-targeted protection ICs or galvanic isolation devices
 - DC overvoltage protection for short to battery protection
3. Common-mode chokes
 - For EMI reduction

The LAN9514 can be used in conjunction with these types of devices, but it is important to understand the negative effect on USB signal integrity that these devices may have as well as to select components accordingly and follow the implementation guidelines from the manufacturer of these devices. You may also use the following general guidelines for implementing these devices:

- Select only devices that are designed specifically for high-speed applications. Based on the USB specification, a total of 5 pF is budgeted for connector, PCB traces, and protection circuitry.
- These devices should be placed as close to the USB connector as possible.
- Never branch the USB signals to reach protection devices. Always place the protection devices directly on top of the USB differential traces.
- The effectiveness of TVS devices depends heavily on effective grounding. Always ensure a very low impedance path to a large ground plane.
- Place TVS diodes on the same layer as the USB signal trace. Avoid vias or place vias behind the TVS device if possible.

Note: Microchip PHYBoost configuration options are available for compensating the negative effects of these devices. This feature may help to overcome marginal failures. It is simplest to determine the appropriate setting using laboratory experiments, such as USB eye diagram tests, on physical hardware.

5.3 USB Connectors

5.3.1 UPSTREAM PORT VBUS AND VBUS_DET


The upstream port VBUS line must have no more than 10 μF of the total capacitance connected.

The **VBUS_DET** pin is used to detect the presence of a USB host. The USB host can also toggle the state of VBUS at any time to force a soft Reset and reconnection of the LAN9514. It is permissible to tie **VBUS_DET** directly to 3.3V. However, this is not recommended as the ability to force a Reset of the hub from the USB host VBUS toggling is lost.

The recommended implementation is shown in [Figure 5-2](#). Note that the precise resistor values are not critical, and alternate values may be selected as long as:

- The impedance from the **VBUS** pin of the USB connector to the **VBUS_DET** pin is sufficiently high-impedance to minimize pin leakage when **VBUS** is present before the Hub IC is powered on.
- A sufficient voltage level is present on the **VBUS_DET** for the full range of VBUS (4.5V to 5.5V).

FIGURE 5-2: RECOMMENDED UPSTREAM PORT VBUS AND VBUS_DET CONNECTIONS

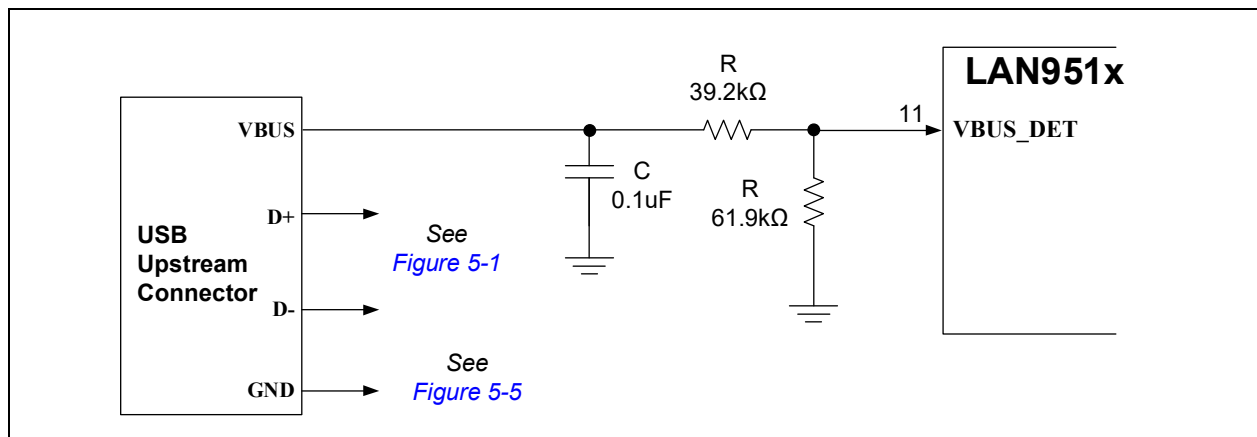


5.3.2 DOWNSTREAM PORT POWER CONTROL AND OVERCURRENT SENSING

The LAN9514 has a single port power control and overcurrent sense signal for each downstream port. When disabling port power, the driver will actively drive a '0'. To avoid unnecessary power dissipation, the internal pull-up resistor will be disabled at that time. When port power is enabled, the output driver is disabled and the pull-up resistor is enabled, creating an open-drain output. If there is an overcurrent situation, the USB Power Controller will assert the open-drain OCS signal. The Schmitt trigger input will recognize this situation as a low. The open-drain output does not interfere.

LAN9514

A typical VBUS port power control implementation is shown in [Figure 5-3](#).

FIGURE 5-3: DOWNSTREAM VBUS AND PRTCTL/OCS CONNECTIONS

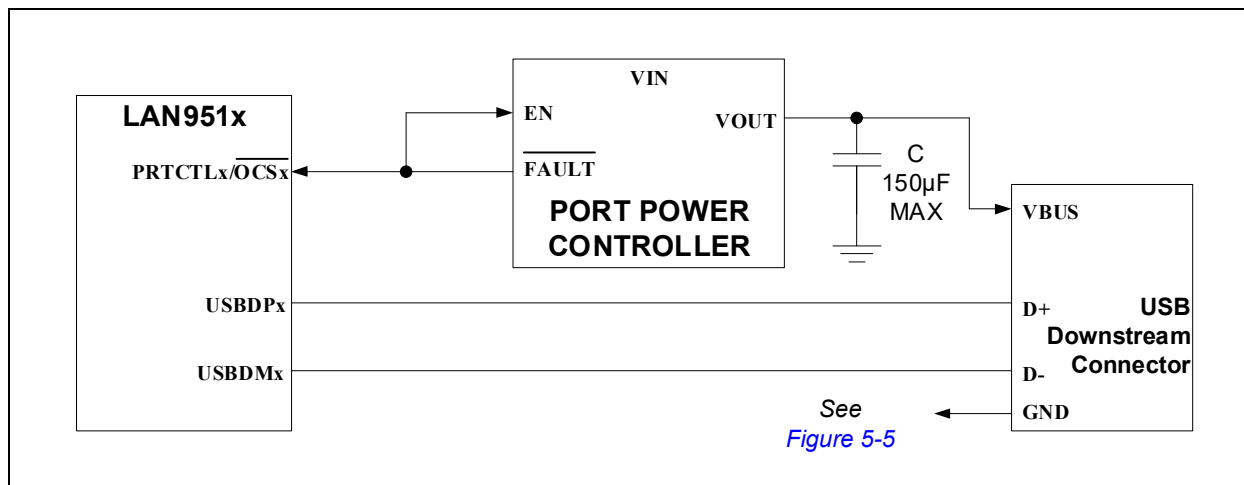

Note: The implementation, as shown in [Figure 5-3](#), assumes that the port power controller has an active-high enable input, and an active-low, open-drain style FAULT indicator. External polarity inversion through buffers or FETs may be required if the port power controller has different I/O characteristics.

5.3.3 DOWNSTREAM PORT TYPE-C SUPPORT


The LAN9514 may be used with Type-C as the downstream port. This requires a Type-C port controller or combined port power controller and Type-C port controller. The LAN9514 simply controls the Type-C port controller in the same way it would control a standard Type-A port power controller. This does not require any kind of Type-C port status information from the Type-C port controller. The **PRTCTLx/OCSx** signal should be connected to an enable pin on the Type-C controller and the FAULT indicator output of the port power controller.

If the Type-C controller and the port power controller are separate devices, the Type-C controller must control the enable pin of the port power controller. The **PRTCTLx** should not directly control the enable signal of the port power controller.

A Type-C controller may be configured to signal a 500 mA, 1.5A, or 3.0A port power capability. The selected port power controller should be sized accordingly.

A typical implementation is shown in [Figure 5-4](#).

FIGURE 5-4: DOWNSTREAM VBUS AND PRTCTLX CONNECTIONS WITH A TYPE-C PORT

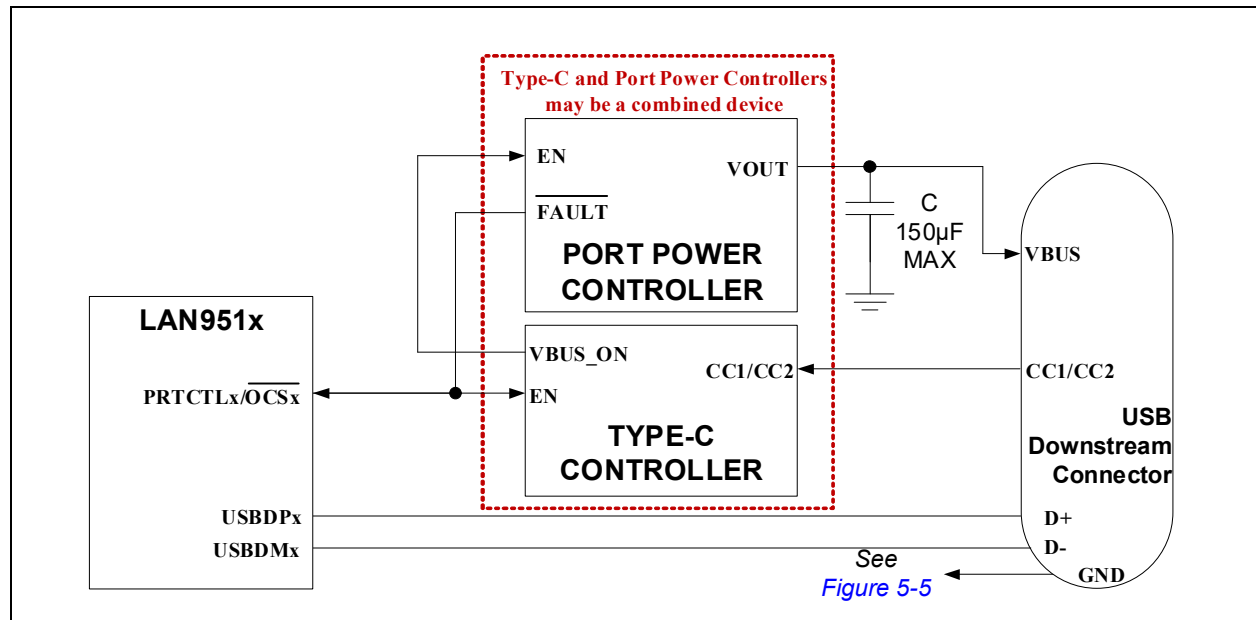

Note: The implementation, as shown in [Figure 5-4](#), assumes that the Type-C controller has an active-high enable input, and the port power controller has an active-low, open-drain style FAULT indicator. External polarity inversion through buffers or FETs may be required if the Type-C controller and/or port power controller has different I/O characteristics.

5.3.4 GND AND SHIELD RECOMMENDATIONS


The **GND** pins of the USB connector must be connected to a large ground plane of PCB with a low-impedance path directly.

The **SHIELD** pins of the USB connector may be connected in one of two ways:

- (Recommended) Connect to **GND** through a resistor and capacitor in parallel. An RC filter can help decouple and minimize EMI between a PCB and a USB cable.
- Directly to the **GND** plane.

The recommended implementation is shown in [Figure 5-5](#).

FIGURE 5-5: RECOMMENDED USB CONNECTOR GND AND SHIELD CONNECTIONS

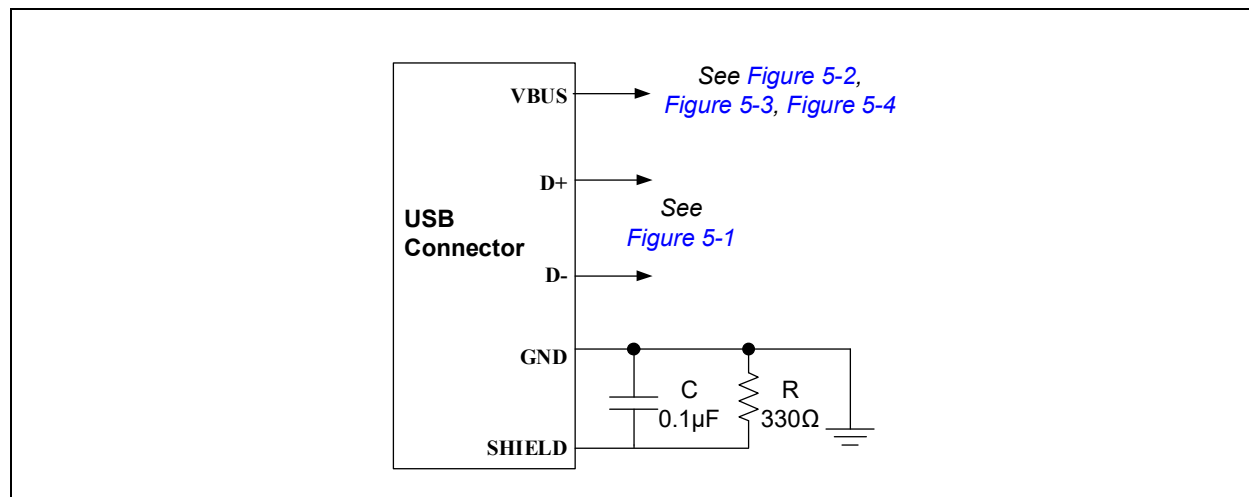


6.0 CLOCK CIRCUIT

6.1 Crystal and External Clock Connection

The LAN9514 can accept either a 25 MHz crystal (preferred) or a 25 MHz single-ended clock oscillator (± 50 ppm) input. If the single-ended clock oscillator method is implemented, **XO** should be left unconnected and **XI** should be driven with a nominal 0V to 3.3V clock signal. See [Figure 6-1](#).

- **XI** (pin 61) is the clock circuit input for the LAN9514. This pin requires a 15 pF to 33 pF capacitor to ground. One side of the crystal connects to this pin.
- **XO** (pin 60) is the clock circuit output for the LAN9514. This pin requires a matching 15 pF to 33 pF capacitor to ground and the other side of the crystal.
- The crystal loading capacitor values are system dependent, based on the total C_L specification of the crystal and the stray capacitance value. The PCB design, crystal, and layout all contribute to the characteristics of this circuit. A commonly used formula for calculating the appropriate physical C_1 and C_2 capacitor values is:
 - $C_L = ((C_{X1})(C_{X2}) / (C_{X1} + C_{X2}))$
 - Where: C_L is the spec from the crystal datasheet, $C_{X1} = C_{\text{stray}} + C_1$, $C_{X2} = C_{\text{stray}} + C_2$.
 - Note that C_{stray} is the stray/parasitic capacitance due to PCB layout. It can be assumed to be very small, within the 1 pF to 2 pF range, and then verified by physical experiments in the laboratory if PCB simulation tools are not available.
- For proper operation, an additional 1.0 M Ω resistor is required to the crystal circuit. This resistor is placed in parallel with the crystal.
- Alternately, a 25 MHz clock oscillator may be used to provide the clock source for the LAN9514. When using a single-ended clock source, **XO** (pin 60) should be left floating as a No Connect (NC).

FIGURE 6-1: CRYSTAL AND OSCILLATOR CONNECTIONS

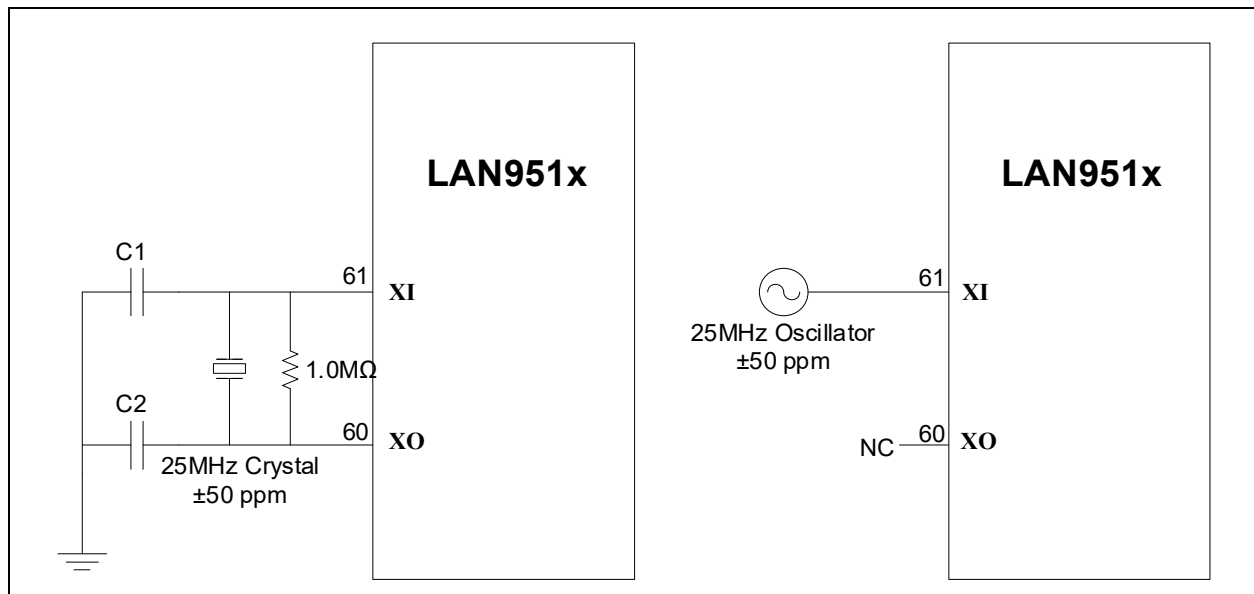

LAN9514


7.0 MISCELLANEOUS

7.1 EEPROM Interface

The LAN9514 may use an external EEPROM to store the default values for the USB descriptors and the MAC address. (See [Figure 7-1](#).) The EEPROM controller supports most “93C46” type EEPROMs. A total of nine address bits are used to support 256/512 byte EEPROMs.

- Select a 3-wire style 2K/4K EEPROM that is organized for 256/512 x 8-bit operation.

FIGURE 7-1: EEPROM CONNECTION DIAGRAM

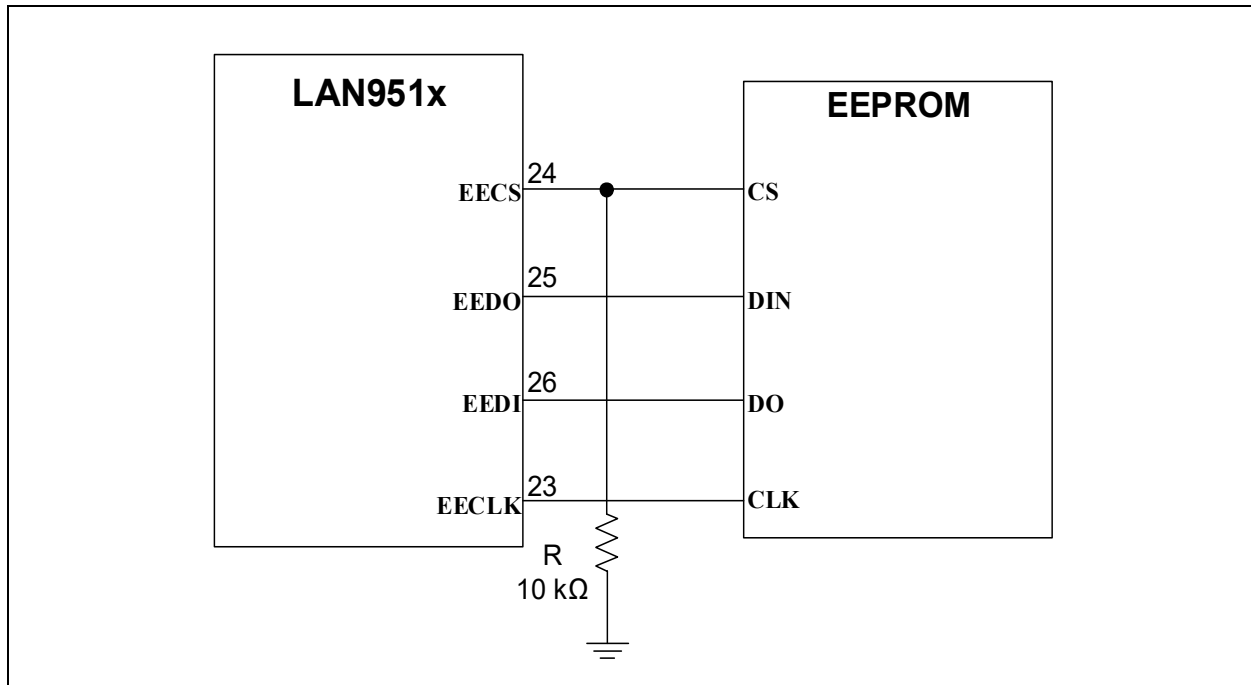

7.2 EXRES Resistor

- **EXRES** (pin 50) should connect to ground through a 12.4 kΩ resistor with a tolerance of 1.0%. This pin is used to set up critical bias currents for the embedded 10/100 Ethernet physical device.

7.3 USBRBIAS Resistor

- **USBRBIAS** (pin 63) should connect to ground through a 12.0 kΩ resistor with a tolerance of 1.0%. This pin is used to set up critical bias currents for the embedded USB physical device.

7.4 Required External Pull-ups/Pull-downs

- GPIO[7:0] require pull-up resistors if configured as open-drain output.

7.5 Configuration Straps

- All configuration strap values are latched in on Power-On Reset and System Reset. For more detailed information on each bit and functionality, consult the latest version of the *LAN9514 Data Sheet*.
- **AUTOMDIX_EN** (pin 41), this pin determines the default Auto MDIX setting. The settings are as follows:
 - 0 = Auto MDIX is disabled.
 - 1 = Auto MDIX is enabled.

See the latest version of the *LAN9514 Data Sheet* for complete details. This pin has a weak internal pull-up and can be driven low with an external 10.0 kΩ resistor to ground.

7.6 nRESET

- **nRESET** (pin 12) is an active-low Reset input. This signal resets all logic and registers within the LAN9514. This signal is pulled high by a weak internal pull-up resistor. If **nRESET** is left unconnected, the LAN9514 will rely on its internal power-on Reset circuitry.

7.7 CLK24_EN and CLK24_OUT

- **CLK24_EN** (pin 44) enables the generation of a 24.0 MHz clock on the **CLK24_OUT** pin, which can be used as a reference clock for other devices. The input signal has no internal termination and should rely on an external resistor. The settings are as follows:
 - 0 = **CLK24_OUT** is disabled.
 - 1 = **CLK24_OUT** is enabled.

7.8 TESTx Pins

- **TEST1** (pin 13), this pin must remain as a no-connection in order to ensure proper operation.
- **TEST2** (pin 34), this pin must be tied directly to digital ground in order to ensure proper operation.
- **TEST3** (pin 40), this pin must be tied directly to +3.3V in order to ensure proper operation.
- **TEST4** (pin 47), this pin must remain as a no-connection in order to ensure proper operation.

LAN9514

NOTES:

8.0 HARDWARE CHECKLIST SUMMARY

TABLE 8-1: HARDWARE DESIGN CHECKLIST

Section	Check	Explanation	√	Notes
Section 2.0, "General Considerations"	Section 2.1, "Required References"	Pull up the necessary document(s).		
	Section 2.2, "Pin Check"	The pins match the data sheet.		
	Section 2.3, "Ground"	Verify that a single ground reference as a system ground is used for all ground pins. Check if there is a chassis ground for the line-side ground.		
	Section 2.4, "USB-IF Compliant USB Connectors"	Verify that USB-IF compliant USB connectors with an assigned TID are used in the design (if USB compliance is required for the design).		
Section 3.0, "Power"	Section 3.1, "3.3V Supply"	Ensure VDD33IO and VDD33A are within the range of 3.0V to 3.6V, and 0.1 µF capacitors are connected to each pin.		
	Section 3.2, "VDD18CORE"	VDD18CORE require 0.1 µF bypass each pin and a low-ESR 4.7 µF ceramic capacitor. Do not connect VDD18CORE with VDD18USBPLL or VDD18ETHPLL.		
	Section 3.3, "VDD18USBPLL and VDD18ETHPLL"	VDD18USBPLL and VDD18ETHPLL require a 1.0 µF bypass capacitor for each pin. The VDD18ETHPLL should be connected to VDD18USBPLL through a ferrite bead. Do not connect VDD18CORE with VDD18USBPLL or VDD18ETHPLL.		
Section 4.0, "Ethernet Signals"	Section 4.1, "Ethernet PHY Interface"	TRx pins require 49.9Ω termination resistors.		
	Section 4.2, "Magnetics Connection"	Verify if the center taps are connected to the GND using separate 0.1 µF capacitors on the device side and are terminated with 75 resistors through a 1000 pF, 2 kV capacitor to the chassis ground on the RJ45 line side.		
	Section 4.3, "RJ45 Connector"	Verify if pins 4/5 and 7/8 of the RJ45 connect to CAT-5 cable and are terminated to the chassis ground through a 1000 pF, 2 kV capacitor.		

TABLE 8-1: HARDWARE DESIGN CHECKLIST (CONTINUED)

Section	Check	Explanation	√	Notes
Section 5.0, "USB Signals"	Section 5.1, "USB PHY Interface"	Verify that the USB data pins are correctly routed to the USB connectors. Pay special attention to the polarity of the USB2.0 D+ and D– data lines.		
	Section 5.2, "USB Protection"	Verify that ESD/EMI protection devices are designed specifically for high-speed data applications and that the combined parasitic capacitance, the protection devices, USB traces, and USB connector do not exceed 5 pF on each USB trace.		
	Section 5.3.1, "Upstream Port VBUS and VBUS_DET"	Verify that the upstream port VBUS has no more than 10 μ F capacitance and that the VBUS signal is properly divided down to a 3.3V signal and connected to the VBUS_DET pin of the hub.		
	Section 5.3.2, "Downstream Port Power Control and OverCurrent Sensing"	Verify that the USB data pins are correctly routed to any embedded USB devices or secondary hub tiers.		
	Section 5.3.3, "Downstream Port Type-C Support"	Verify that the USB data pins are correctly routed to the USB Type-C connectors. Pay special attention to the polarity of the USB2.0 D+ and D– data lines. Also, ensure that an external Type-C controller capable of DFP operation is present.		
	Section 5.3.4, "GND and Shield Recommendations"	Connect to GND plane through a resistor and capacitor in parallel, or directly to the GND plane.		
Section 6.0, "Clock Circuit"	Section 6.1, "Crystal and External Clock Connection"	Verify usage of 25 MHz $\pm$ 50 ppm crystal or a 25 MHz oscillator. If using crystal, for proper operation, an additional 1.0 M Ω resistor is required for the crystal circuit. This resistor is placed in parallel with the crystal.		
Section 7.0, "Miscellaneous"	Section 7.1, "EEPROM Interface"	Ensure that the selected EEPROM device is compatible with the device.		
	Section 7.2, "EXRES Resistor" and Section 7.3, "USBRBIAS Resistor"	Verify that EXRES and USBRBIAS connect to ground through proper resistors.		
	Section 7.4, "Required External Pull-ups/Pull-downs"	GPIOs require pull-up resistors if configured as an open-drain output.		
	Section 7.5, "Configuration Straps"	Check for default Auto MDIX setting.		
	Section 7.6, "nRESET"	Ensure that nRESET signal has an external pull-up resistor or is otherwise properly controlled by an external SOC, MCU, or Reset supervisor device.		
	Section 7.7, "CLK24_EN and CLK24_OUT"	Check for default CLK24 output setting.		
	Section 7.8, "TESTx Pins"	Verify that TESTx pins are configured properly.		

APPENDIX A: REVISION HISTORY

TABLE A-1: REVISION HISTORY

Revision Level & Date	Section/Figure/Entry	Correction
DS00004678A (07-22-22)	Initial release	

THE MICROCHIP WEB SITE

Microchip provides online support via our WWW site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQ), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at www.microchip.com. Under "Support", click on "Customer Change Notification" and follow the registration instructions.

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or Field Application Engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: <http://microchip.com/support>

Note the following details of the code protection feature on Microchip products:

- Microchip products meet the specifications contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is secure when used in the intended manner, within operating specifications, and under normal conditions.
- Microchip values and aggressively protects its intellectual property rights. Attempts to breach the code protection features of Microchip product is strictly prohibited and may violate the Digital Millennium Copyright Act.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of its code. Code protection does not mean that we are guaranteeing the product is "unbreakable" Code protection is constantly evolving. Microchip is committed to continuously improving the code protection features of our products.

This publication and the information herein may be used only with Microchip products, including to design, test, and integrate Microchip products with your application. Use of this information in any other manner violates these terms. Information regarding device applications is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. Contact your local Microchip sales office for additional support or, obtain additional support at <https://www.microchip.com/en-us/support/design-help/client-support-services>.

THIS INFORMATION IS PROVIDED BY MICROCHIP "AS IS". MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, OR WARRANTIES RELATED TO ITS CONDITION, QUALITY, OR PERFORMANCE.

IN NO EVENT WILL MICROCHIP BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL LOSS, DAMAGE, COST, OR EXPENSE OF ANY KIND WHATSOEVER RELATED TO THE INFORMATION OR ITS USE, HOWEVER CAUSED, EVEN IF MICROCHIP HAS BEEN ADVISED OF THE POSSIBILITY OR THE DAMAGES ARE FORESEEABLE. TO THE FULLEST EXTENT ALLOWED BY LAW, MICROCHIP'S TOTAL LIABILITY ON ALL CLAIMS IN ANY WAY RELATED TO THE INFORMATION OR ITS USE WILL NOT EXCEED THE AMOUNT OF FEES, IF ANY, THAT YOU HAVE PAID DIRECTLY TO MICROCHIP FOR THE INFORMATION.

Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Trademarks

The Microchip name and logo, the Microchip logo, Adaptec, AVR, AVR logo, AVR Freaks, BesTime, BitCloud, CryptoMemory, CryptoRF, dsPIC, flexPWR, HELDO, IGLOO, JukeBlox, KeeLoq, Kleer, LANCheck, LinkMD, maXStylus, maXTouch, MediaLB, megaAVR, Microsemi, Microsemi logo, MOST, MOST logo, MPLAB, OptoLyzer, PIC, picoPower, PICSTART, PIC32 logo, PolarFire, Prochip Designer, QTouch, SAM-BA, SenGenuity, SpyNIC, SST, SST Logo, SuperFlash, Symmetricom, SyncServer, Tachyon, TimeSource, tinyAVR, UNI/O, Vectron, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

AgileSwitch, APT, ClockWorks, The Embedded Control Solutions Company, EtherSynch, Flashtec, Hyper Speed Control, HyperLight Load, Libero, motorBench, mTouch, Powermite 3, Precision Edge, ProASIC, ProASIC Plus, ProASIC Plus logo, Quiet-Wire, SmartFusion, SyncWorld, Temux, TimeCesium, TimeHub, TimePictra, TimeProvider, TrueTime, and ZL are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, Augmented Switching, BlueSky, BodyCom, Clockstudio, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, Espresso T1S, EtherGREEN, GridTime, IdealBridge, In-Circuit Serial Programming, ICSP, INICnet, Intelligent Parallelism, IntelliMOS, Inter-Chip Connectivity, JitterBlocker, Knob-on-Display, KoD, maxCrypto, maxView, memBrain, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PowerSmart, PureSilicon, QMatrix, REAL ICE, Ripple Blocker, RTAX, RTG4, SAM-ICE, Serial Quad I/O, simpleMAP, SimpliPHY, SmartBuffer, SmartHLS, SMART-I.S., storClad, SQI, SuperSwitcher, SuperSwitcher II, Switchtec, SynchroPHY, Total Endurance, Trusted Time, TSHARC, USBCheck, VariSense, VectorBlox, VeriPHY, ViewSpan, WiperLock, XpressConnect, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

The Adaptec logo, Frequency on Demand, Silicon Storage Technology, and Symmcom are registered trademarks of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2022, Microchip Technology Incorporated and its subsidiaries.

All Rights Reserved.

ISBN: 978-1-6683-0944-5

For information regarding Microchip's Quality Management Systems, please visit www.microchip.com/quality.

Worldwide Sales and Service

AMERICAS

Corporate Office
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://www.microchip.com/support>
Web Address:
www.microchip.com

Atlanta
Duluth, GA
Tel: 678-957-9614
Fax: 678-957-1455

Austin, TX
Tel: 512-257-3370

Boston
Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago
Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Dallas
Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit
Novi, MI
Tel: 248-848-4000

Houston, TX
Tel: 281-894-5983

Indianapolis
Noblesville, IN
Tel: 317-773-8323
Fax: 317-773-5453
Tel: 317-536-2380

Los Angeles
Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608
Tel: 951-273-7800

Raleigh, NC
Tel: 919-844-7510

New York, NY
Tel: 631-435-6000

San Jose, CA
Tel: 408-735-9110
Tel: 408-436-4270

Canada - Toronto
Tel: 905-695-1980
Fax: 905-695-2078

ASIA/PACIFIC

Australia - Sydney
Tel: 61-2-9868-6733

China - Beijing
Tel: 86-10-8569-7000

China - Chengdu
Tel: 86-28-8665-5511

China - Chongqing
Tel: 86-23-8980-9588

China - Dongguan
Tel: 86-769-8702-9880

China - Guangzhou
Tel: 86-20-8755-8029

China - Hangzhou
Tel: 86-571-8792-8115

China - Hong Kong SAR
Tel: 852-2943-5100

China - Nanjing
Tel: 86-25-8473-2460

China - Qingdao
Tel: 86-532-8502-7355

China - Shanghai
Tel: 86-21-3326-8000

China - Shenyang
Tel: 86-24-2334-2829

China - Shenzhen
Tel: 86-755-8864-2200

China - Suzhou
Tel: 86-186-6233-1526

China - Wuhan
Tel: 86-27-5980-5300

China - Xian
Tel: 86-29-8833-7252

China - Xiamen
Tel: 86-592-2388138

China - Zhuhai
Tel: 86-756-3210040

ASIA/PACIFIC

India - Bangalore
Tel: 91-80-3090-4444

India - New Delhi
Tel: 91-11-4160-8631

India - Pune
Tel: 91-20-4121-0141

Japan - Osaka
Tel: 81-6-6152-7160

Japan - Tokyo
Tel: 81-3-6880-3770

Korea - Daegu
Tel: 82-53-744-4301

Korea - Seoul
Tel: 82-2-554-7200

Malaysia - Kuala Lumpur
Tel: 60-3-7651-7906

Malaysia - Penang
Tel: 60-4-227-8870

Philippines - Manila
Tel: 63-2-634-9065

Singapore
Tel: 65-6334-8870

Taiwan - Hsin Chu
Tel: 886-3-577-8366

Taiwan - Kaohsiung
Tel: 886-7-213-7830

Taiwan - Taipei
Tel: 886-2-2508-8600

Thailand - Bangkok
Tel: 66-2-694-1351

Vietnam - Ho Chi Minh
Tel: 84-28-5448-2100

EUROPE

Austria - Wels
Tel: 43-7242-2244-39
Fax: 43-7242-2244-393

Denmark - Copenhagen
Tel: 45-4485-5910
Fax: 45-4485-2829

Finland - Espoo
Tel: 358-9-4520-820

France - Paris
Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany - Garching
Tel: 49-8931-9700

Germany - Haan
Tel: 49-2129-3766400

Germany - Heilbronn
Tel: 49-7131-72400

Germany - Karlsruhe
Tel: 49-721-625370

Germany - Munich
Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Germany - Rosenheim
Tel: 49-8031-354-560

Israel - Ra'anana
Tel: 972-9-744-7705

Italy - Milan
Tel: 39-0331-742611
Fax: 39-0331-466781

Italy - Padova
Tel: 39-049-7625286

Netherlands - Drunen
Tel: 31-416-690399
Fax: 31-416-690340

Norway - Trondheim
Tel: 47-7288-4388

Poland - Warsaw
Tel: 48-22-3325737

Romania - Bucharest
Tel: 40-21-407-87-50

Spain - Madrid
Tel: 34-91-708-08-90
Fax: 34-91-708-08-91

Sweden - Gothenberg
Tel: 46-31-704-60-40

Sweden - Stockholm
Tel: 46-8-5090-4654

UK - Wokingham
Tel: 44-118-921-5800
Fax: 44-118-921-5820