


# Spacers

## Locking Spacers and Saddles

### LOW PROFILE SELF-LOCK SPACERS


- Material: Nylon 6/6 UL94V-2
- Spacer design uses minimum board area
- Suitable for 1.6mm thick pc board
- Recommended Hole Size Ø4.0mm

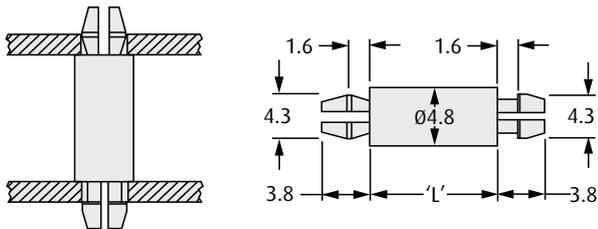

ORDER CODE	L	ORDER CODE	L
R6003-00	3.2	R6009-00	9.5
R6006-00	6.3	R6010-00	10.5
R6008-00	8.0	R6013-00	12.7

### RIGID SELF-LOCK SPACERS


- Material: Nylon 6/6 UL94V-2
- Spacers have wide ribs with locking fingers to provide a secure, rigid fit with extra stability

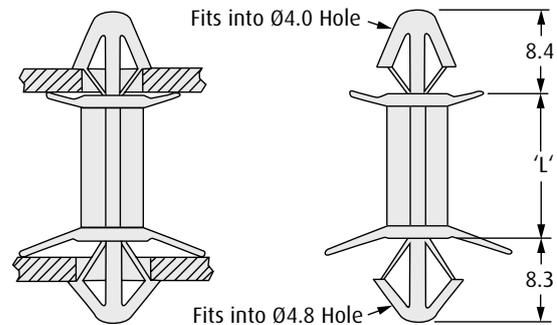

ORDER CODE	L	ORDER CODE	L
R6405-00	4.8	R6419-00	19.1
R6406-00	6.4	R6406-00	22.2
R6410-00	9.6	R6425-00	25.4
R6413-00	12.7	R6428-00	28.5
R6416-00	15.9	R6435-00	35.0

### CABLE LOCKING SADDLES


- Material: Nylon 6/6 UL94V-2
- Push cables in through flaps at top of saddle, then lock flaps together
- For PCB and chassis up to 2.0mm thick
- Recommended Hole Size Ø4.8mm

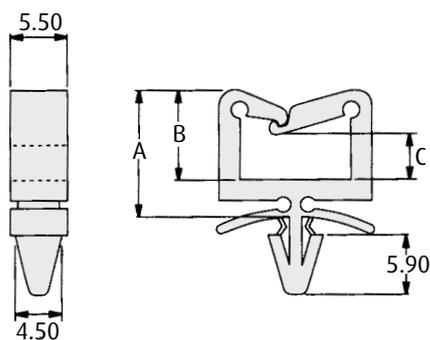

ORDER CODE	A	B	C
R6450-00	12.7	9.2	2.8
R6451-00	17.9	14.4	8.6
R6452-00	26.9	23.4	18.2
R6453-00	34.8	31.3	26.2

### REVERSE LOCK SPACERS

- Material: Nylon 6/6 UL94V-2
- Fit spacers from underside of board
- Recommended PC Board Thickness 0.5 - 1.8mm

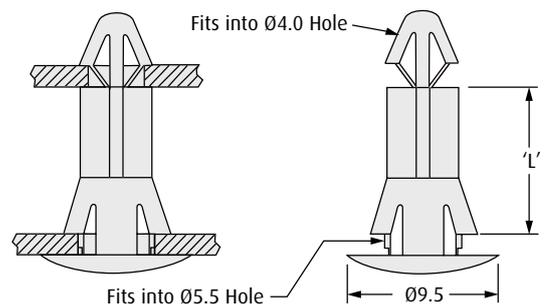

ORDER CODE	L	ORDER CODE	L
R6706-00	6.0	R6712-00	12.0
R6708-00	8.0	R6714-00	14.0
R6710-00	9.6	R6718-00	18.0

www.harwin.com



**HARWIN**

SPACERS

121