
Hardware Design Checklist

1.0 INTRODUCTION

This document provides a hardware design checklist for the Microchip USB2532. These checklist items should be followed when utilizing the USB2532 in a new design. A summary of these items is provided in [Section 9.0, "Hardware Checklist Summary," on page 16](#). Detailed information on these subjects can be found in the corresponding sections:

- [Section 2.0, "General Considerations"](#)
- [Section 3.0, "Power"](#)
- [Section 4.0, "USB Signals"](#)
- [Section 5.0, "USB Connectors"](#)
- [Section 6.0, "Clock Circuit"](#)
- [Section 7.0, "Power and Startup"](#)
- [Section 8.0, "Configuration Options"](#)

2.0 GENERAL CONSIDERATIONS

2.1 Required References

The USB2532 implementor must have the following documents on hand:

- *USB2532Data Sheet*
- USB2.0 Specification
- USB BC1.2 Specification

2.2 Pin Check

- Check the pinout of the part against the data sheet. Ensure all pins match the data sheet and are configured as inputs, outputs, or bidirectional for error checking.

2.3 Ground

- The ground pins, **GND**, should be connected to the solid ground plane on the board.
- It is recommended that all ground connections be tied together to the same ground plane. Separate ground planes are not recommended.

2.4 USB-IF Compliant USB Connectors

- USB-IF certified USB Connectors with a valid Test ID (TID) are required for all USB products to be compliant and pass USB-IF product certification.


3.0 POWER

- The analog supplies (**VDDA33**) are located on pins 10, 29, and 36. These pins all require a connection to a regulated 3.3V power plane. It is recommended to connect a 0.1 μF capacitor close to each **VDDA33** pin, along with a 1.0 μF bulk capacitance which is shared across all **VDDA33** pins. The capacitor size should be SMD_0603 or smaller.
- The **VDDCR12** pin 14 supplies power to the core and it is recommended to include a 1.0 μF and 0.1 μF capacitor placed close to this pin. The capacitor size should be SMD_0603 or smaller.
- The **VDD33** pins 15 and 23 supply voltage to the digital I/O blocks. The design should include a 0.1 μF capacitor placed close to the pin. The capacitor size should be SMD_0603 or smaller.

USB2532

The power and ground connections are shown in [Figure 3-1](#).

FIGURE 3-1: POWER AND GROUND CONNECTIONS

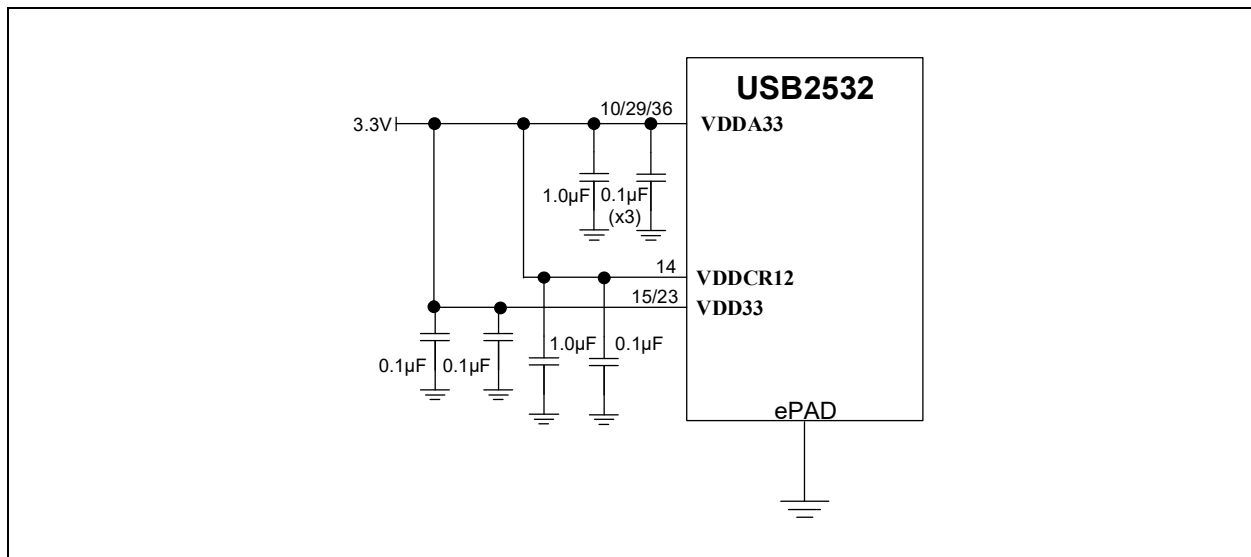

4.0 USB SIGNALS


4.1 USB PHY Interface

- **USBUP_DP** (pin 31): This pin is the positive (+) signal of the upstream USB2.0 differential pair. All necessary USB terminations and resistors are included in the IC. This pin can connect directly to the D+/DP pin of a USB Connector.
- **USBUP_DM** (pin 30): This pin is the negative (–) signal of the upstream USB2.0 differential pair. All necessary USB terminations and resistors are included in the IC. This pin can connect directly to the D–/DM pin of a USB Connector.
- **USBDN[3:1]_DP** (pins 2/4): This pin is the positive (+) signal of the downstream Ports 1 to 2 USB2.0 differential pair. All necessary USB terminations and resistors are included in the IC. This pin can connect directly to the D+/DP pin of a USB Connector.
- **USBDN[3:1]_DM** (pins 1/3): This pin is the negative (–) signal of the downstream Ports 1 to 2 USB2.0 differential pair. All necessary USB terminations and resistors are included in the IC. This pin can connect directly to the D–/DM pin of a USB Connector.

Note: The polarity of any of the USB2.0 differential pairs may be inverted either intentionally due to design constraints or to correct a design error using the Microchip PortSwap feature. This feature may be configured via SMBus/I²C configuration registers.

For transmit and receive channel connections details, refer to [Figure 4-1](#).

FIGURE 4-1: USB DATA SIGNAL CONNECTIONS

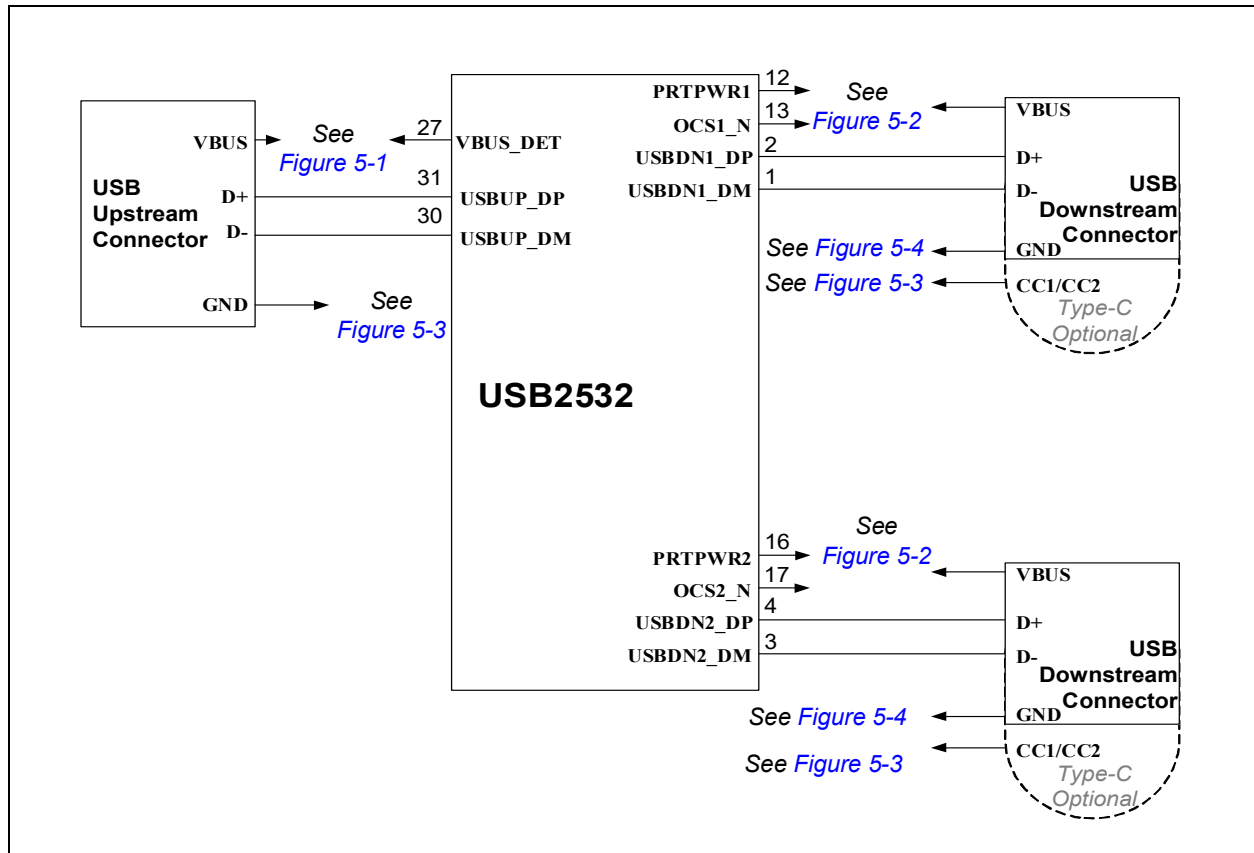

Note: Downstream Ports 1 to 2 have identical schematic implementation requirements. Only Ports 1 and 2 are shown to simplify the figures.

4.1.1 DISABLE DOWNSTREAM PORTS IF UNUSED

If any downstream of the USB2532 is unused, it should be disabled. This can be achieved through hub configuration (I²C) or through a port disable strap option.

4.2 USB Protection

The use of external protection circuitry may be required to provide additional ESD protection beyond what is included in the hub IC. These generally are grouped into three categories.

1. TVS protection diodes
 - ESD protection for IEC-61000-4-2 system level tests
2. Application targeted protection ICs or galvanic isolation devices
 - DC overvoltage protection for short to battery protection
3. Common-mode chokes
 - For EMI reduction

The USB2532 can be used in conjunction with these types of devices, but it is important to understand the negative effect on USB signal integrity that these devices may have. It is also important to select components accordingly and follow the implementation guidelines from the manufacturer of these devices. You may also use the following general guidelines for implementing these devices:

- Select only devices that are designed specifically for high-speed applications. Per the USB specification, a total of 5 pF is budgeted for connector, PCB traces, and protection circuitry.

USB2532

- These devices should be placed as close to the USB connector as possible.
- Never branch the USB signals to reach protection devices. Always place the protection devices directly on top of the USB differential traces.
- The effectiveness of TVS devices depends heavily on effective grounding. Always ensure a very low-impedance path to a large ground plane.
- Place TVS diodes on the same layer as the USB signal trace. Avoid vias or place vias behind the TVS device if possible.


Note: Microchip PHYBoost configuration options are available for compensating the negative effects of these devices. This feature may help to overcome marginal failures. It is simplest to determine the appropriate setting using laboratory experiments, such as USB eye diagram tests, on physical hardware.

5.0 USB CONNECTORS

5.1 Upstream Port VBUS and VBUS_DET

- The upstream port VBUS line must have no more than 10 μF of total capacitance connected.
- The **VBUS_DET** pin is used by the USB2532 to detect the presence of a USB host. The USB host can also toggle the state of VBUS at any time to force a soft Reset and reconnection of the USB2532.
- It is permissible to tie **VBUS_DET** directly to 3.3V. However, this is not recommended because the ability to force a Reset of the hub from the USB host VBUS toggling is lost.
- The recommended implementation is shown in [Figure 5-1](#). Note that the precise resistor values are not critical and alternate values may be selected as long as:
 - The impedance from the VBUS pin of the USB connector to the **VBUS_DET** pin is sufficiently high (i.e.: above 50k) to minimize pin leakage when VBUS is present before the Hub IC is powered on.
 - A sufficient voltage level is present on the **VBUS_DET** for the full range of VBUS (4.5V to 5.5V).

FIGURE 5-1: RECOMMENDED UPSTREAM PORT VBUS AND VBUS_DET CONNECTIONS

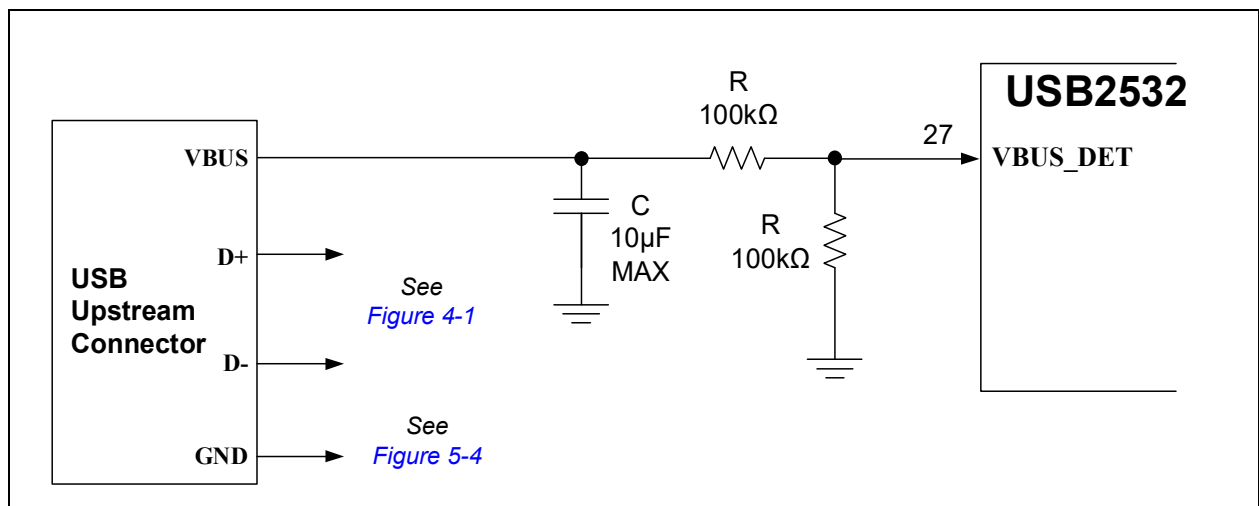

5.2 Downstream Port VBUS and PRTPWRx/OCSx_N

5.2.1 PRTPWRX

The **PRTPWRx** pin is an output pin which has the following states:

1. **PORT OFF:** **PRTPWRx** drives low. The **PRTPWRx** pin will only transition to the PORT ON state through a specific command from the USB host.
2. **PORT ON:** **PRTPWRx** drives low. The **PRTPWRx** pin will only transition to the PORT OFF state if:
 - An overcurrent event is sense on **OCSx_N** pin.
 - A command from the USB host is received which instructs the hub to disable power.
 - The hub is reset or experiences a POR event.

To ensure minimal BOM cost and simplicity, select a port power controller device with a 3.3V logic level, active-high input. If a device which operates from a 5V logic level is selected, the **PRTPWRx** signal may need to be boosted using external logic. If a port power controller with active-low input is selected, the **PRTPWRx** signal needs to be inverted using external logic.

5.2.2 OCSX_N


The **OCSx_N** pin is an input buffer which monitors overcurrent events. The pin includes an internal pull-up resistor to the 3.3V domain, so an external pull-up resistor is not required. The pin state is ignored when the port is in the PORT OFF state. When the port is in the PORT ON state, an overcurrent event is detected if the state of the pin is detected as low (below the V_{IL} voltage). When an overcurrent event is detected, the port automatically moves to the PORT OFF state until the USB host can be notified of the overcurrent event.

USB2532

To ensure minimal BOM cost and simplicity, select a port power controller device with an active-low, open-drain FAULT indicator output. If a port power controller with active-high FAULT indicator output is selected, the OCSx_N signal needs to be inverted using external logic.

A typical VBUS port power control implementation is shown in [Figure 5-2](#).

FIGURE 5-2: DOWNSTREAM VBUS AND PRTCTL1 CONNECTIONS

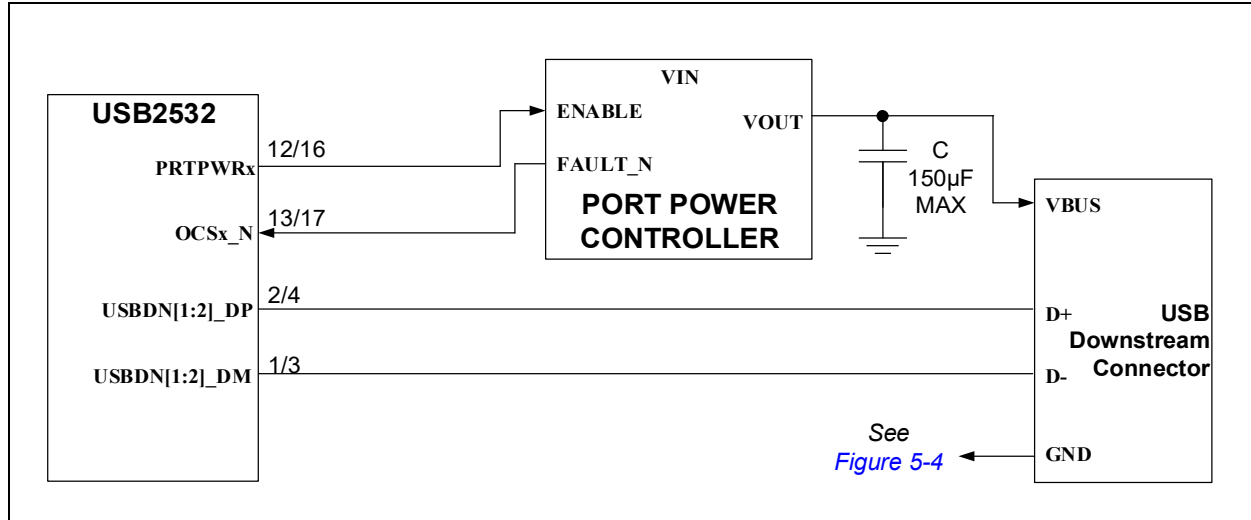

Note: The implementation, as shown in [Figure 5-2](#), assumes that the port power controller has an active-high enable input, and an active-low, open-drain style FAULT indicator. External polarity inversion through buffers or FETs may be required if the port power controller has different I/O characteristics.

5.3 Downstream Port Type-C Support


The USB2532 may be used with Type-C as the downstream port. This requires a Type-C port controller or combined port power controller and Type-C port controller. The USB2532 simply controls the Type-C port controller in the same way as it would control a standard Type-A port power controller. The hub does not require any kind of Type-C port status information from the Type-C port controller. The PRTPWRx signal should be connected to an enable pin on the Type-C controller and the OCSx_N signal should connect to the FAULT indicator output of the port power controller.

If the Type-C controller and the port power controller are separate devices, the Type-C controller must control the enable pin of the port power controller. The PRTPWRx should not directly control the VBUS enable signal of the port power controller.

A Type-C controller may be configured to signal a 500 mA, 1.5A, or 3.0A port power capability. The selected Port Power Controller should be sized accordingly.

A typical implementation is shown in [Figure 5-3](#).

FIGURE 5-3: DOWNSTREAM VBUS AND PRTCTL1 CONNECTIONS WITH A TYPE-C PORT

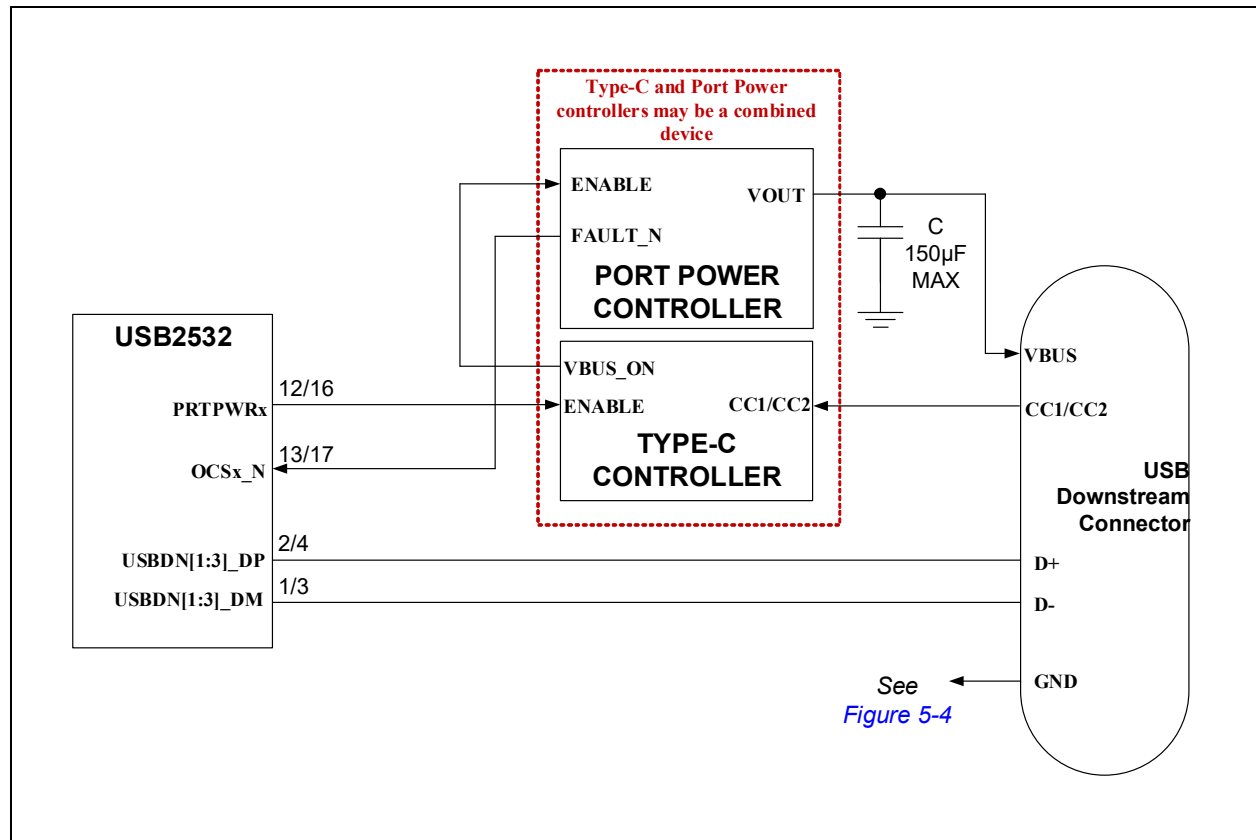

Note: The implementation, as shown in [Figure 5-3](#), assumes that the Type-C controller has an active-high enable input and the port power controller has an active-low, open-drain style FAULT indicator. External polarity inversion through buffers or FETs may be required if the Type-C controller and/or port power controller have different I/O characteristics.

5.4 GND and SHIELD Recommendations

The **GND** pins of the USB connector must be connected to the PCB with a low-impedance path directly to a large GND plane.


The **SHIELD** pins of the USB connector may be connected in one of two ways:

1. [Recommended] To **GND** through a resistor and capacitor in parallel. An RC filter can help decouple and minimize EMI between a PCB and a USB cable.
2. Directly to the GND plane.

USB2532

The recommended implementation is shown in [Figure 5-4](#).

FIGURE 5-4: RECOMMENDED USB CONNECTOR GND AND SHIELD CONNECTIONS

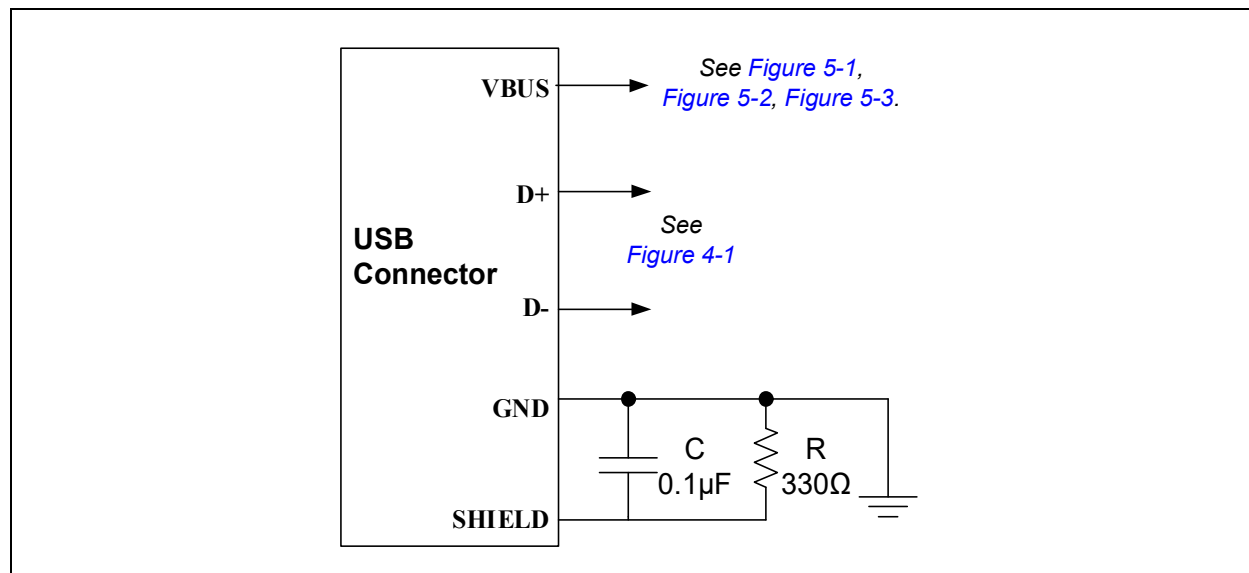


6.0 CLOCK CIRCUIT

6.1 Crystal and External Clock Connection

A 24.000-MHz (± 350 ppm) reference clock is the source for the USB interface and for all other functions of the device. Refer to [Figure 6-1](#). For exact specifications and tolerances, refer to the latest revision of the *USB2532 Data Sheet*.

- **XTAL1/REFCLKIN** (pin 33) is the clock circuit input for the USB2532. This pin requires a capacitor to ground. One side of the crystal connects to this pin.
- **XTAL2** (pin 32) is the clock circuit output for the USB2532. This pin requires a capacitor to ground. One side of the crystal connects to this pin.
- A 1 M Ω resistor connected across **XTAL1** and **XTAL2** is required. Failure to place this resistor will result in unstable crystal operation.
- The crystal loading capacitor values are system dependent, based on the total C_L specification of the crystal and the stray capacitance value. The PCB design, crystal, and layout all contribute to the characteristics of this circuit. A commonly used formula for calculating the appropriate physical C_1 and C_2 capacitor values is:
 - $C_L = ((C_{X1})(C_{X2}) / (C_{X1} + C_{X2}))$
 - Where: C_L is the spec from the crystal datasheet, $C_{X1} = C_{\text{stray}} + C_1$, $C_{X2} = C_{\text{stray}} + C_2$
 - Note that C_{stray} is the stray/parasitic capacitance due to PCB layout. It can be assumed to be very small, in the 1 pF to 2 pF range and then verified by physical experiments in the laboratory if PCB simulation tools are not available.
- Alternately, a 24.000 MHz, 1.2V-to-3.3V clock oscillator may be used to provide the clock source for the USB2532. When using a single-ended clock source, **XTAL2** (pin 32) should be left floating as a No Connect (NC).

FIGURE 6-1: CRYSTAL AND OSCILLATOR CONNECTIONS

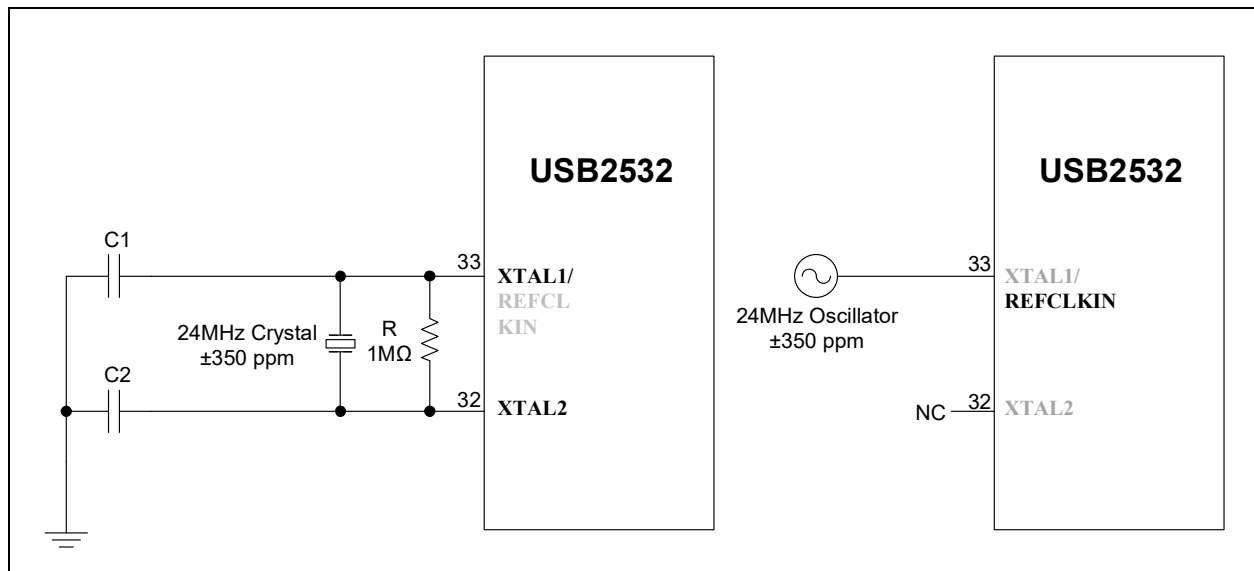

USB2532

7.0 POWER AND STARTUP

7.1 RBIAS Resistor

- **RBIAS** (pin 35) on the USB2532 must connect to ground through a 12 k Ω resistor with a tolerance of 1.0%. This is used to set up critical bias currents for the internal circuitry. This should be placed as close to the IC pin as possible, and be given a dedicated, low-impedance path to a ground plane.

7.2 Board Power Supplies

7.2.1 POWER RISE TIME

- The power rail voltage and rise time should adhere to the supply rise time specification as defined in the *USB2532 Data Sheet*.
- If a monotonic/fast power rail rise cannot be assured, then the **RESET_N** signal should be controlled by a Reset supervisor and only released when the power rail has reached a stable level.

7.2.2 CURRENT CAPABILITY

- It is important to size the 5V and 3.3V power rails appropriately. The 5V power supply must be capable of supplying sufficient power for all exposed USB ports concurrently without drooping below the minimum voltage permissible in the USB specification:
 - 500 mA per-port for USB2 Ports
 - 1.5A or 3.0A per Type-C port (depending on setting of the Type-C controller)
- The 3.3V power supply must be able to supply enough power to the USB hub IC. It is recommended that a 3.3V power rail be sized such that is able to supply the maximum power consumption specification as displayed in the *USB2532 Data Sheet*.

7.3 Reset Circuit

RESET_N (pin 26) is an active-low Reset input. This signal resets all logic and registers within the USB2532. A hardware Reset (**RESET_N** assertion) is not required following power-up. Please refer to the latest copy of the *USB2532 Data Sheet* for Reset timing requirements. [Figure 7-1](#) shows a recommended Reset circuit for powering up the USB2532 when Reset is triggered by the power supply. The values for the “R” resistor and “C” capacitor are not critical and may be adjusted per individual system needs or preferences.

FIGURE 7-1: RESET TRIGGERED BY POWER SUPPLY


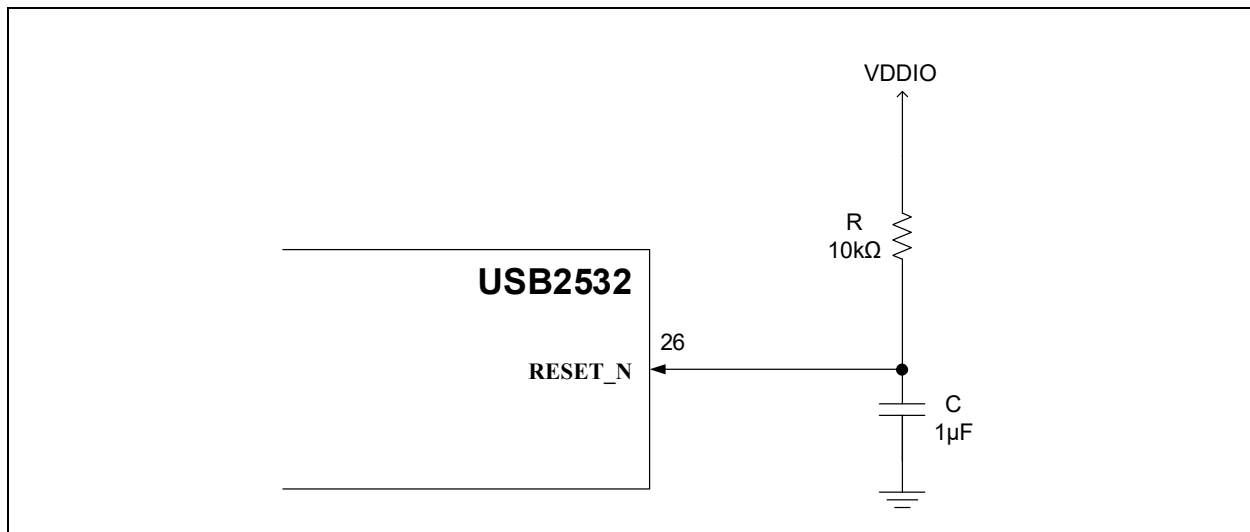


Figure 7-2 details the recommended Reset circuit for applications where Reset is driven by an external CPU/MCU. The Reset out pin (RST_OUT_N) from the CPU/MCU provides the warm Reset after power-up. The values for the “R” resistor and “C” capacitor are not critical and may be adjusted per individual system needs or preferences.

FIGURE 7-2: RESET CIRCUIT INTERFACE WITH CPU/MCU RESET OUTPUT

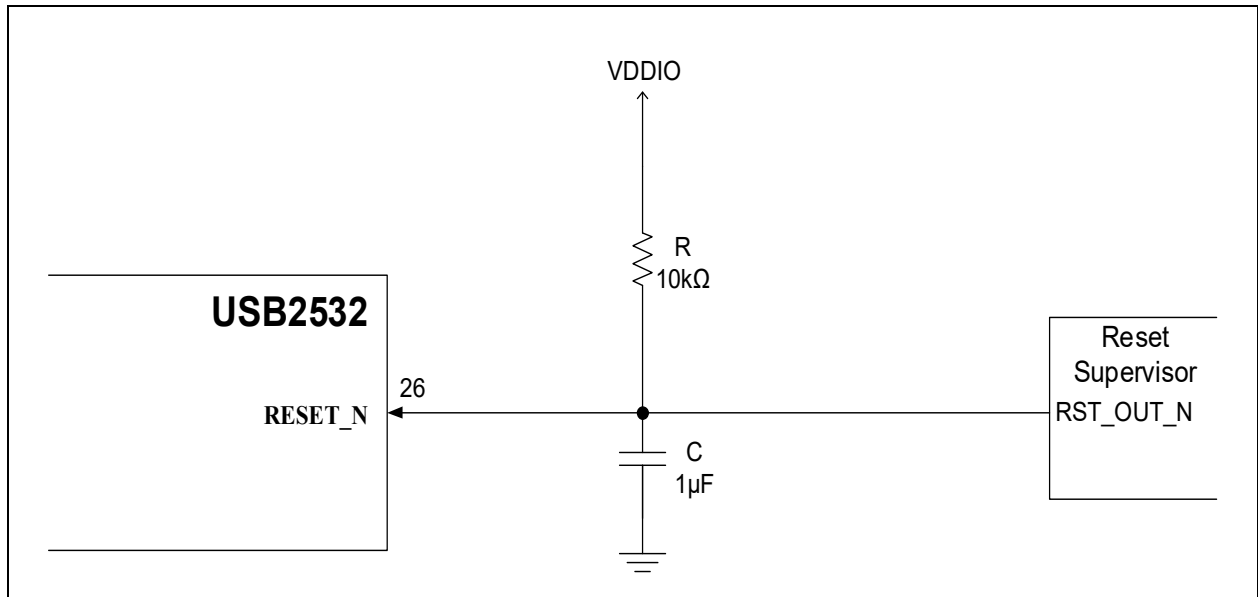

USB2532

8.0 CONFIGURATION OPTIONS


- The USB2532 can be configured in one of four ways:
 1. EEPROM memory device
 2. SMBus (via external MCU/SOC)
 3. Defaults + modifiers via CFG_SEL pins (Hardware Resistor Strap options ignored)
 4. Defaults + hardware resistor strap modifiers (resistor pull-down/pull-up options)
- The hub must be configured completely via EEPROM, SMBus, or defaults/hardware resistor straps. A combined or hybrid approach is not supported.
- The configuration mode is select via the CFG_SEL[1:0] pins.

8.1 Configuration via EEPROM

When configuring via EEPROM, the USB2532 operates as an I²C controller at a fixed 58.6 kHz speed. The EEPROM must be 256x8 and contain the entire register set from 0x00 to 0xFF that must be replicated in the USB2532. The default values should be obtained from the *USB2532 Data Sheet*. (See [Figure 8-1](#).)

Note: The EEPROM device must be programmed on board or preprogrammed before the PCB assembly. The USB2532 does not have a programming/USB pass-through mechanism.

FIGURE 8-1: RECOMMENDED CONNECTIONS IF CONFIGURED VIA EEPROM

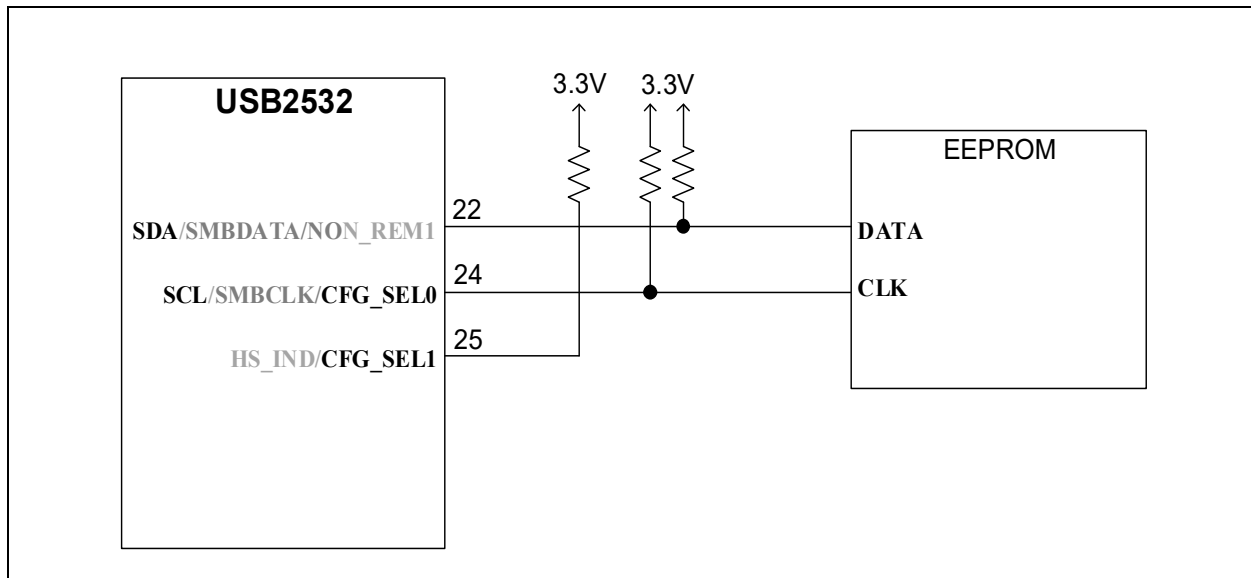

8.2 Configuration via MCU/SoC Memory

8.2.1 MCU/SOC OPERATION SUMMARY


By default, the USB2532 executes based on internal register defaults, and an external MCU/SoC device is not explicitly required. If settings which differ from the internal defaults are required by the application, an external MCU/SoC may be used to modify the register settings. Only the specific settings which need to be modified from the default need to be changed.

The USB2532 supports only one address option: 010_1100b.

8.2.2 MCU/SOC CONNECTION DIAGRAMS

The recommended schematic connections for an MCU/SOC memory device are shown in [Figure 8-2](#).

FIGURE 8-2: RECOMMENDED CONNECTIONS IF CONFIGURED VIA MCU/SOC

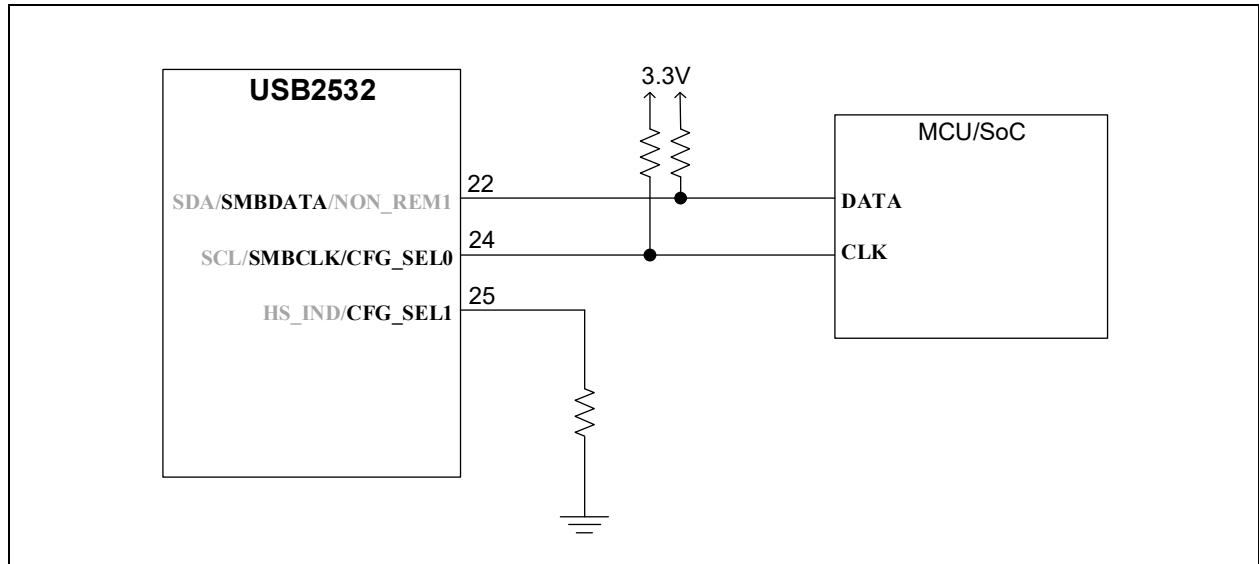

8.3 Non Removable Port Settings

- In a typical USB2532 application, downstream ports are routed to a user-accessible USB connector and hence the downstream port should be configured as a removable port.
- The following guidelines can be used to determine which setting to use:
 - If the port is routed to a user-accessible USB connector, it is **removable**.
 - If the port is routed to a permanently attached embedded USB device on the same PCB, or non-user-accessible wiring or cable harness, it is **non-removable**.
- The removable/non-removable device settings do not impact the operation of the hub in any way. The settings only modify select USB descriptors which the USB host may use to understand if a port is a user-accessible port, or if the device is a permanently attached device. Under standard operating conditions, the USB host may or may not modify its operation based upon this information. Certain USB compliance tests are impacted by this setting, so designs which must undergo USB compliance testing and certification must ensure that the configuration settings are correct.
- Removable port settings can be configured via:
 - EEPROM
 - I²C based SOC/MCU
 - Hardware strap options

To configure this feature via hardware resistor strap options, you must select a mode whereby hardware resistor strap options are enabled via CFG_SEL[1:0]. (See [Figure 8-3](#).) The USB2532 has two configuration strap option pins, NON_REM[1:0], which can be used to set the non-removable configurations for Ports 1 and 2. (See [Table 8-1](#).) These are located on pins 13 and 17. The strap setting is sampled one time at start-up. A configuration strap option must be selected if the hub is not configured via EEPROM or from an MCU/SOC via SMBus. Otherwise, the sensed result may be non-deterministic.

Note that the SUSP_IND/LOCAL_PWR/NON_REM0 operates in the following manner when EEPROM or SOC-based SMBus configuration is not present:

- During hub boot, the pin is sensed to determine the NON_REM0 setting.
- During hub runtime, the pin operates as suspend indicator output (SUSP_IND) if in a configuration mode with fixed Self-Powered or Bus-powered mode, or as a local power control (LOCAL_PWR) if in a configuration mode with dynamic power modes.

FIGURE 8-3: RECOMMENDED CONNECTIONS IF CONFIGURED VIA HARDWARE STRAP OPTIONS

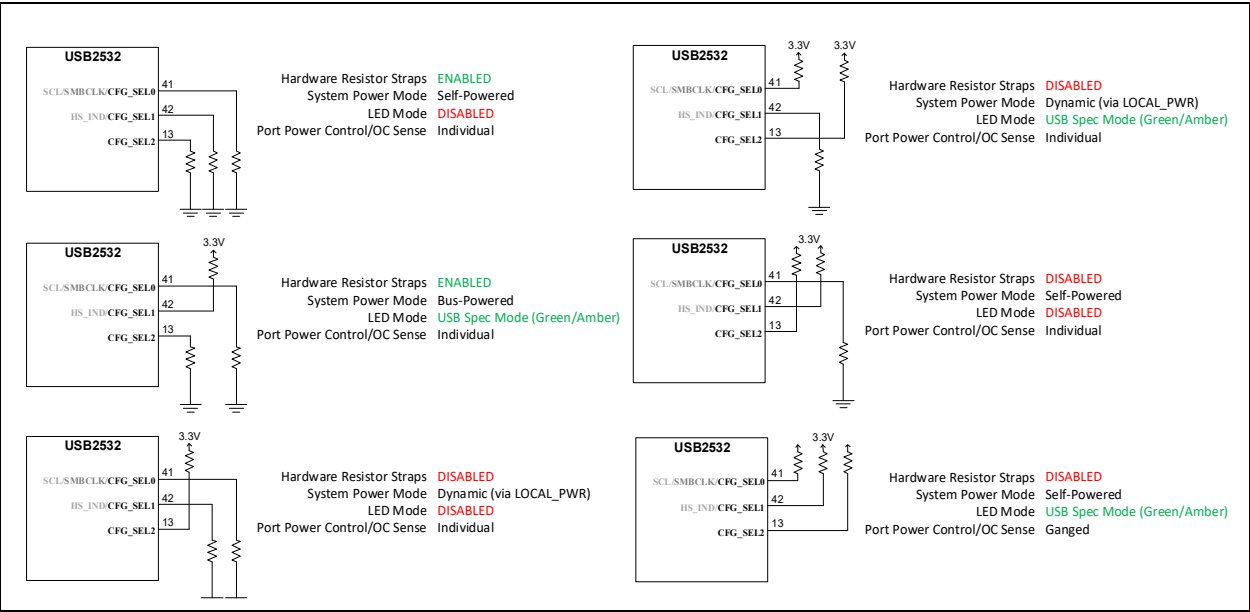


TABLE 8-1: CFG_NON_REM

Setting	Effect
NON_REM1 = 0, NON_REM0 = 0	Ports 1 and 2 are removable.
NON_REM1 = 0, NON_REM0 = 1	Port 1 is non-removable. Port 2 is removable.
NON_REM1 = 1, NON_REM0 = 0	Ports 1 and 2 are non-removable.
NON_REM1 = 1, NON_REM0 = 1	Undefined setting. Do not select.

8.4 Self-Powered/Bus-Powered Settings (Available via SMBus Configuration Only)

- In a typical USB2532 application, the hub should be configured as self-powered, which is the default configuration setting.
- The following guidelines can be used to determine which setting to use:
 - If the entire system (hub included) is powered completely from the Upstream USB connector's **VBUS** pin and the system is designed to operate using standard USB cabling and any standard USB host, then the hub system is **bus-powered**.
 - If the entire system (hub included) is always powered by a separate power connector, then the hub system is **self-powered**.
 - If the hub included is part of a larger embedded system with fixed cabling and a fixed USB host, then the hub system is most likely **self-powered** (even if all of the power is derived from the upstream USB connector's **VBUS** pin).
- The self-powered/bus-powered device settings do not impact the operation of the hub in any way. The settings only modify select USB descriptors which the USB host will use to budget power accordingly. Since a standard USB2.0 port is required to supply 500 mA to the downstream port, a self-powered hub and all of its downstream ports must continue to operate within that 500 mA budget. A USB host will typically limit the downstream ports of a self-powered hub to 100 mA. Any device which connects to a self-powered hub that declares it needs more than 100 mA will be prevented from operating by the USB host.
- The USB2532 also supports dynamic self-powered and bus-powered operation via the **LOCAL_PWR** control input pin. This feature must be enabled via EEPROM or SMBus configuration (DYNAMIC bit in CFG1 register). Once enabled, the **LOCAL_PWR** pin works as:
 - 0: Self-powered and no downstream port power restrictions will be in place.
 - 1: Bus-powered and downstream port power restrictions will be enforced by the USB host.

The **LOCAL_PWR** cannot be changed dynamically. To change the mode of operation, the pin state must be changed, then the hub must be reset for the hub to communicate the new mode of operation descriptors to the USB host.

8.5 Port Disable Straps

This feature requires the hub configuration straps to select a mode whereby hardware resistor strap options are enabled via **CFG_SEL[1:0]** (see [Figure 8-3](#)).

If using the port disable strap option, the **USBDP_DNx** and **USBDM_DNx** signals should be pulled high to 3.3V. This connection can be made directly to the 3.3V power net, or through a pull-up resistor. The pins may also be shorted together to simplify the layout.

Note: Both USB D+ and D–signals must be pulled high to effectively disable the port. If only one pin is pulled to 3.3V, the port will not be disabled.

8.6 Port Swap

The port swap straps allow and end system integrator to swap the polarity of each downstream port individually. This may help resolve PCB layout issues which would otherwise require crossovers to correct. Crossovers usually require one (1) signal of the differential pair to transition to another PCB layer and back, which causes discontinuity in differential impedance and trace length mismatches that negatively impact signal integrity.

9.0 HARDWARE CHECKLIST SUMMARY

TABLE 9-1: HARDWARE DESIGN CHECKLIST

Section	Check	Explanation	✓	Notes
Section 2.0, "General Considerations"	Section 2.1, "Required References"	All necessary documents are on hand.		
	Section 2.2, "Pin Check"	The pins match the data sheet.		
	Section 2.3, "Ground"	The grounds are tied together.		
	Section 2.4, "USB-IF Compliant USB Connectors"	USB-IF-compliant USB connectors with an assigned TID are used in the design (if USB compliance is required for the design).		
Section 3.0, "Power"	Section 3.0, "Power"	The VDD33 is within the range of 3.0V to 3.6V, 0.1 μ F capacitors are connected to pins 1 and 18, and a 1.0 μ F capacitor is connected to pin 9.		
		The VDDCR12 has a 1.0 μ F capacitor to GND.		
Section 4.0, "USB Signals"	Section 4.1, "USB PHY Interface"	The USB data pins are correctly routed to the USB connectors. Pay special attention to the polarity of the USB2.0 D+ and D– data lines.		
	Section 4.2, "USB Protection"	The ESD/EMI protection devices are designed specifically for high-speed data applications and that the combined parasitic capacitance of the protection devices, USB traces, and USB connector do not exceed 5 pF on each USB trace.		
Section 5.0, "USB Connectors"	Section 5.1, "Upstream Port VBUS and VBUS_DET"	The Upstream Port VBUS has no more than 10 μ F capacitance and that the VBUS signal is properly divided down to a 3.3V signal and connected to the VBUS_DET pin of the hub.		
	Section 5.2, "Downstream Port VBUS and PRTPWRx/OCSx_N"	If the downstream ports are standard Type-A ports, the PRT_CTLx and OCSx_N must be properly connected to both the Enable pin of the downstream port power controller and the FAULT indicator output of the port power controller.		
	Section 5.3, "Downstream Port Type-C Support"	If the downstream ports are standard Type-C ports, the PRT_CTLx must be properly connected to the Enable pin of the downstream port power controller. The OCSx_N must be connected to the FAULT indicator output of the port power controller.		
	Section 5.4, "GND and SHIELD Recommendations"	The USB connector is properly connected to PCB ground on both the GND pins and the SHIELD pins. It is recommended that an RC filter be placed in between the SHIELD pins and PCB ground.		

TABLE 9-1: HARDWARE DESIGN CHECKLIST (CONTINUED)

Section	Check	Explanation	V	Notes
Section 6.0, "Clock Circuit"	Section 6.1, "Crystal and External Clock Connection"	The crystal or clock is 24.000 MHz (± 350 ppm).		
		If a single-ended clock is used, it is connected to XTAL1 while leaving XTAL2 floating.		
		If a crystal is used, ensure the loading capacitors are appropriately sized for the crystal loading requirement.		
Section 7.0, "Power and Startup"	Section 7.1, "RBIAS Resistor"	A 12.0 k Ω 1% resistor is connected between the RBIAS pin and PCB ground.		
	Section 7.2, "Board Power Supplies"	The board power supplies deliver 3.0V to 3.6V to the hub power rails, and the power-on rise time meets the requirement of the hub as defined in the data sheet.		
		If the rise time requirement cannot be met, the RESET_N line is held low until the power regulators reach a steady state.		
	Section 7.3, "Reset Circuit"	The RESET_N signal has an external pull-up resistor or is otherwise properly controlled by an external SOC, MCU, or Reset supervisor device.		
Section 8.0, "Configuration Options"	Section 8.1, "Configuration via EEPROM"	If configuring via EEPROM, the EEPROM must be connected to the correct pins and that CFG_SEL0, CFG_SEL1, and CFG_SEL2 are strapped correctly.		
	Section 8.2, "Configuration via MCU/SoC Memory"	If configuring via SoC/MCU, SoC/MCU must be connected to the correct pins and that CFG_SEL0, CFG_SEL1, and CFG_SEL2 are strapped correctly.		
	Section 8.3, "Non Removable Port Settings"	For all ports which do not route to user-exposed USB connectors, the port must be configured to be non-removable via EEPROM, SoC/MCU, or hardware strap.		
	Section 8.4, "Self-Powered/Bus-Powered Settings (Available via SMBus Configuration Only)"	Ensure that Self-Powered/Bus-Powered settings are correct, and that hardware is designed appropriately. For Self-Powered applications, all power for the board is derived from an external power supply. For Bus-Powered applications, all power for the board is derived from VBUS sourced by the connected USB host.		
	Section 8.5, "Port Disable Straps"	If any USB ports are unused, they must be properly disabled by either strapping D+ and D- to 3.3V in hardware, or disabled via EEPROM or SoC/MCU.		
	Section 8.6, "Port Swap"	If using the USB Port Swap feature, the USB signal polarity must be swapped in the schematic design for each port which is configured to enable Port Swap.		

APPENDIX A: REVISION HISTORY

TABLE A-1: REVISION HISTORY

Revision Level & Date	Section/Figure/Entry	Correction
DS00004555A (05-25-22)	Initial release	

NOTES:

THE MICROCHIP WEB SITE

Microchip provides online support via our WWW site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQ), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at www.microchip.com. Under "Support", click on "Customer Change Notification" and follow the registration instructions.

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or Field Application Engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: <http://microchip.com/support>

Note the following details of the code protection feature on Microchip products:

- Microchip products meet the specifications contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is secure when used in the intended manner, within operating specifications, and under normal conditions.
- Microchip values and aggressively protects its intellectual property rights. Attempts to breach the code protection features of Microchip product is strictly prohibited and may violate the Digital Millennium Copyright Act.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of its code. Code protection does not mean that we are guaranteeing the product is “unbreakable”. Code protection is constantly evolving. Microchip is committed to continuously improving the code protection features of our products.

This publication and the information herein may be used only with Microchip products, including to design, test, and integrate Microchip products with your application. Use of this information in any other manner violates these terms. Information regarding device applications is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. Contact your local Microchip sales office for additional support or, obtain additional support at <https://www.microchip.com/en-us/support/design-help/client-support-services>.

THIS INFORMATION IS PROVIDED BY MICROCHIP "AS IS". MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, OR WARRANTIES RELATED TO ITS CONDITION, QUALITY, OR PERFORMANCE.

IN NO EVENT WILL MICROCHIP BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL LOSS, DAMAGE, COST, OR EXPENSE OF ANY KIND WHATSOEVER RELATED TO THE INFORMATION OR ITS USE, HOWEVER CAUSED, EVEN IF MICROCHIP HAS BEEN ADVISED OF THE POSSIBILITY OR THE DAMAGES ARE FORESEEABLE. TO THE FULLEST EXTENT ALLOWED BY LAW, MICROCHIP'S TOTAL LIABILITY ON ALL CLAIMS IN ANY WAY RELATED TO THE INFORMATION OR ITS USE WILL NOT EXCEED THE AMOUNT OF FEES, IF ANY, THAT YOU HAVE PAID DIRECTLY TO MICROCHIP FOR THE INFORMATION.

Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Trademarks

The Microchip name and logo, the Microchip logo, Adaptec, AnyRate, AVR, AVR logo, AVR Freaks, BesTime, BitCloud, CryptoMemory, CryptoRF, dsPIC, flexPWR, HELDO, IGLOO, JukeBlox, KeeLoq, Klear, LANCheck, LinkMD, maxStylus, maxTouch, MediaLB, megaAVR, Microsemi, Microsemi logo, MOST, MOST logo, MPLAB, OptoLyzer, PIC, picoPower, PICSTART, PIC32 logo, PolarFire, Prochip Designer, QTouch, SAM-B, SenGenuity, SpyNIC, SST, SST Logo, SuperFlash, Symmetricom, SyncServer, Tachyon, TimeSource, tinyAVR, UNI/O, Vectron, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

AgileSwitch, APT, ClockWorks, The Embedded Control Solutions Company, EtherSynch, Flashtec, Hyper Speed Control, HyperLight Load, IntelliMOS, Libero, motorBench, mTouch, Powermite 3, Precision Edge, ProASIC, ProASIC Plus, ProASIC Plus logo, Quiet-Wire, SmartFusion, SyncWorld, Temux, TimeCesium, TimeHub, TimePictra, TimeProvider, TrueTime, WinPath, and ZL are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, Augmented Switching, BlueSky, BodyCom, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, Espresso T1S, EtherGREEN, GridTime, IdealBridge, In-Circuit Serial Programming, ICSP, INICnet, Intelligent Paralleling, Inter-Chip Connectivity, JitterBlocker, Knob-on-Display, maxCrypto, maxView, memBrain, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, NVMe Express, NVMe, Omniscent Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PowerSmart, PureSilicon, QMatrix, REAL ICE, Ripple Blocker, RTAX, RTG4, SAM-ICE, Serial Quad I/O, simpleMAP, SimpliPHY, SmartBuffer, SmartHLS, SMART-I.S., storClad, SQI, SuperSwitcher, SuperSwitcher II, Switchtec, SynchroPHY, Total Endurance, TSHARC, USBCheck, VariSense, VectorBlox, VeriPHY, ViewSpan, WiperLock, XpressConnect, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

The Adaptec logo, Frequency on Demand, Silicon Storage Technology, Symmcom, and Trusted Time are registered trademarks of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2021, Microchip Technology Incorporated and its subsidiaries.

All Rights Reserved.

ISBN: 978-1-6683-0502-7

For information regarding Microchip's Quality Management Systems, please visit www.microchip.com/quality.

Worldwide Sales and Service

AMERICAS

Corporate Office
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://www.microchip.com/support>
Web Address:
www.microchip.com

Atlanta
Duluth, GA
Tel: 678-957-9614
Fax: 678-957-1455

Austin, TX
Tel: 512-257-3370

Boston
Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago
Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Dallas
Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit
Novi, MI
Tel: 248-848-4000

Houston, TX
Tel: 281-894-5983

Indianapolis
Noblesville, IN
Tel: 317-773-8323
Fax: 317-773-5453
Tel: 317-536-2380

Los Angeles
Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608
Tel: 951-273-7800

Raleigh, NC
Tel: 919-844-7510

New York, NY
Tel: 631-435-6000

San Jose, CA
Tel: 408-735-9110
Tel: 408-436-4270

Canada - Toronto
Tel: 905-695-1980
Fax: 905-695-2078

ASIA/PACIFIC

Australia - Sydney
Tel: 61-2-9868-6733

China - Beijing
Tel: 86-10-8569-7000

China - Chengdu
Tel: 86-28-8665-5511

China - Chongqing
Tel: 86-23-8980-9588

China - Dongguan
Tel: 86-769-8702-9880

China - Guangzhou
Tel: 86-20-8755-8029

China - Hangzhou
Tel: 86-571-8792-8115

China - Hong Kong SAR
Tel: 852-2943-5100

China - Nanjing
Tel: 86-25-8473-2460

China - Qingdao
Tel: 86-532-8502-7355

China - Shanghai
Tel: 86-21-3326-8000

China - Shenyang
Tel: 86-24-2334-2829

China - Shenzhen
Tel: 86-755-8864-2200

China - Suzhou
Tel: 86-186-6233-1526

China - Wuhan
Tel: 86-27-5980-5300

China - Xian
Tel: 86-29-8833-7252

China - Xiamen
Tel: 86-592-2388138

China - Zhuhai
Tel: 86-756-3210040

ASIA/PACIFIC

India - Bangalore
Tel: 91-80-3090-4444

India - New Delhi
Tel: 91-11-4160-8631

India - Pune
Tel: 91-20-4121-0141

Japan - Osaka
Tel: 81-6-6152-7160

Japan - Tokyo
Tel: 81-3-6880-3770

Korea - Daegu
Tel: 82-53-744-4301

Korea - Seoul
Tel: 82-2-554-7200

Malaysia - Kuala Lumpur
Tel: 60-3-7651-7906

Malaysia - Penang
Tel: 60-4-227-8870

Philippines - Manila
Tel: 63-2-634-9065

Singapore
Tel: 65-6334-8870

Taiwan - Hsin Chu
Tel: 886-3-577-8366

Taiwan - Kaohsiung
Tel: 886-7-213-7830

Taiwan - Taipei
Tel: 886-2-2508-8600

Thailand - Bangkok
Tel: 66-2-694-1351

Vietnam - Ho Chi Minh
Tel: 84-28-5448-2100

EUROPE

Austria - Wels
Tel: 43-7242-2244-39
Fax: 43-7242-2244-393

Denmark - Copenhagen
Tel: 45-4485-5910
Fax: 45-4485-2829

Finland - Espoo
Tel: 358-9-4520-820

France - Paris
Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany - Garching
Tel: 49-8931-9700

Germany - Haan
Tel: 49-2129-3766400

Germany - Heilbronn
Tel: 49-7131-72400

Germany - Karlsruhe
Tel: 49-721-625370

Germany - Munich
Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Germany - Rosenheim
Tel: 49-8031-354-560

Israel - Ra'anana
Tel: 972-9-744-7705

Italy - Milan
Tel: 39-0331-742611
Fax: 39-0331-466781

Italy - Padova
Tel: 39-049-7625286

Netherlands - Drunen
Tel: 31-416-690399
Fax: 31-416-690340

Norway - Trondheim
Tel: 47-7288-4388

Poland - Warsaw
Tel: 48-22-3325737

Romania - Bucharest
Tel: 40-21-407-87-50

Spain - Madrid
Tel: 34-91-708-08-90
Fax: 34-91-708-08-91

Sweden - Gothenberg
Tel: 46-31-704-60-40

Sweden - Stockholm
Tel: 46-8-5090-4654

UK - Wokingham
Tel: 44-118-921-5800
Fax: 44-118-921-5820