
Hardware Design Checklist

1.0 INTRODUCTION

This document provides a hardware design checklist for the Microchip KSZ8081RNA. These checklist items should be followed when utilizing the KSZ8081RNA in a new design. A summary of these items is provided in [Section 9.0, "Hardware Checklist Summary," on page 10](#). Detailed information on these subjects can be found in the corresponding section:

- [General Considerations on page 1](#)
- [Power on page 1](#)
- [Ethernet Signals on page 2](#)
- [Clock Circuit on page 5](#)
- [Digital Interfaces on page 6](#)
- [Startup on page 7](#)
- [Miscellaneous on page 9](#)

2.0 GENERAL CONSIDERATIONS

2.1 Pin Check

Check the pinout of the part against the data sheet. Ensure all pins match the data sheet and are configured as inputs, outputs, or bidirectional for error checking.

2.2 Ground


- The ground pins, **GND**, should be connected to the solid ground plane on the board.
- It is recommended that all ground connections be tied together to the same ground plane. Separate ground planes are not recommended.

3.0 POWER

- The analog supply (**VDDA_3.3**) is located on pin 2, and requires a connection to **VDDA** (created from +3.3V through a ferrite bead). Bulk capacitance should be placed on each side of the ferrite bead. Generally, a 100-220Ω (at 100-MHz) ferrite bead is used.
- The **VDDA_3.3** pin should include 0.1-μF and 22-μF capacitors to decouple the device. The capacitor size should be SMD_0603 or smaller.
- Pin 14 (**VDDIO**) is a variable supply voltage for the I/O pads. It should be connected to the +3.3V, 2.5V, or 1.8V supply. A bulk capacitor is needed close to the source to prevent any droop in the supply when the part starts. Decoupling capacitors need to be placed as close to the part as possible to reduce high frequency noise being injected through EMI interference.
- Pin 1 is the internally generated 1.2V core power rail. Connect 2.2-μF and 0.1-μF capacitors from Pin 1 to ground using wide traces as appropriate for power distribution. Do not connect an external 1.2V source.

The power and ground connections are shown in [Figure 3-1](#).

FIGURE 3-1: POWER AND GROUND CONNECTIONS

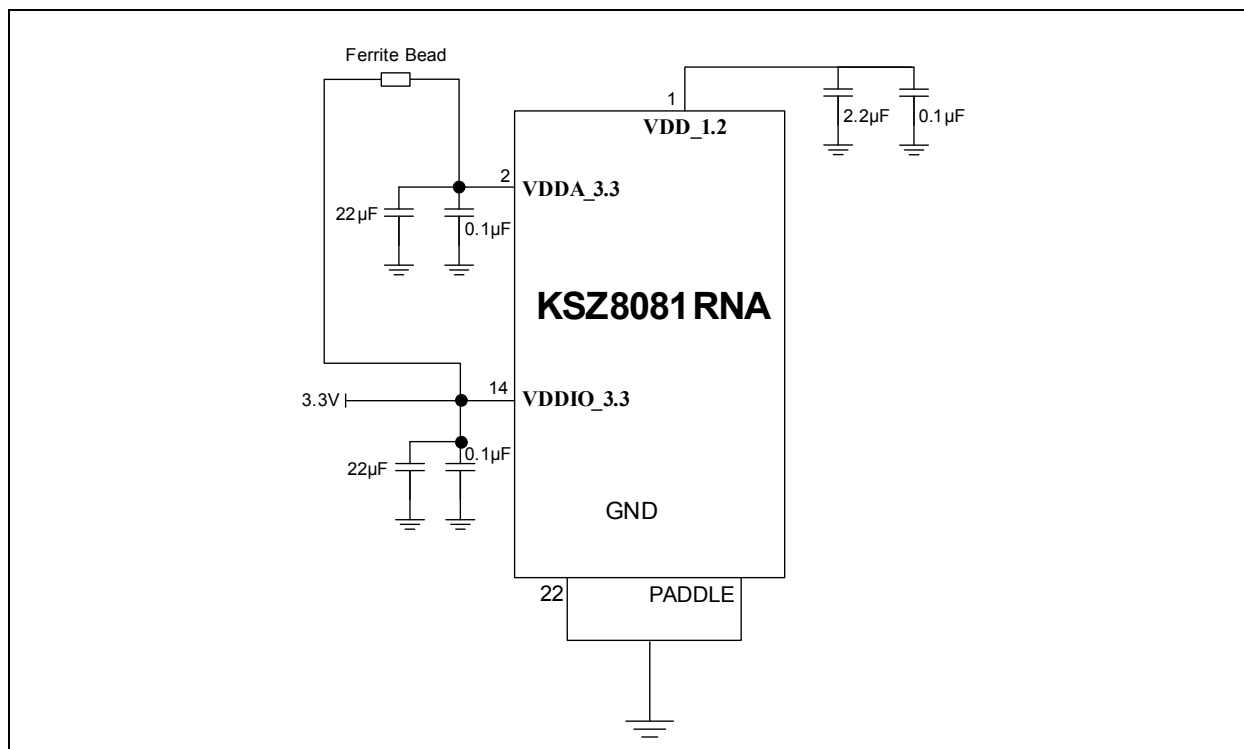

Caution: This +1.2V supply is for internal logic only. Do not power other circuits or devices with this supply.


4.0 ETHERNET SIGNALS

4.1 PHY Interface

- **TXP** (pin 6): This pin is the transmit twisted pair output positive connection from the internal PHY. It has an internal terminator and a bias, so it can be directly connected to the transmit channel of the magnetics and no external terminator and bias are needed.
- **TXM** (pin 5): This pin is the transmit twisted pair output negative connection from the internal PHY. It has an internal terminator and a bias, so it can be directly connected to the transmit channel of the magnetics and no external terminator and bias are needed.
- **RXP** (pin 4): This pin is the receive twisted pair input positive connection to the internal PHY. It has an internal terminator and a bias, so it can be directly connected to the receive channel of the magnetics and no external terminator and bias are needed.
- **RXM** (pin 3): This pin is the receive twisted pair input negative connection to the internal PHY. It has an internal terminator and a bias, so it can be directly connected to the receive channel of the magnetics and no external terminator and bias are needed.

For transmit and receive channel connections details, refer to [Figure 4-1](#).

FIGURE 4-1: TRANSMIT AND RECEIVE CHANNEL CONNECTIONS

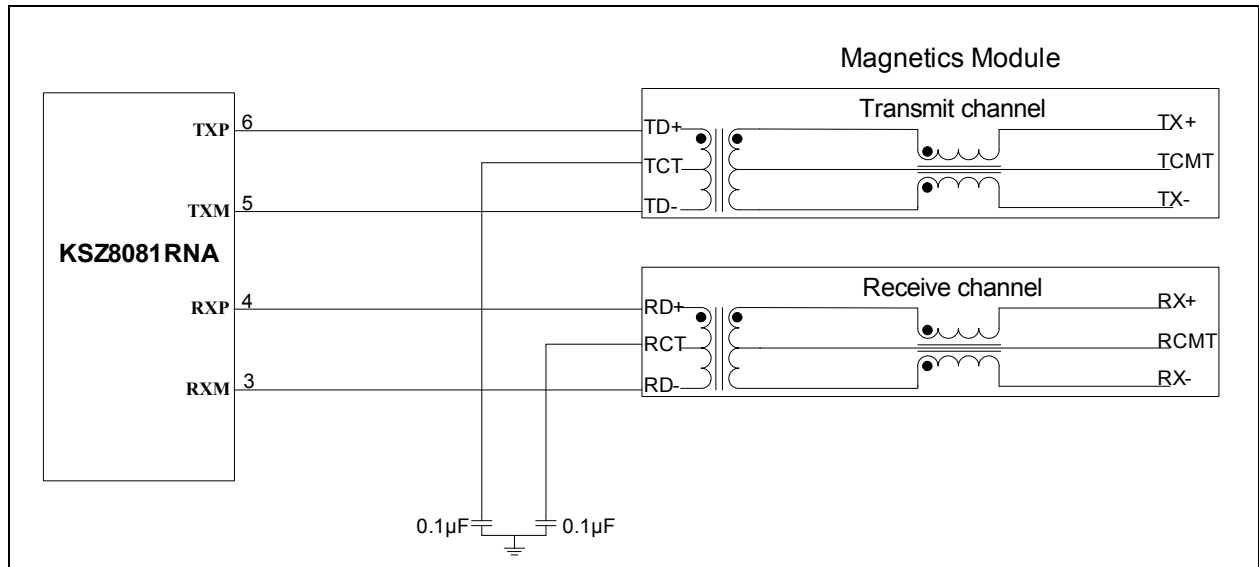


4.2 Magnetics Connection

- The center tap connection on the KSZ8081RNA side for the transmit channel only connects a 0.1-µF capacitor to GND and no bias is needed.
- The center tap connection on the KSZ8081RNA side for the receive channel only connects a 0.1-µF capacitor to GND and no bias is needed.
- The center taps of the magnetics of the transmit and receive channels should not be connected together.
- The center tap connection on the cable side (RJ45 side) for the transmit channel should be terminated with a 75-Ω resistor through a 1000-pF, 2-KV capacitor to chassis ground.
- The center tap connection on the cable side (RJ45 side) for the receive channel should be terminated with a 75-Ω resistor through a 1000-pF, 2-KV capacitor to chassis ground.
- Only one 1000-pF, 2-KV capacitor to chassis ground is required. It is shared by both TX and RX center taps.
- MDI Connections:
 - Pin 1 of the RJ45 is TX+ and should trace through the magnetics to TXP (pin 6) of the KSZ8081RNA.
 - Pin 2 of the RJ45 is TX- and should trace through the magnetics to TXM (pin 5) of the KSZ8081RNA.
 - Pin 3 of the RJ45 is RX+ and should trace through the magnetics to RXP (pin 4) of the KSZ8081RNA.
 - Pin 6 of the RJ45 is RX- and should trace through the magnetics to RXM (pin 3) of the KSZ8081RNA.
- MDIX Connections:
 - Pin 3 of the RJ45 is TX+ and should trace through the magnetics to TXP (pin 6) of the KSZ8081RNA.
 - Pin 6 of the RJ45 is TX- and should trace through the magnetics to TXM (pin 5) of the KSZ8081RNA.
 - Pin 1 of the RJ45 is RX+ and should trace through the magnetics to RXP (pin 4) of the KSZ8081RNA.
 - Pin 2 of the RJ45 is RX- and should trace through the magnetics to RXM (pin 3) of the KSZ8081RNA.
- When using the KSZ8081RNA device in the Auto MDIX mode of operation, the use of an Auto MDIX style magnetics module (that is, the one where the TX and RX channels are identical) is required.

4.3 RJ45 Connector

- Pins 4 and 5 of the RJ45 connector interface to one pair of unused wires in CAT-5 type cables. These should be terminated to chassis ground through a 1000-pF, 2-KV capacitor. There are two methods of accomplishing this:
 - Pins 4 and 5 can be connected together with two 49.9- Ω resistors. The common connection of these resistors should be connected through a third 49.9- Ω resistor to the 1000-pF, 2-KV capacitor.
 - For a lower component count, the resistors can be combined. The two 49.9- Ω resistors in parallel perform like a 25- Ω resistor. The 25- Ω resistor in series with the 49.9- Ω resistor causes the entire circuit to function as a 75- Ω resistor. So, by shorting pins 4 and 5 together on the RJ45 and terminating them with a 75- Ω resistor in series with the 1000-pF, 2-KV capacitor to chassis ground, an equivalent circuit is created.
- Pins 7 and 8 of the RJ45 connector interface to one pair of unused wires in CAT-5 type cables. These should be terminated to chassis ground through a 1000-pF, 2-KV capacitor. There are two methods of accomplishing this:
 - Pins 7 and 8 can be connected together with two 49.9- Ω resistors. The common connection of these resistors should be connected through a third 49.9- Ω resistor to the 1000-pF, 2-KV capacitor.
 - For a lower component count, the resistors can be combined. The two 49.9- Ω resistors in parallel perform like a 25- Ω resistor. The 25- Ω resistor in series with the 49.9- Ω resistor causes the entire circuit to function as a 75- Ω resistor. So, by shorting pins 7 and 8 together on the RJ45 and terminating them with a 75- Ω resistor in series with the 1000-pF, 2-KV capacitor to chassis ground, an equivalent circuit is created.
- The RJ45 shield should be attached directly to chassis ground.

FIGURE 4-2: RJ45 CONNECTIONS

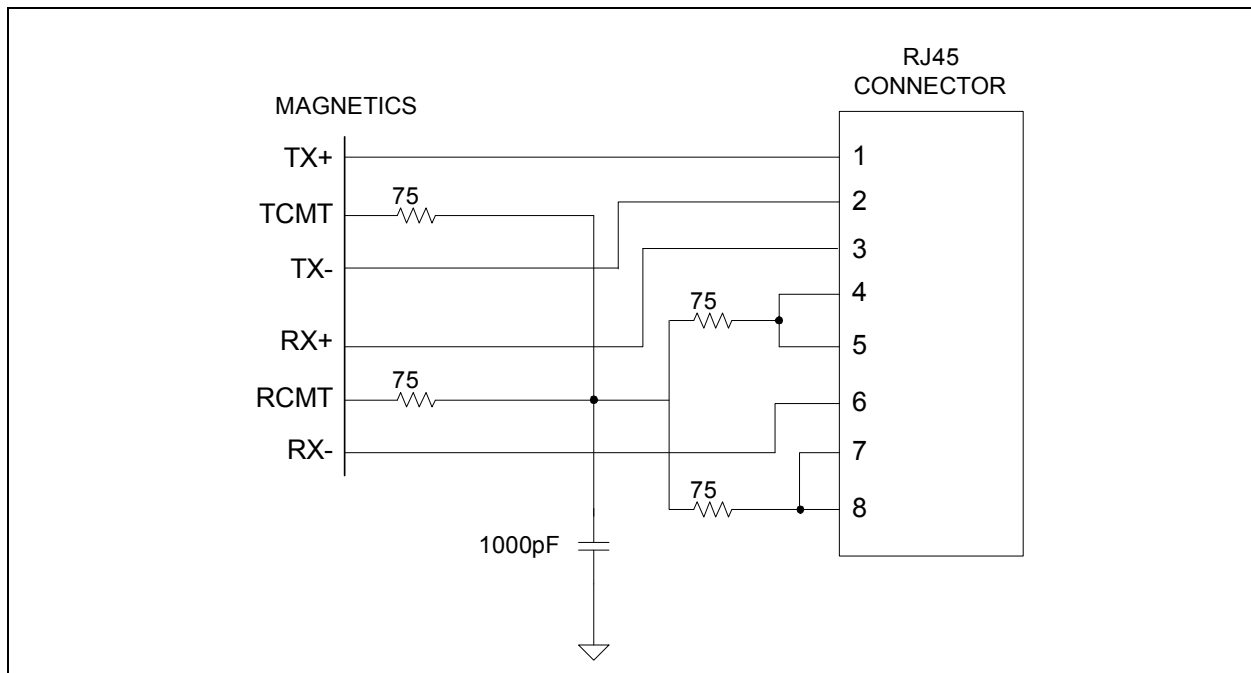

5.0 CLOCK CIRCUIT


5.1 Crystal and External Clock Connection

A 25.000-MHz (± 50 ppm) crystal should be used to provide the clock source. For exact specifications and tolerances, refer to the latest revision of the KSZ8081RNA data sheet.

- **XI** (pin 8) is the clock circuit input for the KSZ8081RNA. This pin requires a capacitor to ground. One side of the crystal connects to this pin.
- **XO** (pin 7) is the clock circuit output for the KSZ8081RNA. This pin requires a capacitor to ground. One side of the crystal connects to this pin.
- Since every system design is unique, the capacitor values are system dependent, based on the CL spec of the crystal and the stray capacitance value. The PCB design, crystal, and layout all contribute to the characteristics of this circuit.

Alternately, a 25.000-MHz, 3.3-V clock oscillator may be used to provide the clock source for the KSZ8081RNA. When using a single ended clock source, **XO** (pin 7) should be left floating as a No Connect (NC).

FIGURE 5-1: CRYSTAL AND OSCILLATOR CONNECTIONS

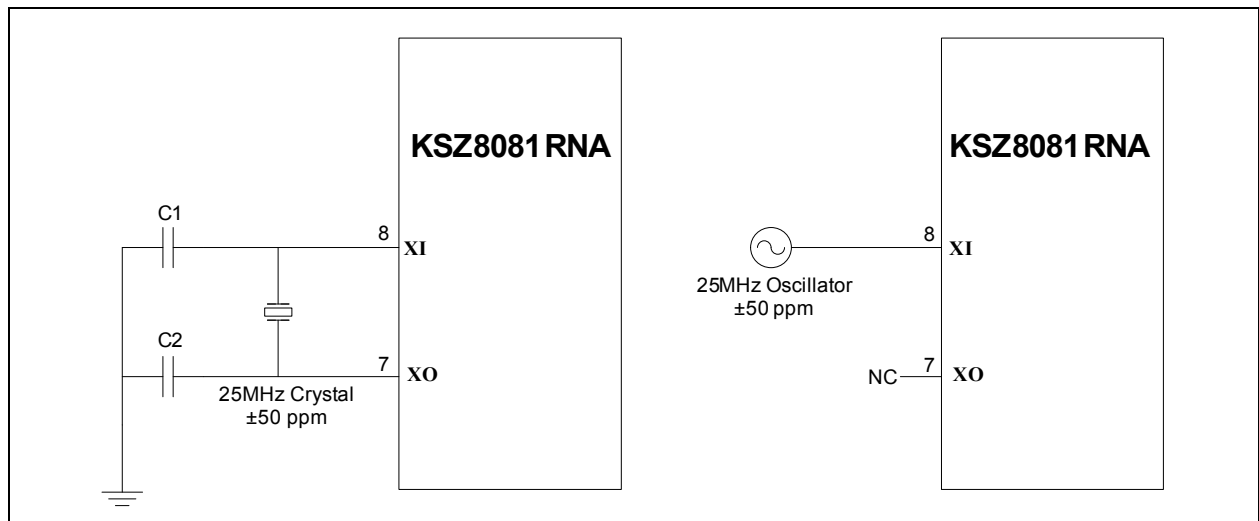

KSZ8081RNA

6.0 DIGITAL INTERFACES

6.1 RMII Interface


- When utilizing either an external RMII MAC interface, the following table indicates the proper connections for the 10 signals, including two management pins (MDC and MDIO).

TABLE 6-1: RMII CONNECTIONS

From KSZ8081RNA:	Connects to RMII MAC Device:
RXD0 (pin 13)	RXD<0>
RXD1 (pin 12)	RXD<1>
RXER (17)	RX_ER
CRS_DV (pin 15)	CRS_DV
REF_CLK (pin 16)	REF_CLK
TXD0 (pin 20)	TXD<0>
TXD1 (pin 21)	TXD<1>
TXEN (pin 19)	TX_EN
MDIO (pin 10)	MDIO
MDC (pin 11)	MDC

- Provisions should be made for series terminations for all RMII interface pins. Series resistors enable the designer to closely match the output driver impedance of the KSZ8081RNA and the PCB trace impedance to minimize ringing on the signals. Exact resistor values are application-dependent and must be analyzed in-system. A suggested starting point for the value of these series resistors is 33Ω.
- The KSZ8081RNA offers two RMII clock modes:
 - 25-MHz RMII Clock Mode (crystal or external oscillator) (default mode of operation)
 - 50-MHz RMII Normal Mode (external oscillator only)
- Example RMII connection diagrams for 50-MHz and 25-MHz clock modes are detailed in [Figure 6-1](#)[Figure 6-2](#). For additional details on clock requirements, refer to [Section 5.1, Crystal and External Clock Connection](#). For additional details on register and strapping configuration, refer to the KSZ8081RNA datasheet.

FIGURE 6-1: RMII CONNECTION DIAGRAMS

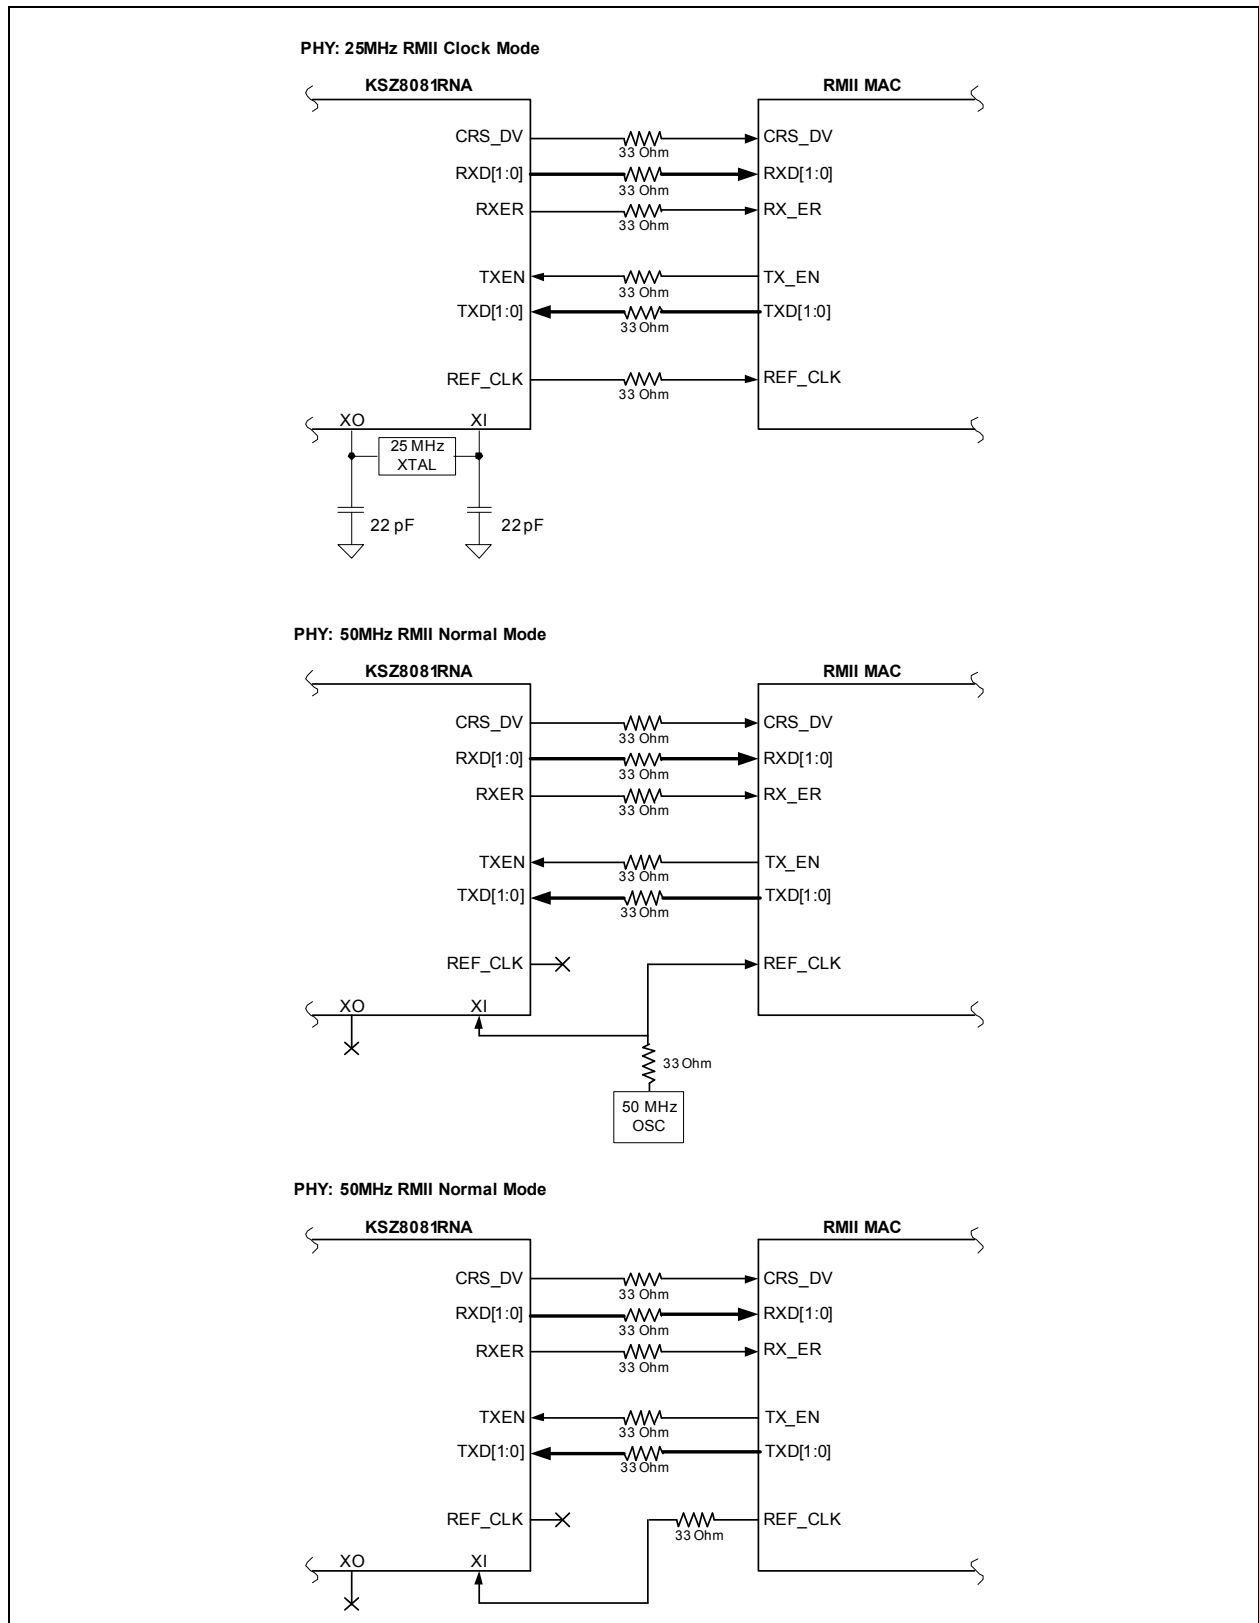

KSZ8081RNA

6.2 Required External Pull-ups

- When using the KSZ8081RNA MDC/MDIO management pins, a pull-up resistor from 1-K Ω to 10-K Ω on the **MDIO** signal (pin 10) is required, based on an **MDC** frequency from 10-MHz to $\leq$ 1-MHz.
- If used, the **INTRP** (pin 18) requires a 4.7-K Ω external pull-up resistor since this output is an open drain. If the **INTRP** pin is not used then this pin can float.

7.0 STARTUP

7.1 Reset Circuit

RST# (pin 24) is an active-low reset input. This signal resets all logic and registers within the KSZ8081RNA. A hardware reset (**RST#** assertion) is required following power-up. Please refer to the latest copy of the KSZ8081RNA data sheet for reset timing requirements. [Figure 7-1](#) shows a recommended reset circuit for powering up the KSZ8081RNA when reset is triggered by the power supply.

FIGURE 7-1: RESET TRIGGERED BY POWER SUPPLY


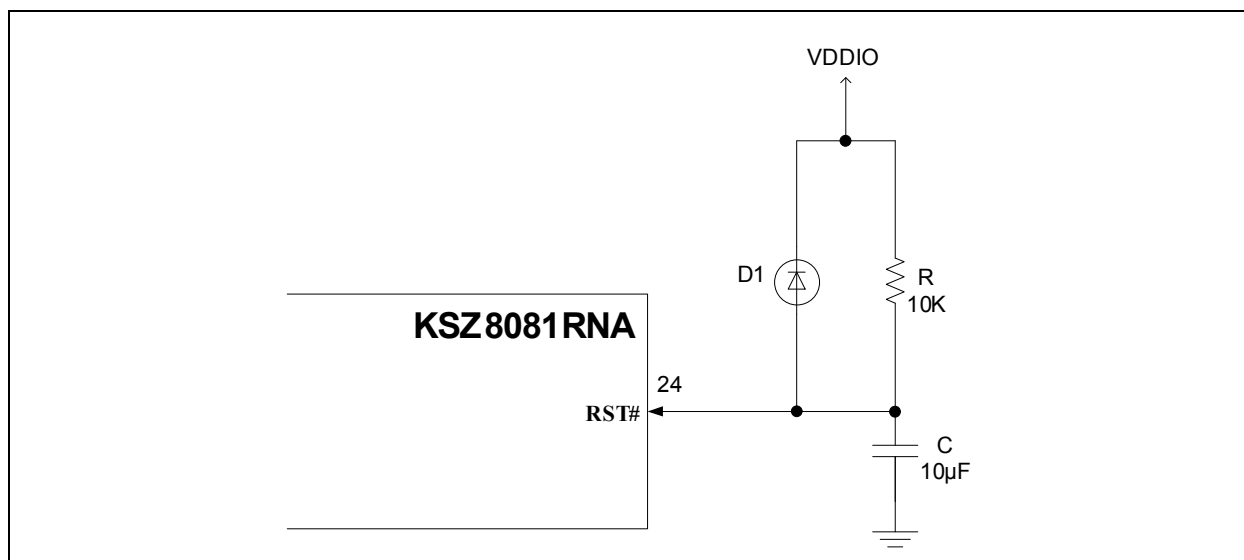


Figure 7-2 details the recommended reset circuit for applications where reset is driven by an external CPU or FPGA. The reset out pin (RST_OUT_n) from the CPU/FPGA provides the warm reset after power-up. If the Ethernet device and CPU/FPGA use the same VDDIO voltage, D2 can be removed and both reset pins can be directly connected.

FIGURE 7-2: RESET CIRCUIT INTERFACE WITH CPU/FPGA RESET OUTPUT

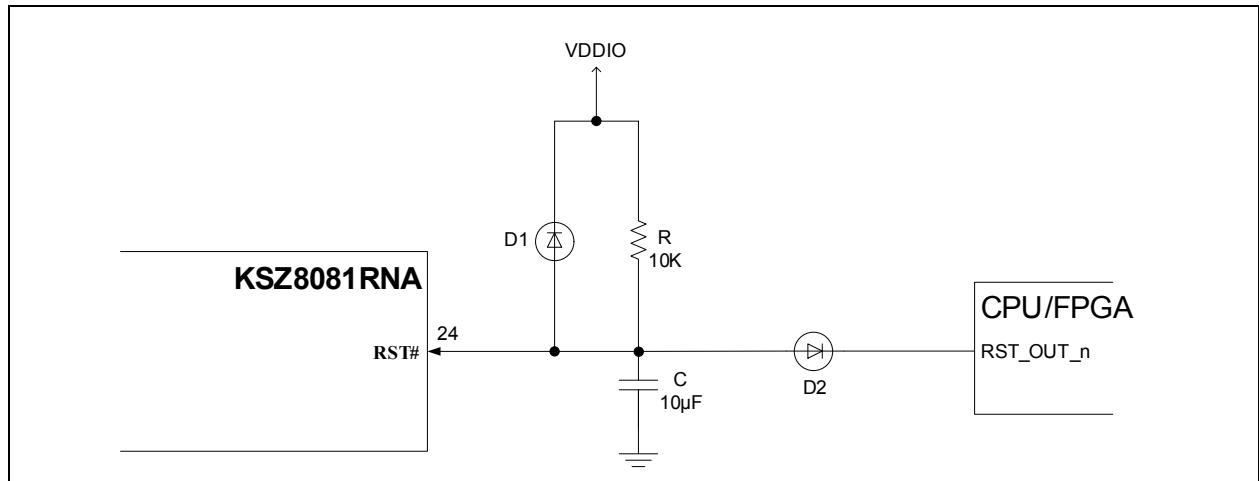

7.2 LED Pins

- The KSZ8081RNA provides one LED signal. These indicators display speed, link, and activity information about the current state of the PHY. The LED pins drive low to light up the LED indicators, which should have their anode ends tied to 3.3V and their cathode ends tied through a series resistor (typically 220Ω-470Ω). Refer to the KSZ8081RNA data sheet for further details on how to connect each pin for correct operation.
- The LED functionality signal pins are shared with the following pin strapping functions:
 - LED0 is shared with ANEN_SPEED on pin 23 for KSZ8081RNA.

Note 1: For 1.8V VDDIO, LED indication support is not recommended due to the low voltage. Without the LED indicator, the SPEED and NWAYEN strapping pins are functional with a 4.7KΩ pull-up to 1.8V VDDIO (or be floated) for a value of '1', and with a 1.0KΩ pull-down to ground for a value of '0'.

- If using RJ45 jacks with integrated LEDs and 1.8V VDDIO, a level shifting is required from LED 3.3V to 1.8V. In this case, a bipolar transistor or a level shifting device can be used.

KSZ8081RNA

8.0 MISCELLANEOUS

8.1 REXT Resistor

The **REXT** pin on the KSZ8081RNA must connect to ground through a 6.49-K Ω resistor with a tolerance of 1.0%. This is used to set up critical bias currents for the embedded 10/100 Ethernet physical device.

8.2 Other Considerations

- Incorporate a large SMD footprint (SMD_1210) to connect the chassis ground to the digital ground. This allows some flexibility at EMI testing for different grounding options. Leaving the footprint open allows the two grounds to remain separate. Shorting them together with a zero ohm resistor connects them. For best performance, short them together with a cap or a ferrite bead.
- Be sure to incorporate enough bulk capacitors (4.7-22 μ F) for each power plane.

9.0 HARDWARE CHECKLIST SUMMARY

TABLE 9-1: HARDWARE DESIGN CHECKLIST

Section	Check	Explanation	✓	Notes
Section 2.0, "General Considerations"	Section 2.1, "Pin Check"	Verify that the pins match the data sheet.		
	Section 2.2, "Ground"	Verify that the grounds are tied together.		
Section 3.0, "Power"	Section 3.0, "Power"	• Ensure VDDA_3.3 and VDDIO are in the range 3.135V to 3.465V and a 22-μF capacitor is on each pin. • VDD_1.2 requires two 0.1-μF capacitors.		
Section 4.0, "Ethernet Signals"	Section 4.1, "PHY Interface"	Verify that the TX and RX pin do not contain any termination resistors.		
	Section 4.2, "Magnetics Connection"	Verify that the center taps are connected to the GND using separate 0.1-μF capacitors on the KSZ8081MLX device side, and are terminated with 75-Ω resistors through a 1000-pF, 2-kV capacitor to chassis ground on the RJ45 line side.		
	Section 4.3, "RJ45 Connector"	Verify pins 4/5 and 7/8 of the RJ45 connect to CAT-5 cable and are terminated to chassis ground through a 1000-pF, 2-kV capacitor.		
Section 5.0, "Clock Circuit"	Section 5.1, "Crystal and External Clock Connection"	Verify usage of 25-MHz ±50ppm crystal.		
Section 6.0, "Digital Interfaces"	Section 6.2, "RMII Interface", Section 6.3, "Required External Pull-ups"	Confirm proper RMII signals between MAC and PHY interface with correct termination resistors (33Ω) and external pull-up for MDIO signal.		
Section 7.0, "Startup"	Section 7.1, "Reset Circuit"	Confirm proper reset circuit design: standalone reset or external CPU/FPGA reset.		
	Section 7.3, "LED Pins"	If used, confirm proper connections, taking into consideration shared functionality on select LED pins.		
Section 8.0, "Miscellaneous"	Section 8.1, "REXT Resistor"	Confirm proper REXT resistor (6.49 KΩ, 1.0%).		
	Section 8.2, "Other Considerations"	• Incorporate a large SMD footprint (SMD_1210) to connect the chassis ground to the chip ground instead of the digital ground. • Incorporate sufficient power plane bulk capacitors (4.7-22 μF).		

KSZ8081RNA

APPENDIX A: REVISION HISTORY

TABLE A-1: REVISION HISTORY

Revision Level & Date	Section/Figure/Entry	Correction
DS00002778A (08-07-18)	Initial release	

THE MICROCHIP WEB SITE

Microchip provides online support via our WWW site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQ), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at www.microchip.com. Under "Support", click on "Customer Change Notification" and follow the registration instructions.

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or Field Application Engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: <http://microchip.com/support>

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Trademarks

The Microchip name and logo, the Microchip logo, AnyRate, AVR, AVR logo, AVR Freaks, BeaconThings, BitCloud, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, Heldo, JukeBlox, KEELOQ, KEELOQ logo, Klear, LANCheck, LINK MD, maXStylus, maXTouch, MediaLB, megaAVR, MOST, MOST logo, MPLAB, OptoLyzer, PIC, picoPower, PICSTART, PIC32 logo, Prochip Designer, QTouch, RightTouch, SAM-BA, SpyNIC, SST, SST Logo, SuperFlash, tinyAVR, UNI/O, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

ClockWorks, The Embedded Control Solutions Company, EtherSynch, Hyper Speed Control, HyperLight Load, IntelliMOS, mTouch, Precision Edge, and Quiet-Wire are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, BodyCom, chipKIT, chipKIT logo, CodeGuard, CryptoAuthentication, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, Inter-Chip Connectivity, JitterBlocker, KlearNet, KlearNet logo, Mindi, MiWi, motorBench, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PureSilicon, QMatrix, RightTouch logo, REAL ICE, Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2018, Microchip Technology Incorporated, All Rights Reserved.

ISBN: 9781522434023

QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
= ISO/TS 16949 =

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.



Worldwide Sales and Service

AMERICAS

Corporate Office
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://www.microchip.com/support>
Web Address:
www.microchip.com

Atlanta
Duluth, GA
Tel: 678-957-9614
Fax: 678-957-1455

Austin, TX
Tel: 512-257-3370

Boston
Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago
Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Dallas
Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit
Novi, MI
Tel: 248-848-4000

Houston, TX
Tel: 281-894-5983

Indianapolis
Noblesville, IN
Tel: 317-773-8323
Fax: 317-773-5453
Tel: 317-536-2380

Los Angeles
Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608
Tel: 951-273-7800

Raleigh, NC
Tel: 919-844-7510

New York, NY
Tel: 631-435-6000

San Jose, CA
Tel: 408-735-9110
Tel: 408-436-4270

Canada - Toronto
Tel: 905-695-1980
Fax: 905-695-2078

ASIA/PACIFIC

Australia - Sydney
Tel: 61-2-9868-6733

China - Beijing
Tel: 86-10-8569-7000

China - Chengdu
Tel: 86-28-8665-5511

China - Chongqing
Tel: 86-23-8980-9588

China - Dongguan
Tel: 86-769-8702-9880

China - Guangzhou
Tel: 86-20-8755-8029

China - Hangzhou
Tel: 86-571-8792-8115

China - Hong Kong SAR
Tel: 852-2943-5100

China - Nanjing
Tel: 86-25-8473-2460

China - Qingdao
Tel: 86-532-8502-7355

China - Shanghai
Tel: 86-21-3326-8000

China - Shenyang
Tel: 86-24-2334-2829

China - Shenzhen
Tel: 86-755-8864-2200

China - Suzhou
Tel: 86-186-6233-1526

China - Wuhan
Tel: 86-27-5980-5300

China - Xian
Tel: 86-29-8833-7252

China - Xiamen
Tel: 86-592-2388138

China - Zhuhai
Tel: 86-756-3210040

ASIA/PACIFIC

India - Bangalore
Tel: 91-80-3090-4444

India - New Delhi
Tel: 91-11-4160-8631

India - Pune
Tel: 91-20-4121-0141

Japan - Osaka
Tel: 81-6-6152-7160

Japan - Tokyo
Tel: 81-3-6880-3770

Korea - Daegu
Tel: 82-53-744-4301

Korea - Seoul
Tel: 82-2-554-7200

Malaysia - Kuala Lumpur
Tel: 60-3-7651-7906

Malaysia - Penang
Tel: 60-4-227-8870

Philippines - Manila
Tel: 63-2-634-9065

Singapore
Tel: 65-6334-8870

Taiwan - Hsin Chu
Tel: 886-3-577-8366

Taiwan - Kaohsiung
Tel: 886-7-213-7830

Taiwan - Taipei
Tel: 886-2-2508-8600

Thailand - Bangkok
Tel: 66-2-694-1351

Vietnam - Ho Chi Minh
Tel: 84-28-5448-2100

EUROPE

Austria - Wels
Tel: 43-7242-2244-39
Fax: 43-7242-2244-393

Denmark - Copenhagen
Tel: 45-4450-2828
Fax: 45-4485-2829

Finland - Espoo
Tel: 358-9-4520-820

France - Paris
Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany - Garching
Tel: 49-8931-9700

Germany - Haan
Tel: 49-2129-3766400

Germany - Heilbronn
Tel: 49-7131-67-3636

Germany - Karlsruhe
Tel: 49-721-625370

Germany - Munich
Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Germany - Rosenheim
Tel: 49-8031-354-560

Israel - Ra'anana
Tel: 972-9-744-7705

Italy - Milan
Tel: 39-0331-742611
Fax: 39-0331-466781

Italy - Padova
Tel: 39-049-7625286

Netherlands - Drunen
Tel: 31-416-690399
Fax: 31-416-690340

Norway - Trondheim
Tel: 47-7289-7561

Poland - Warsaw
Tel: 48-22-3325737

Romania - Bucharest
Tel: 40-21-407-87-50

Spain - Madrid
Tel: 34-91-708-08-90
Fax: 34-91-708-08-91

Sweden - Gothenberg
Tel: 46-31-704-60-40

Sweden - Stockholm
Tel: 46-8-5090-4654

UK - Wokingham
Tel: 44-118-921-5800
Fax: 44-118-921-5820