

PCB Mounting Guidelines for Surface Mount Packages


Introduction

This document provides PCB designers with a set of guidelines for successful board mounting of Atmel® surface mount packages. Package Land Pattern descriptions are depicted by the package family, and although each family is represented by a single body size and lead count, the individual land description apply to all packages within a particular family. Land Pattern descriptions were provided by IPC-7351 Calculator from the Mentor Graphics Corporation. These are only general guidelines that Atmel received from the IPC-7351 Calculator. The solder reflow guidelines are derived from IPC -9502. Atmel does not make direct recommendation for board design, nor does it take legal liability and responsibility for the information in this document. Please refer to the IPC website for more information regarding board design and processing.

1. Solder Reflow Process

Figure 1-1 shows the typical process flow for mounting surface mount packages to printed circuit boards. It is important to include the post print and the post reflow inspection, especially during the process development. The volume of paste printed should be measured either by 2D or 3D techniques. The paste volume should be around 80% to 90% of the stencil aperture volume to indicate a good paste release. After reflow, the mounted package should be inspected by transmission x-ray for the presence of voids, solder balling, or other defects. Cross-sectioning may also be required to determine the fillet shape, size, and the joint standoff height during process development. A typical reflow profile for no-clean solder paste is shown in Figure 1-2, temperature measured at the solder joint.


Figure 1-1. Typical PCB Mounting Process Flow

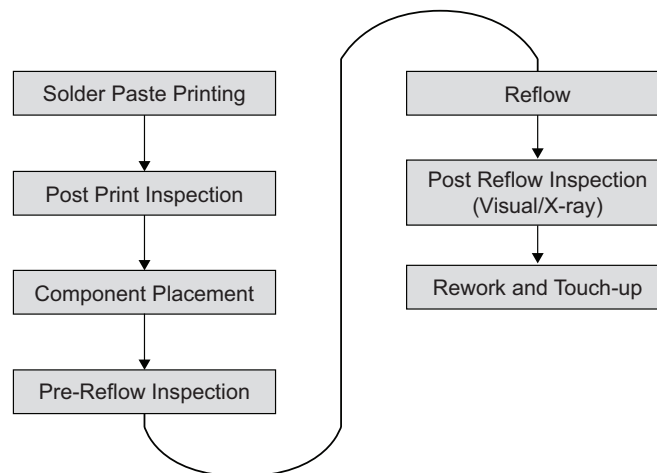

1.1 Reflow Temperature Profiles

Since the actual reflow profile depends on the solder paste being used and the board density, Atmel does not recommend a specific profile; however, the temperature should not exceed the maximum temperature the package is qualified for according to the moisture sensitivity level. The time above the liquidus temperature should be around 60 seconds, and the ramp rate during preheat should be 3°C per second or lower.

Figure 1-2. Reliability Pb Free Profile

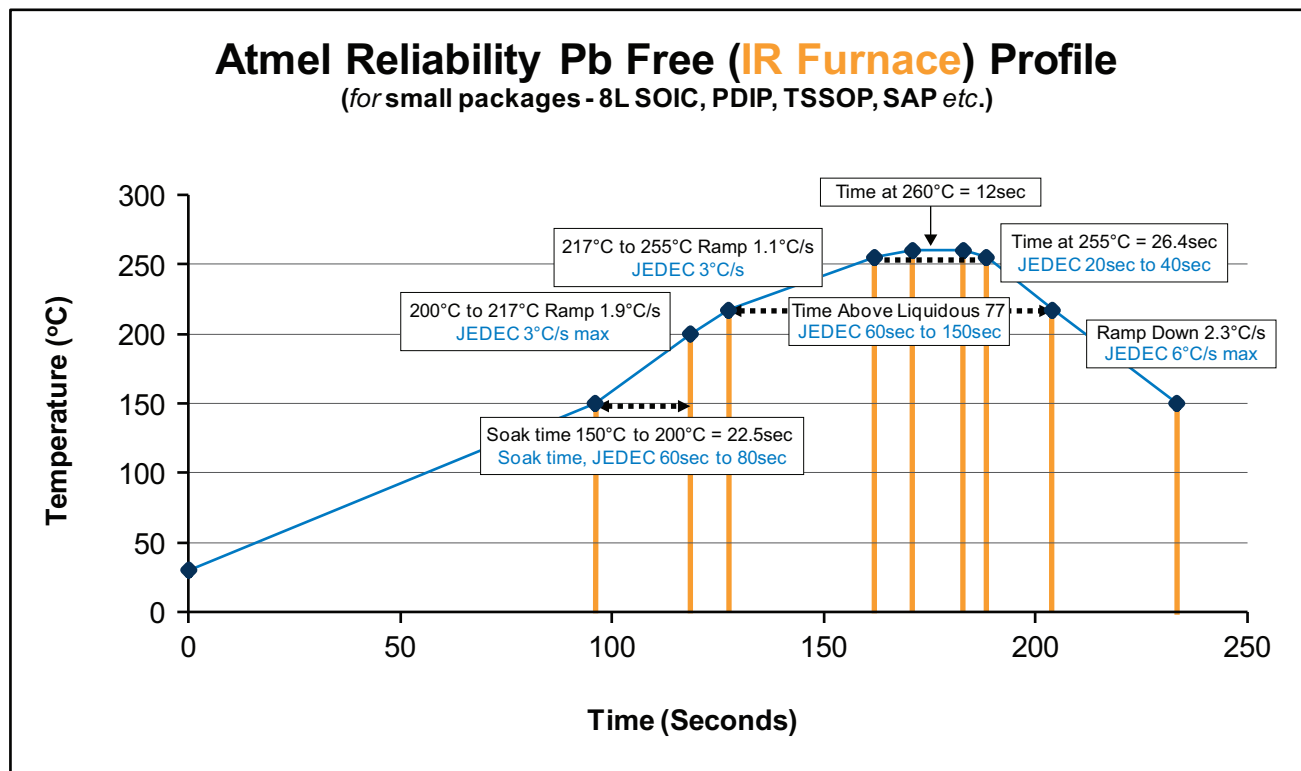

Note: Temperature value in boxes represents actual setting used in Atmel (CSO) Reliability Lab's IR furnace for package qualifications.

2. Configurations for Packages with Thermal Pads

For devices to perform at their peak, special considerations are needed to properly design the board and to mount the package. For enhanced thermal, electrical, and board level performance, the exposed pad on the package needs to be soldered to the board using a corresponding thermal pad on the board. Furthermore, for proper heat conduction through the board, thermal vias need to be incorporated in the PCB in the thermal pad region. The PCB footprint design needs to be considered from dimensional tolerances due to the package, PCB, and the assembly factors. A number of factors may have a significant effect on mounting the package on the board and the quality of the solder joints.

Some of these factors include:

- Amount of solder paste coverage in the thermal pad region
- Stencil design for peripheral and thermal pad region
- Type of vias
- Board thickness
- Copper thickness
- Lead finish on the package
- Surface finish on the board
- Type of solder paste
- Reflow profile

This document provides the guidelines for this purpose. It should be emphasized that this is just a guideline to help the user in developing the proper board design and surface mount process. Actual studies as well as development effort may be needed to optimize the process as per user's surface mount practices and requirements.

2.1 Thermal Pad and Via Design

Some packages are designed to provide superior thermal performance. This is partly achieved by incorporating an exposed die paddle on the bottom surface of the package; however, in order to take full advantage of this feature, the PCB must have features to effectively conduct heat away from the package. This can be achieved by incorporating a thermal pad and thermal vias on the PCB. While a thermal pad provides a solderable surface on the top surface of the PCB (to solder the package die paddle on the board), the thermal vias are needed to provide a thermal path to the inner and bottom layers of the PCB to remove the heat.

Normally, the size of the thermal pad should at least match the exposed die paddle size; however, depending upon the die paddle size, this size needs to be modified in some cases to avoid solder bridging between the thermal pad and the perimeter pads. The thermal pad design on the board should be based on the exposed paddle area, excluding the ring area.

In order to effectively transfer heat from the top metal layer of the PCB to the inner and bottom layers, thermal vias need to be incorporated into the thermal pad design. The number of thermal vias will depend on the application, the power dissipation, and the electrical requirements. It is recommended that an array of thermal vias should be incorporated at a 1.00mm to 1.20mm pitch with a via diameter of 0.30mm to 0.33mm. For optimum heat transfer, it is recommended that a minimum of nine vias be placed in the thermal pad, and a one ounce copper thickness be used on all PCB layers on Atmel AT88RF1354 readers.

2.2 Via Types and Solder Voiding

Voids within the solder joints under the exposed pad can have an adverse effect on high-speed and RF applications, as well as, on the thermal performance. As the QFN package incorporates a large center pad, controlling solder voiding within this region can be difficult.


With regards to the voids in the thermal pad region, it should be emphasized that the presence of these voids is not expected to result in degradation of the thermal and the electrical performance. No loss in thermal performance is predicted from the thermal simulation of the smaller multiple voids covering up to 50% of the thermal pad area. It should also be noted that voids in the thermal pad region do not impact the reliability of the perimeter solder joints.

Although the percentage of voids may not be a big concern, large voids in the thermal pad area should be avoided. In order to control these voids, solder masking may be required for the thermal vias to prevent solder wicking inside the via during reflow, thus displacing the solder away from the interface between the package die paddle and the thermal pad on the PCB. There are different methods employed within the industry for this purpose, such as:

- Via tenting (from the top or bottom side) using dry film solder mask
- Via plugging with Liquid Photo Imagable (LPI) solder mask from the bottom side
- Via encroaching

These options are depicted in [Figure 2-1](#). In case of via tenting, the solder mask diameter should be 100 microns larger than the via diameter.

Figure 2-1. Solder Mask Options for Thermal Vias

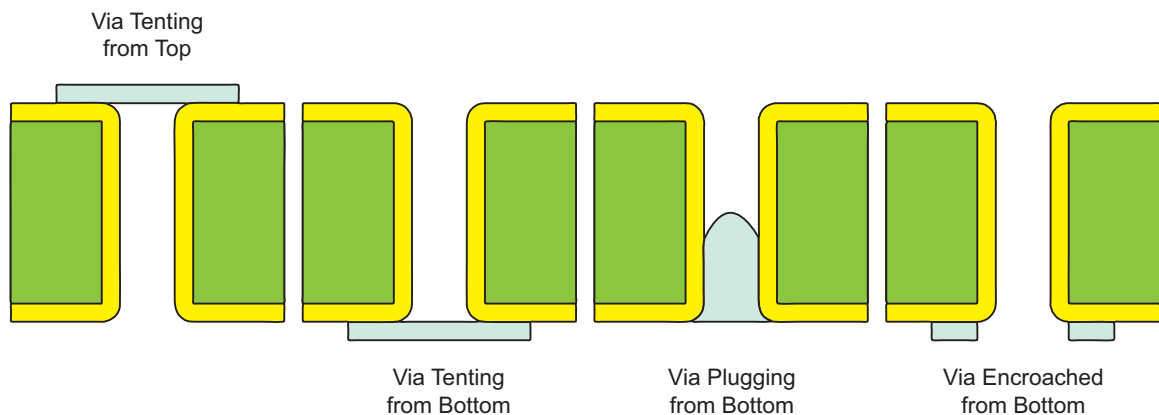

All of these options have pros and cons when mounting the QFN package on the board. While via tenting from the top side may result in smaller voids, the presence of the solder mask on the top side of the board may hinder proper paste printing. On the other hand, both via tenting from bottom or via plugging from bottom may result in larger voids due to out-gassing covering more than two vias. Finally, encroached vias allow the solder to wick inside the vias and reduce the size of the voids; however, it also results in lower standoff of the package, which is controlled by the solder underneath the exposed pad. Careful balance of solder on the exposed pad (percentage of coverage as shown in [Figure 2-2](#)) is necessary to avoid harmful stress in the package or affecting peripheral solder joints. [Figure 3-7](#) shows representative x-rays of QFN packages mounted on the boards with the different via treatments.


Encroached via, depending on the board thickness and the amount of solder printed underneath the exposed pad, and may also result in solder protruding from the other side of the board.

Note: The vias are not completely filled with solder, suggesting that solder wets down the via walls until the ends are plugged. This protrusion is a function of the PCB thickness, the amount of paste coverage in the thermal pad region, and the surface finish of the PCB. Atmel's experience is that this protrusion can be avoided by using a lower volume of the solder paste and reduced reflow peak temperature. If solder protrusion cannot be avoided, the QFN components may have to be assembled on the top side (or final pass) assembly, as the protruded solder will impede acceptable solder paste printing on the other side of the PCB.

2.3 Stencil Design for Thermal Pad

In order to effectively remove the heat from the package and to enhance the electrical performance, the die paddle needs to be soldered to the PCB thermal pad, preferably with minimum voids; however, eliminating voids may not be possible because of the presence of thermal vias and the large size of the thermal pad for larger size packages. Also, out gassing occurs during the reflow process which may cause defects (splatter, solder balling) if the solder paste coverage is too big; therefore, it is recommended that smaller multiple openings in the stencil should be used instead of one big opening for printing the solder paste on the thermal pad region. This will typically result in 50% to 80% solder paste coverage. [Figure 2-2](#) illustrates some of the ways to achieve these levels of coverage. In general, more coverage results in better thermal contact, but also increases voiding and floating issues in QFN packages.

Figure 2-2. Thermal Pad Stencil Design for 7mm x 7mm and 10 x 10 QFN Packages with 4.9mm and 7.4sq Pads

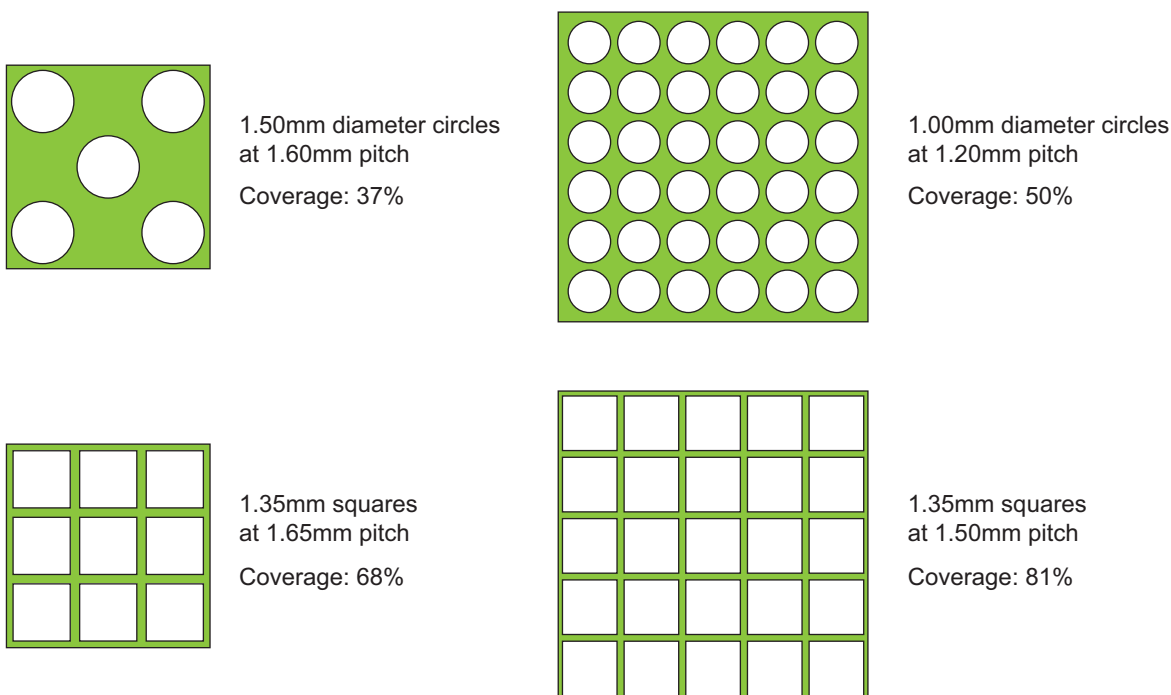


3. Package Land Patterns

The following guidelines are derived from Mentor Graphics IPC LP Calculator. A full description of the board recommendation, as well as, parts data that can be inserted into common PCB layout application is available through Mentor Graphics.

3.1 SOIC


Figure 3-1. SOIC

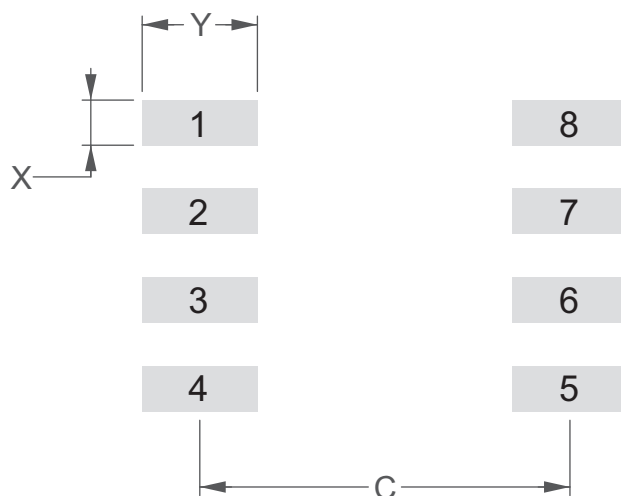

Number of Leads	Body Width (Inches)	Pitch	C	Y	X
8	3.8 (0.150)	1.27	5.40	1.60	0.60
14	3.8 (0.150)	1.27	5.40	1.60	0.60
8	5.3 (0.208)	1.27	7.10	1.80	0.60
8	7.6 (0.300)	1.27	9.50	1.90	0.60
14	7.6 (0.300)	1.27	9.30	2.00	0.60
16	7.6 (0.300)	1.27	9.30	2.00	0.60
20	7.6 (0.300)	1.27	9.40	2.00	0.60
24	7.6 (0.300)	1.27	9.30	2.00	0.60
28	7.6 (0.300)	1.27	9.40	1.90	0.60
32	7.6 (0.300)	1.27	9.60	1.80	0.65

3.2 TSSOP


Figure 3-2. TSSOP

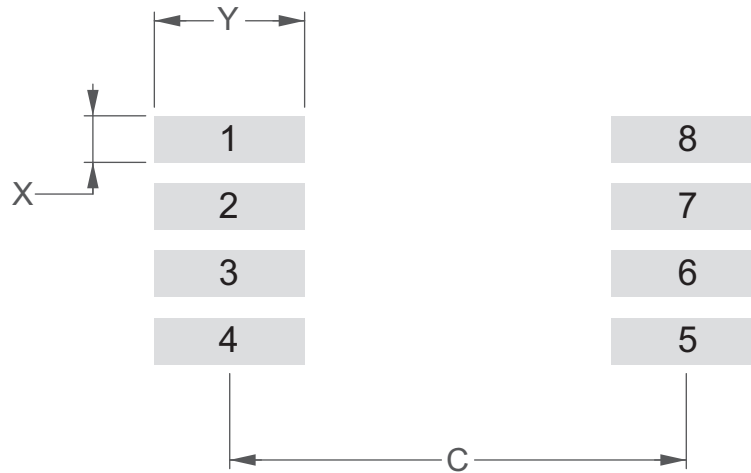

Number of Leads	Body	Pitch	C	Y	X
8	3.00 x 3.00	0.65	4.40	1.45	0.45
8	4.40 x 3.00	0.65	5.80	1.45	0.45
14	4.40 x 5.00	0.65	5.80	1.45	0.45
16	4.40 x 5.00	0.65	5.90	1.50	0.45
20	4.40 x 6.50	0.65	5.80	1.50	0.45
24	4.40 x 7.80	0.65	5.90	1.50	0.45
28	4.40 x 7.80	0.50	5.80	1.50	0.30
28	4.40 x 9.70	0.65	5.80	1.45	0.45
28	6.00 x 9.70	0.65	7.50	1.50	0.45
44	4.40 x 11.30	0.50	5.80	1.50	0.30

3.3 BGA


Figure 3-3. BGA

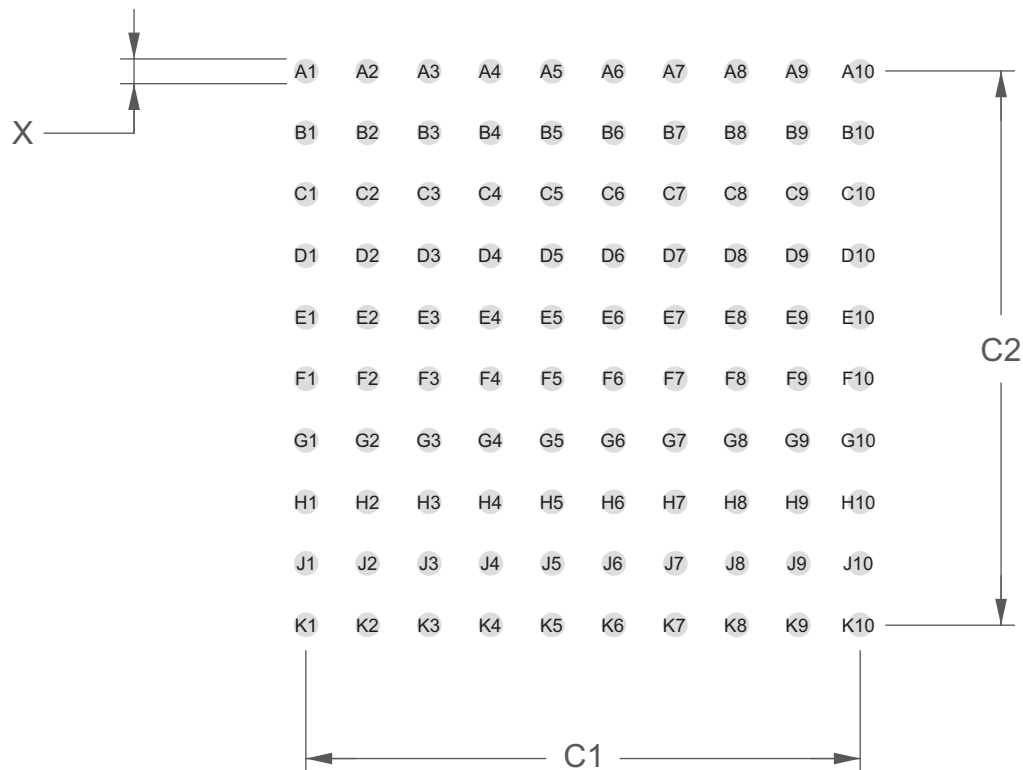

C1		Pitch X (Array -1)
C2		Pitch X (Array -1)
X	Ball Diameter ≤ 0.50	Ball Diameter - 0.05
X	Ball Diameter > 0.50	Ball Diameter - 0.10

3.4 WLCSP


Figure 3-4. WLCSP

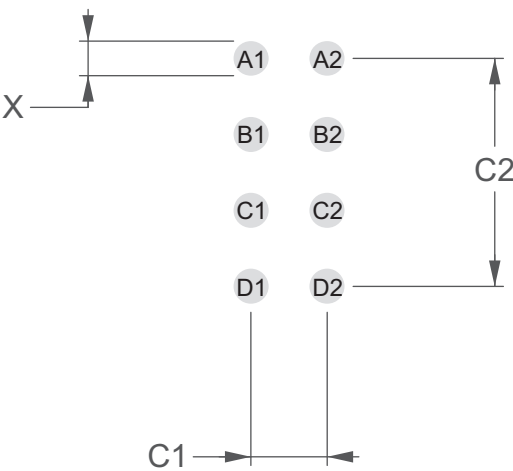

C1		(X Pitch) X (Array -1)
C2		Y Pitch
X	Ball Diameter = 0.25	0.24
X	Ball Diameter = 0.30	0.30

3.5 QFP


Figure 3-5. QFP

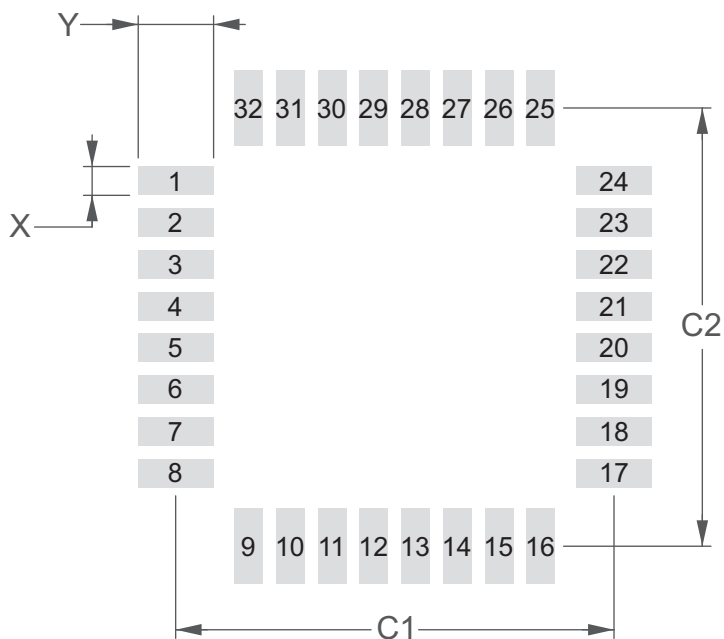

Number of Leads	Body	Pitch	Form Option	C1	Y	X	C2
32	7 x 7	0.80	1.00	8.40	1.50	0.55	8.40
44	10 x 10	0.80	1.00	11.40	1.50	0.55	11.40
44	10 x 10	0.80	1.60	12.30	1.90	0.55	12.30
44	10 x 10	0.80	1.95	13.00	1.75	0.55	13.00
48	7 x 7	0.50	1.00	8.40	1.50	0.30	8.40
52	10 x 10	0.65	1.60	12.30	1.90	0.45	12.30
64	10 x 10	0.50	1.00	11.40	1.50	0.30	11.40
64	14 x 14	0.80	1.60	16.30	1.85	0.55	16.30
64	14 x 14	0.80	1.00	15.40	1.50	0.55	15.40
52	10 x 10	0.65	1.95	13.00	1.90	0.45	13.00
64	14 x 20	1.00	1.95	16.70	2.05	0.55	22.70
80	14 x 14	0.65	1.00	15.40	1.50	0.45	15.40
100	14 x 14	0.50	1.00	15.40	1.50	0.30	15.40
100	14 x 20	0.65	1.60	16.30	1.90	0.45	22.30
128	14 x 20	0.50	1.00	15.40	1.50	0.30	21.40
144	20 x 20	0.50	1.00	21.40	1.50	0.30	21.40
176	20 x 20	0.40	1.00	25.40	1.50	0.30	25.50
208	28 x 28	0.50	1.00	29.40	1.50	0.30	29.40

3.6 DFN

Figure 3-6. DFN

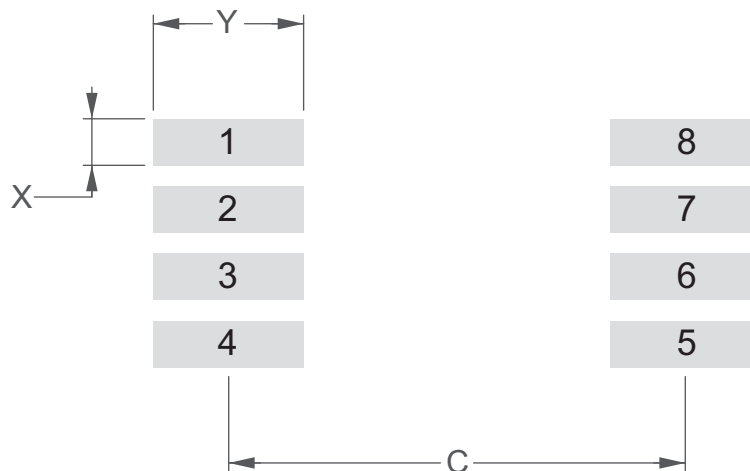


Number of Leads	Body	Pitch	Lead Length	C	Y	X
8	2 x 2	0.50	0.30	2.10	0.70	0.30
8	2 x 3	0.50	0.45	2.90	0.90	0.30
8	5 x 6	1.27	0.60	5.70	0.95	0.70
8	6 x 8	1.27	0.50	7.80	0.95	0.70
10	3 x 3	0.50	0.40	2.90	0.85	0.30
14	3 x 4.50	0.65	0.40	2.90	0.80	0.35

Note: 1. DFNs may have integrated thermal pads. The exact dimensions of the solder pads are determined by the package outline drawing and the formulas described in [Figure 2-2](#).

3.7 QFN

Figure 3-7. QFN

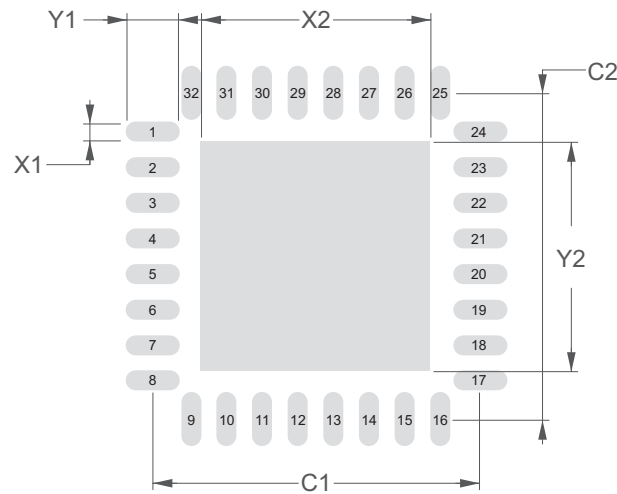

Number of Leads	Body	Pitch	Lead Length	C1	Y1	X1	C2	Y2 ⁽¹⁾	X2 ⁽¹⁾
16	3x3	0.50	0.40	3.00	0.80	0.30	3.00	1.70	1.70
20	3x3	0.45	0.40	3.00	0.80	0.25	3.00	1.60	1.60
20	4x4	0.50	0.45	4.00	0.90	0.30	4.00	2.40	2.40
20	4x4	0.50	0.40	4.00	0.80	0.30	4.00	2.25	2.25
24	4x4	0.50	0.40	4.00	0.80	0.30	4.00	2.25	2.25
24	5x5	0.65	0.40	5.00	0.80	0.35	5.00	3.80	3.80
28	4x4	0.45	0.40	4.00	0.80	0.25	4.00	2.25	2.25
28	5x5	0.65	0.40	5.00	0.80	0.35	5.00	3.80	3.80
32	5x5	0.50	0.40	5.00	0.80	0.30	5.00	3.80	3.80
32	7x7	0.65	0.40	7.00	0.80	0.35	7.00	4.85	4.85
32	7x7	0.65	0.60	6.80	1.05	0.35	6.80	4.65	4.65
38	5x7	0.50	0.40	5.00	0.80	0.30	7.00	3.80	5.80
40	5x5	0.40	0.40	5.00	0.80	0.20	5.00	3.80	3.80
40	5x5	0.40	0.35	5.00	0.80	0.20	5.00	3.80	3.80
40	6x6	0.50	0.40	6.00	0.80	0.30	6.00	4.80	4.80
44	6x6	0.40	0.40	6.00	0.80	0.20	6.00	4.80	4.80
44	7x7	0.50	0.55	6.90	1.00	0.30	6.90	5.40	5.40
44	7x7	0.50	0.64	6.70	1.10	0.30	6.70	5.20	5.20
48	6x6	0.40	0.40	6.00	0.80	0.20	6.00	4.80	4.80
48	7x7	0.50	0.50	6.90	0.95	0.30	6.90	5.50	5.50
56	6x6	0.35	0.40	6.00	0.80	0.25	6.00	4.80	4.80
64	9x9	0.50	0.40	9.00	0.80	0.30	9.00	7.25	7.25
64	9x9	0.50	0.50	8.90	0.95	0.30	8.90	7.00	7.00

Note: 1. Thermal pads vary and exact dimensions of the solder pad should be determined by the package drawing and the formulas described in [Figure 2-2](#).

3.7.1 PCB Design Guidelines for QFNs


The lands on QFN packages are rectangular in shape with rounded edges on the inside. Since the package does not have any solder balls, the electrical connection between the package and the board is made by printing the solder paste on the board and reflowing it after the component placement. In order to form reliable solder joints, special attention is needed in designing the board pad pattern and the solder paste printing.

3.7.2 Solder Masking Consideration for QFNs

The pads on the printed circuit board are either Solder Mask Defined (SMD) or Non Solder Mask Defined (NSMD). Since the copper etching process has tighter control than the solder masking process, NSMD pads are preferred over SMD pads. Also, NSMD pads with the solder mask opening larger than the metal pad size improves the reliability of the solder joints, as solder is allowed to wrap around the sides of the metal pads. For these reasons, the NSMD pad is recommended for perimeter lands.

The solder mask opening should be 120 to 150 microns larger than the pad size resulting in 60 to 75 micron clearance between the copper pad and the solder mask. This allows for solder mask registration tolerances, which are typically between 50 to 65 microns, depending upon the board fabricator's capabilities. Typically, each pad on the PCB should have its own solder mask opening with a web of solder mask between the two adjacent pads. Since the web has to be at least 75 microns in width for the solder mask to stick to the PCB surface, each pad can have its own solder mask opening for a lead pitch of 0.50mm or higher; however, for finer pitch parts, not enough space is available for the solder mask web in between the pads. In such cases, it is recommended to use the *trench* type solder mask opening where a big opening is designed around all the pads on each side of the package with no solder mask in between the pads, as shown in [Figure 3-8](#). It should also be noted that the inner edge of the solder mask should be rounded, especially for the corner leads to allow for enough solder mask web in the corner area.

Figure 3-8. Solder Mask

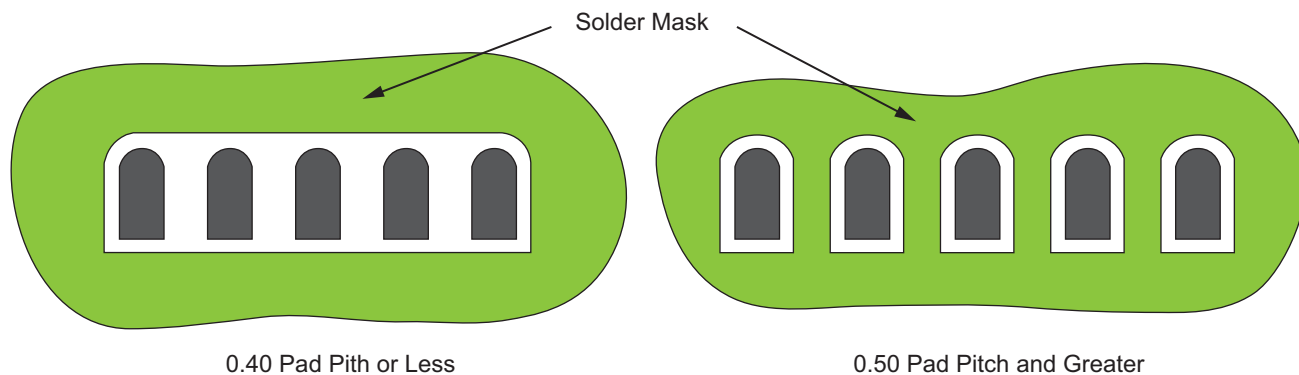

For the cases where the thermal land dimensions are close to the theoretical maximum discussed above, it is recommended that the thermal pad area should be solder mask defined in order to avoid any solder bridging between the thermal pad and the perimeter pads. The mask opening should be 100 microns smaller than the thermal land size on all four sides. This will guarantee a 25 micron solder mask overlap even for the worse case miss-registration.

3.7.3 Board Mounting Guidelines for QFNs

Due to the small lead surface area and the sole reliance on the printed solder paste on the PCB surface, care must be taken to form reliable solder joints for QFN packages. This is further complicated by the large thermal pad underneath the package and its proximity to the inner edges of the leads. Although the pad pattern design suggested above might help in eliminating some of the surface mounting problems, special considerations are needed in the stencil design and the paste printing for both the perimeter and the thermal pads. Since the surface mount process varies from company to company, careful process development is recommended. The following sections provide some guidelines for the stencil design based on the experience of Atmel in the surface mounting of QFN packages.

3.7.4 Stencil Design for Perimeter Pads for QFNs

Optimum and reliable solder joints on the perimeter pads should have about 50 to 75 microns (2 to 3 mils) standoff height and a good side fillet on the outside. A joint with good stand-off height but no or low fillet will have reduced life but may meet the application requirement. The first step in achieving good standoff is the solder paste stencil design for the perimeter pads. The stencil aperture opening should be designed so maximum paste release is achieved. This is typically accomplished by considering the following two ratios:

- Area Ratio = Area of Aperture Opening / Aperture Wall Area
- Aspect Ratio = Aperture width / Stencil Thickness

For rectangular aperture openings, as required for this package, these ratios are given as:

- Area Ratio = $LW / 2T(L+W)$
- Aspect Ratio = W / T

Where L and W are the aperture length and width, and T is stencil thickness.

For optimum paste release the area and the aspect ratios should be greater than 0.66 and 1.50 respectively. It is recommended that the stencil aperture should be 1:1 to the PCB pad sizes as both the area and the aspect ratio targets are easily achieved by this aperture. The opening can be reduced for a lead pullback option because of the reduction of the solderable area on the package. The stencil should be laser cut and electro polished. The polishing helps in smoothing the stencil walls which results in a better paste release. It is also recommended that the stencil aperture tolerances should be tightly controlled, especially for 0.50mm pitch and finer devices, as these tolerances can effectively reduce the aperture size.

3.7.5 Stencil Thickness and Solder Paste for QFNs

A stencil thickness of 0.125mm is recommended for 0.40mm and 0.50mm pitch parts. A laser-cut, stainless steel stencil is recommended with electro-polished trapezoidal walls to improve the paste release. Since not enough space is available underneath the part after reflow, it is recommended that the No Clean, Type 3 Paste be used for mounting QFN packages. Nitrogen purge is also recommended during the reflow.

3.7.6 Solder Joint Standoff Height and Fillet Formation for QFNs


The solder joint standoff is a direct function of the amount of paste coverage on the thermal pad and the type of vias used for QFNs with the exposed pad at the bottom. Board mounting studies sponsored by Amkor® have clearly shown that the package standoff increases by increasing the paste coverage and by using plugged vias in the thermal pad region. This is shown in [Figure 3-9](#).

The standoff height varies by the amount of solder that wets or flows into the PTH via. The encroached via provides an easy path for solder to flow into the PTH and decreases the package standoff height while the plugged via impedes the flow of solder into the via due to the plugged vias closed barrel end. In addition, the number of vias and their finished hole size will also influence the standoff height for encroached via design. The standoff height is also affected by the paste type, the reactivity of the solder paste used during assembly, the PCB thickness, the copper thickness, the surface finish, and the reflow profile.

To achieve 50 micron thick solder joints, which help in improving the board level reliability, it is recommended the solder paste coverage be at least 50% for the plugged vias and 75% for the encroached via types.

The peripheral solder joint fillets formation is also driven by multiple factors. It should be realized that only the bottom surface of the leads are plated with solder and not the ends. The bare Cu on the side of the leads may oxidize if the packages are stored in an uncontrolled environment. It is possible that a solder fillet will be formed depending on the solder paste (flux) used and the level of oxidation.

Figure 3-9. Graph and Data Source — Amkor Technologies Application Notes for Surface Mount Assembly of Amkor's MicroLeadFrame® (MLF®) Packages

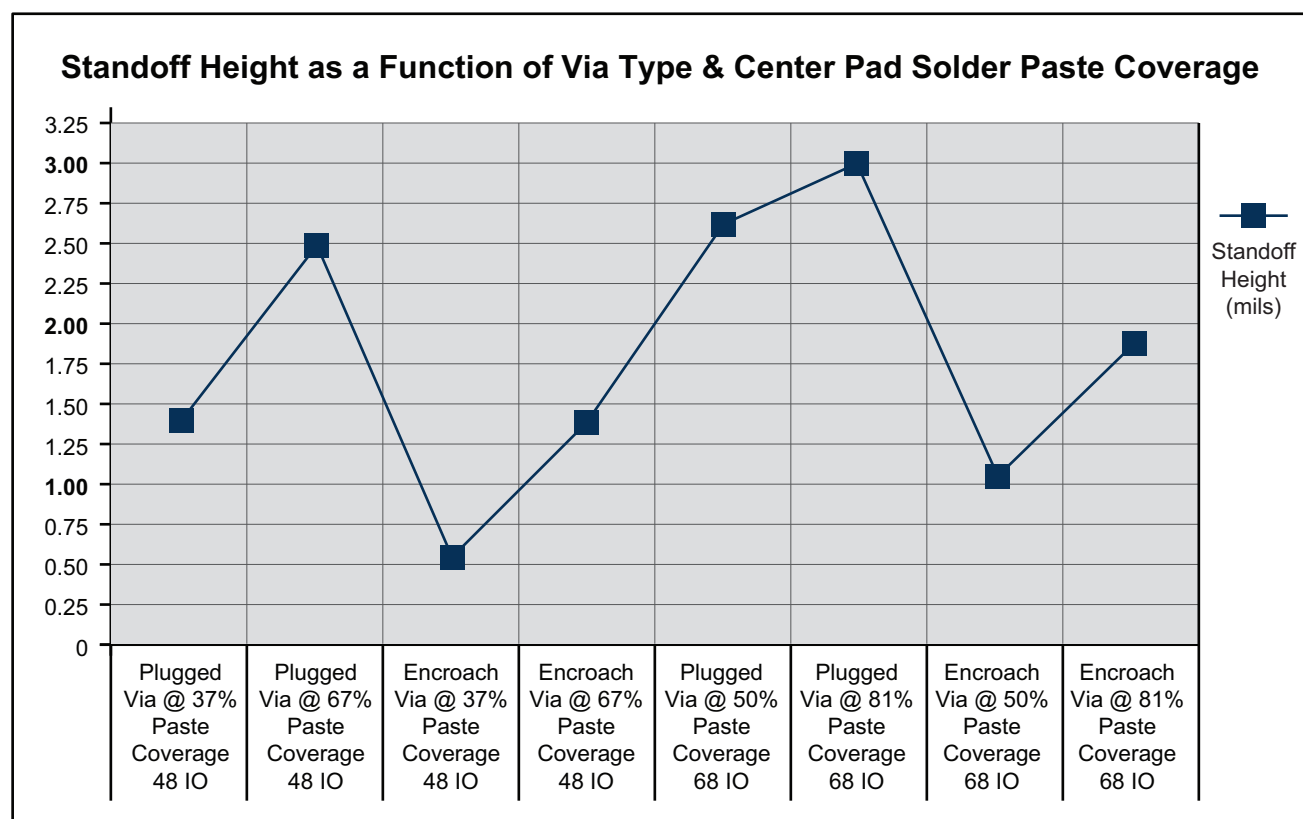

The fillet formation is also a function of the PCB land size, the printed solder volume, and the package standoff height. Since there is only limited solder available, higher standoff (controlled by the paste coverage on the thermal pad) may not leave enough solder for fillet formation. Conversely, if the standoff is too low, large convex shape fillets may form. Since center pad coverage and via type were shown to have the greatest impact on the standoff height, the volume of solder necessary to create optimum fillet varies. The package standoff height and the PCB pads size will establish the required volume.

3.7.7 Reflow Profile for QFNs

The reflow profile and the peak temperature have a strong influence on void formation. Amkor has conducted experiments with the different reflow profiles (ramp-to-peak vs. ramp-hold-ramp), the peak reflow temperatures, and the times above liquidus using Alpha Metal's UP78 solder paste. Some of the representative profiles are shown in [Figure 3-9](#). Generally, it is found that the 37% paste coverage, plugged via, voids in the thermal pad region for the plugged vias reduce as the peak reflow temperature is increased from 210°C to 215 – 220°C. For the encroached vias, it is found that the solder extrusion from the bottom side of the board reduces as the reflow temperature is reduced.

3.7.8 Rework Guidelines for QFNs

Since solder joints are not fully exposed in the case of QFNs, any retouch is limited to the side fillet. For defects underneath the package, the whole package has to be removed. Rework of the QFN packages can be a challenge due to their small size. In most applications, the QFNs will be mounted on smaller, thinner, and denser PCBs that introduce further challenges due to the handling and the heating issues. Since reflow of the adjacent parts is not desirable during rework, the proximity of other components may further complicate this process. Because of the product dependent complexities, the following only provides a guideline and a starting point for the development of a successful rework process for these packages.

The rework process involves the following steps:

1. Component removal
2. Site redress
3. Solder paste application
4. Component placement
5. Component attachment

These steps are discussed more in detail in the following sections. Prior to any rework, it is strongly recommended that the PCB assembly be baked for at least four hours at 125°C to remove any residual moisture from the assembly.

3.7.9 Component Removal for QFNs

The first step in removal of the component is the reflow of the solder joints attaching the component to the board. Ideally, the reflow profile for the part removal should be the same as the one used for the part attachment; however, the time above liquidus can be reduced as long as the reflow is complete.

In the removal process, it is recommended that the board should be heated from the bottom side using convective heaters and hot gas or air should be used on the top side of the component. Special nozzles should be used to direct the heating in the component area and the heating of adjacent components should be minimized. Excessive airflow should also be avoided since this may cause the package to skew. Air velocity of 15-20 liters per minute is a good starting point.

Once the joints have reflowed, the vacuum lift-off should be automatically engaged during the transition from the reflow to cool down. Because of their small size the vacuum pressure should be kept below 15 inches of Hg. This will allow the component not to be lifted off if all joints have not been reflowed and avoid pad damage.

3.7.10 Site Redress for QFNs

After the component has been removed, the site needs to be cleaned properly. It is best to use a combination of a blade-style conductive tool and a desoldering braid. The width of the blade should be matched to the maximum width of the footprint and the blade temperature should be low enough not to cause any damage to the circuit board. Once the residual solder has been removed, the lands should be cleaned with a solvent. The solvent is usually specific to the type of paste used in the original assembly and the paste manufacturer's recommendations should be followed.

3.7.11 Solder Paste Printing for QFNs

Because of their small size and the fine pitches, solder paste deposition for the QFNs requires extra care; however, a uniform and precise deposition can be achieved if a miniature stencil specific to the component is used. The stencil aperture should be aligned with the pads under 50X to 100X magnification. The stencil should then be lowered onto the PCB and the paste should be deposited with a small metal squeegee blade. Alternatively, the mini stencil can be used to print paste on the package side. A 125 microns thick stencil with the aperture size and shape same as the package land should be used. Also, no-clean flux should be used, as small standoff of the QFNs does not leave much room for cleaning.

3.7.12 Component Placement for QFNs

QFN packages are expected to have superior self-centering ability due to their small mass and the placement of this package should be similar to that of BGAs. As the leads are on the underside of the package, a split-beam optical system should be used to align the component on the board. This will form an image of leads overlaid on the mating footprint and aid in proper alignment. Again, the alignment should be done at 50X to 100X magnification. The placement machine should have the capability of allowing fine adjustments in the X, Y, and the rotational axes.

3.7.13 Component Attachment for QFNs

The reflow profile developed during original attachment or removal should be used to attach the new component. Since all reflow profile parameters have already been optimized, using the same profile will eliminate the need for thermocouple feedback and will reduce operator dependencies.

3.7.14 Summary

Successful use of the AT88RF1354 QFN package requires careful development of the PCB and the manufacturing process. This document contains guidelines to assist the design and manufacturing engineers in optimizing the PC board and processes. These guidelines include:

- PCB thermal pad sized to match the package thermal pad
- 1oz copper thickness on all layers for optimum heat transfer
- Nine or more thermal vias in the PCB thermal pad for heat transfer
- SMD solder masking of thermal pad
- NSMD solder masking of pads for package pins
- 50 to 75 micron solder joint standoff height
- Laser-cut, electro-polished 0.125mm stainless steel stencil
- No Clean, Type 3 solder paste
- Hot gas rework process

4. Disclaimer

These are only general guidelines Atmel received from its package vendor. Atmel does not make direct recommendation for board design nor does it take legal liability and responsibility for the information in this document. Please refer to the IPC website for more information regarding board design and processing.

5. References

1. Application Notes for Surface Mount Assembly of Amkor's MicroLeadFrame (MLF) packages.
2. Mentor Graphics IPC-7351 Calculator.
3. IPC -9502.

6. Revision History

Doc. Rev.	Date	Comments
8826B	04/2016	Updated DFN table, page dimensions, and disclaimer page.
8826A	03/2013	Initial document release.

