



# **E32-433T33D User Manual**

**SX1278 433MHz 2W TTL LoRa Wireless Module**



## CONTENT

<b>1</b>	<b>OVERVIEW</b>	<b>3</b>
1.1	INTRODUCTION	3
1.2	FEATURES	3
1.3	APPLICATION	3
<b>2</b>	<b>SPECIFICATION AND PARAMETER</b>	<b>4</b>
2.1	LIMIT PARAMETER	4
2.2	OPERATING PARAMETER	4
<b>3</b>	<b>SIZE AND PIN DEFINITION</b>	<b>5</b>
<b>4</b>	<b>CONNECT TO MCU</b>	<b>6</b>
<b>5</b>	<b>FUNCTION DESCRIPTION</b>	<b>7</b>
5.1	FIXED TRANSMISSION (HEXADECIMAL)	7
5.2	BROADCASTING TRANSMISSION (HEXADECIMAL)	7
5.6.2	<i>Indication of wireless transmitting</i>	8
5.6.3	<i>Configuration procedure of module</i>	9
5.6.4	<i>Notes for AUX</i>	9
<b>6</b>	<b>OPERATING MODE</b>	<b>10</b>
6.1	MODE SWITCH	10
6.2	NORMAL MODE (MODE 0)	11
6.3	WAKE-UP MODE (MODE 1)	11
6.4	POWER-SAVING MODE (MODE 2)	11
6.5	SLEEP MODE (MODE 3)	12
<b>7</b>	<b>COMMAND FORMAT</b>	<b>13</b>
7.1	FACTORY DEFAULT PARAMETERS	13
7.2	READING OPERATING PARAMETERS	13
7.3	READING VERSION NUMBER	13
7.4	RESET COMMAND	14
7.5	PARAMETER SETTING COMMAND	14
<b>8</b>	<b>HARDWARE DESIGN</b>	<b>16</b>
<b>9</b>	<b>FAQ</b>	<b>17</b>



9.1 COMMUNICATION RANGE IS TOO SHORT ..... 17

9.2 MODULE IS EASY TO DAMAGE .....17

9.3 BER(BIT ERROR RATE) IS HIGH ..... 17

**10 PRODUCTION GUIDANCE ..... 18**

**11 E32 SERIES ..... 18**

**12 ANTENNA RECOMMENDATION ..... 18**

**13 PACKAGE FOR BATCH ORDER..... 19**

**REVISION HISTORY ..... 19**

**ABOUT US ..... 19**

# 1 Overview

## 1.1 Introduction

E32-433T33D is a wireless serial port module (UART) based on SEMTECH's LoRa RF chip. It has transparent mode, working in the 410~441MHz (default 433MHz), LoRa spread spectrum technology.

E32-433T33D features LoRa spread spectrum, which will bring longer communication distance, and has the advantages of concentrated power density, meanwhile it has a very strong confidentiality. The default air rate is 2.4kbps, the transmit power is 33dBm, with PA power amplifier and LNA low-noise amplifier, so as to improve communication stability and extend communication distance; industrial-grade active temperature compensated crystal oscillator is used to ensure its stability and consistency.



## 1.2 Features

- Support advanced LoRa modulation method, with the advantage of long-distance anti-interference;
- Built-in PA+LNA, the communication distance can reach 16km under ideal conditions, and the transmission distance is better than traditional GFSK, etc.;
- Support fixed-point transmission, broadcast transmission, channel monitoring;
- Support air wake-up (ultra low power consumption), suitable for battery applications;
- Support FEC forward error correction to improve communication stability;
- Maximum transmit power 2W, multi-level software adjustable;
- Support global license-free ISM 433MHz frequency band;
- Support data transmission rate of 2.4k~19.2kbps;
- Support 3.3 ~ 5.5V power supply, more than 5V power supply can ensure the best performance;
- Adopt industrial-grade crystal oscillator, industrial-grade standard design, support long-term use at -40 ~ +85 °C;
- SMA-K interface for easy connection of coaxial cable or external antenna.

## 1.3 Application

- Home security alarm and remote keyless entry;
- Smart home and industrial sensors;
- Wireless alarm security system;
- Building automation solutions;
- Wireless industrial-grade remote control;
- Intelligent intelligent agriculture, oilfield solutions;
- Health care products;
- Advanced Meter Reading Architecture (AMI);
- Automotive industry applications.

## 2 Specification and parameter

### 2.1 Limit parameter


Main parameter	Performance		Performance
	Min.	Max.	
Power supply (V)	0	5.5	Voltage over 5.5V will cause permanent damage to module
Blocking power (dBm)	-	10	Chances of burn is slim when modules are used in short distance
Operating temperature (°C)	-40	+85	Industrial

### 2.2 Operating parameter

Main parameter		Performance			Remark
		Min.	Typ.	Max.	
Operating voltage(V)		3.3	5.0	5.5	≥5.0 V ensures output power
Communication level(V)			3.3		For 5V TTL, it may at risk of burning down
Operating temperature(°C)		-40	-	+85	Industrial design
Operating frequency(MHz)		410	-	441	Support ISM band
Power consumption	Transmitting current(mA)	850	1000	1200	Instant power consumption
	Receiving current (mA)	11	13	15	
	Turn-off current (μA)		2		Software is shut down
Max Tx power(dBm)		32	33	34	
Receiving sensitivity(dBm)		-145	-147	-148	Air data rate is 2.4kbps
Air data rate(bps)		2.4k	2.4k	19.2k	Controlled via user's programming

Main parameter	Description	Remark
Distance for reference	16km	Test condition: clear and open area, antenna gain: 5dBi, antenna height: 2.5m, air data rate: 2.4kbps
TX length	58 Btye	Maximum capacity of single package
Buffer	512 Btye	
Modulation	LoRa	
Communication interface	UART	TTL
Package	DIP	
Connector	2.54mm	Stamp hole
Size	37*60*7.6mm	
Antenna	SMA-K	50 ohm impedance


### 3 Size and pin definition

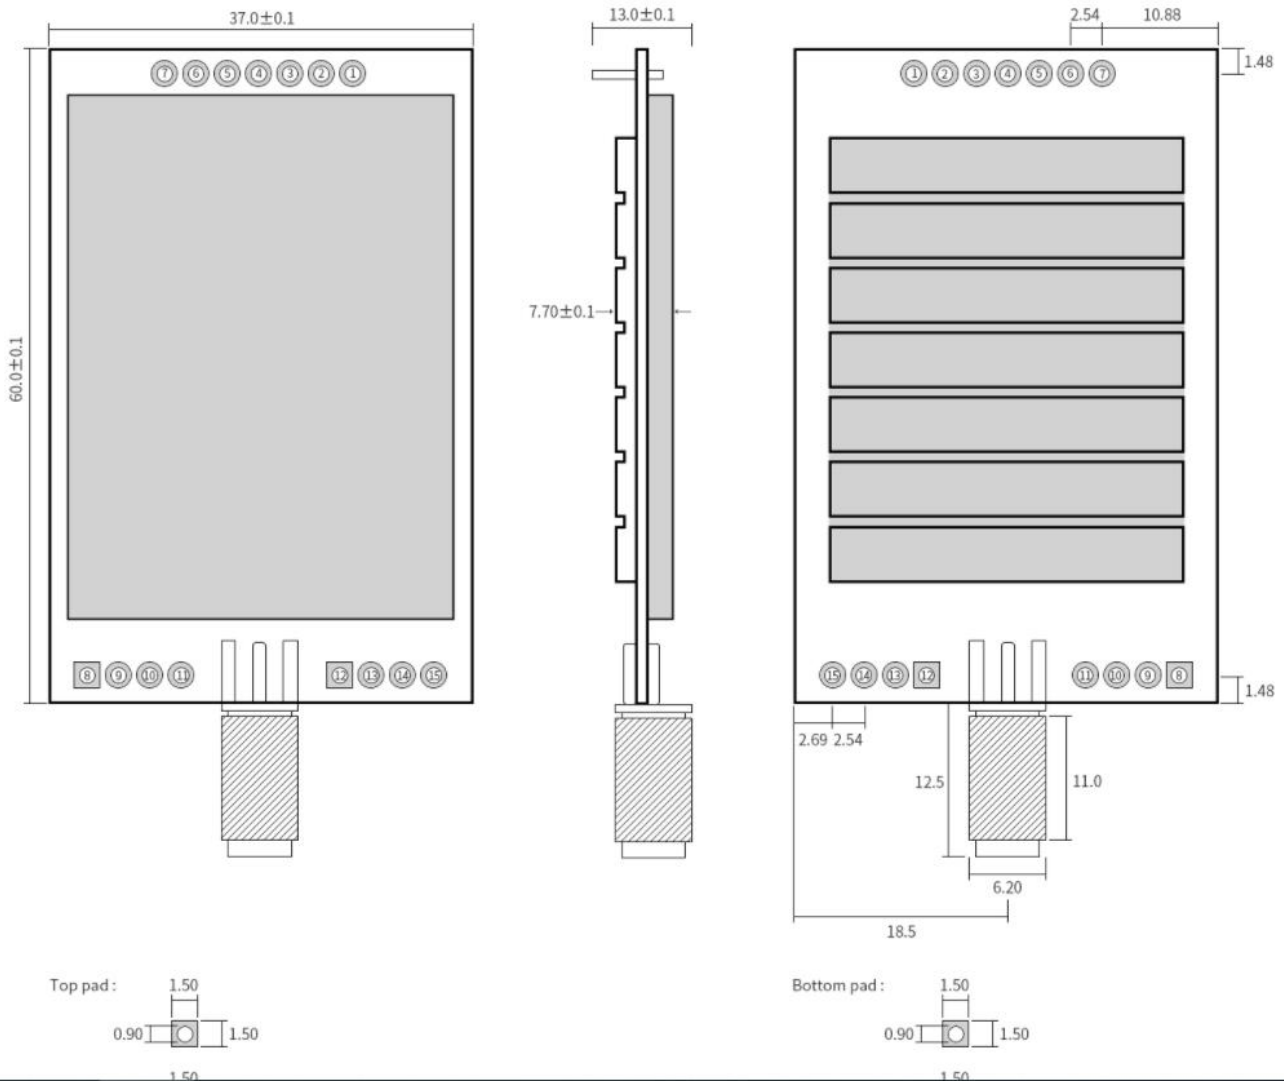

No.	Name	Direction	Function
1	M0	Input (weak pull-up)	With M1, the four working modes of the module can be determined (it cannot be suspended, and it can be grounded if it is not used).
2	M1	Input (weak pull-up)	With M0, the four working modes of the module can be determined (it cannot be suspended, and it can be grounded if it is not used).
3	RXD	Input	TTL UART input, connect to external TXD output pins; Can be configured as drain open circuit or pull up input, see parameter Settings
4	TXD	Output	TTL UART output, connect to external RXD input pin; Can be configured as drain open circuit or push - pull output, see parameter Settings
5	AUX	Output	Used to indicate the working status of the module; The user wakes up the external MCU and outputs low level during self-test initialization; Can be configured as drain open output, or push-pull output, see parameter Settings (can be suspended)
6	VCC	Input	Positive reference of module power supply, voltage range: 3.3V ~ 5.2V DC

7	GND	Input	Ground
8	Fixed orifice		Fixed orifice
9	Fixed orifice		Fixed orifice
10	Fixed orifice		Fixed orifice
11	Fixed orifice		Fixed orifice
12	Fixed orifice		Fixed orifice
13	Fixed orifice		Fixed orifice
14	Fixed orifice		Fixed orifice
15	Fixed orifice		Fixed orifice

## 4 Connect to MCU

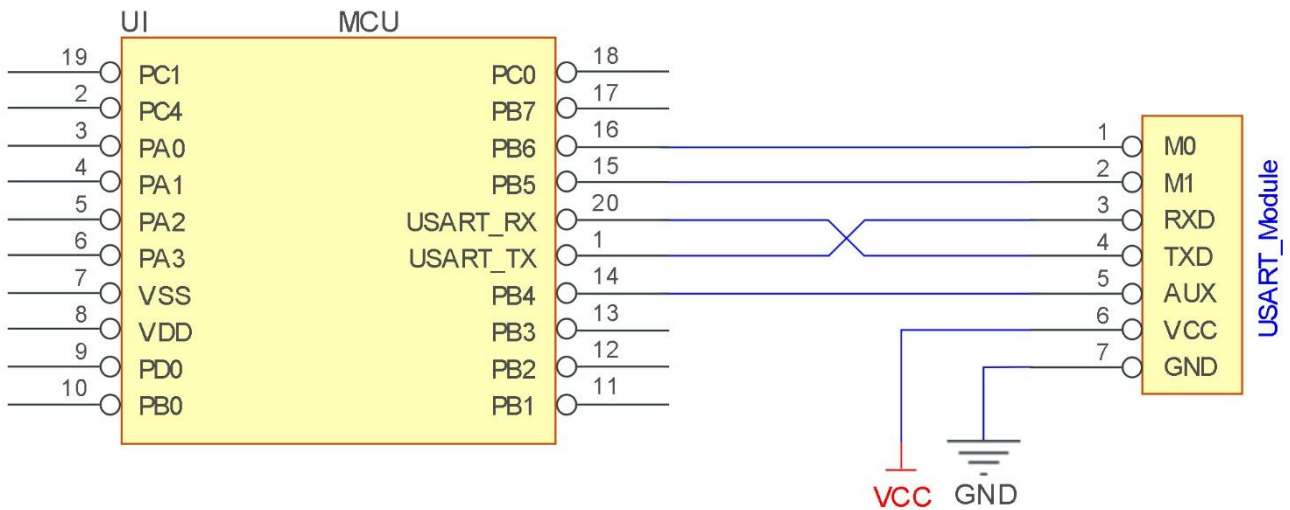


No.	Description (STM8L MCU)
1	The UART module is TTL level.
2	For some MCU works at 5VDC, M00 M11 AUX should connect to IO port of MCU, RX to TXD of MCU, TX to RXD of MCU.
3	TVS protection and capacitors need to be added outside the power supply (it is recommended to add a 22uF low ESR electrolytic capacitor or tantalum capacitor)
4	The RF module is sensitive to pulsed static electricity. Do not hot-swap the module.


5	It is recommended to use a power supply above 10W (5V 2A)
---	---

## 5 Function description

### 5.1 Fixed transmission (hexadecimal)

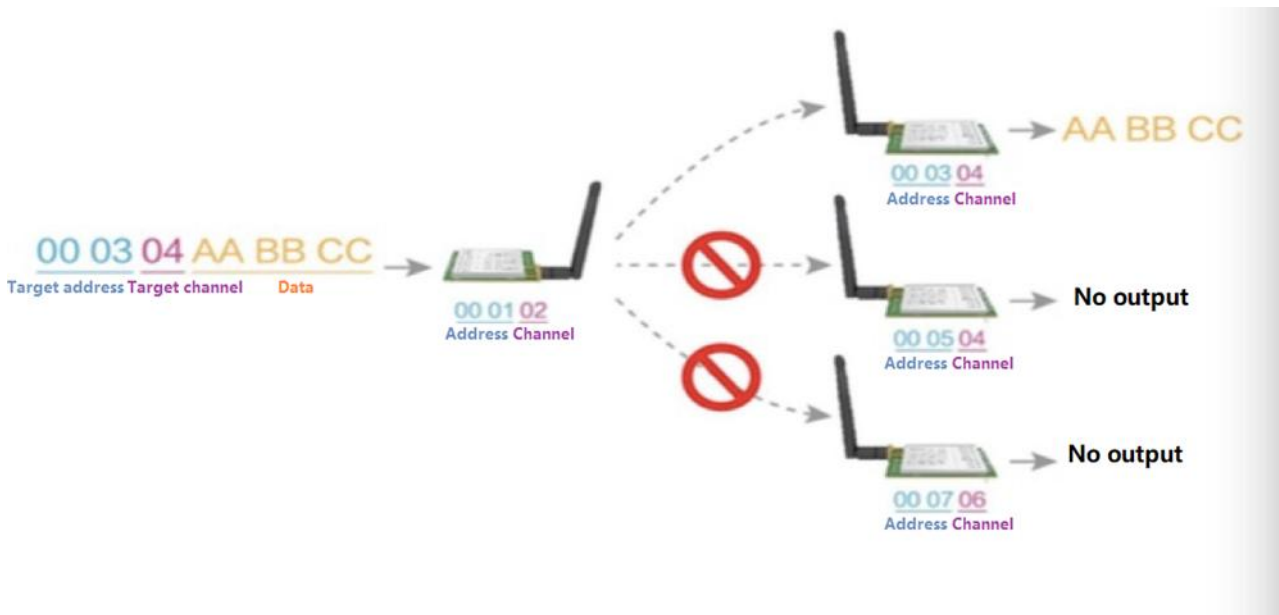

### 5.2 Broadcasting transmission (hexadecimal)

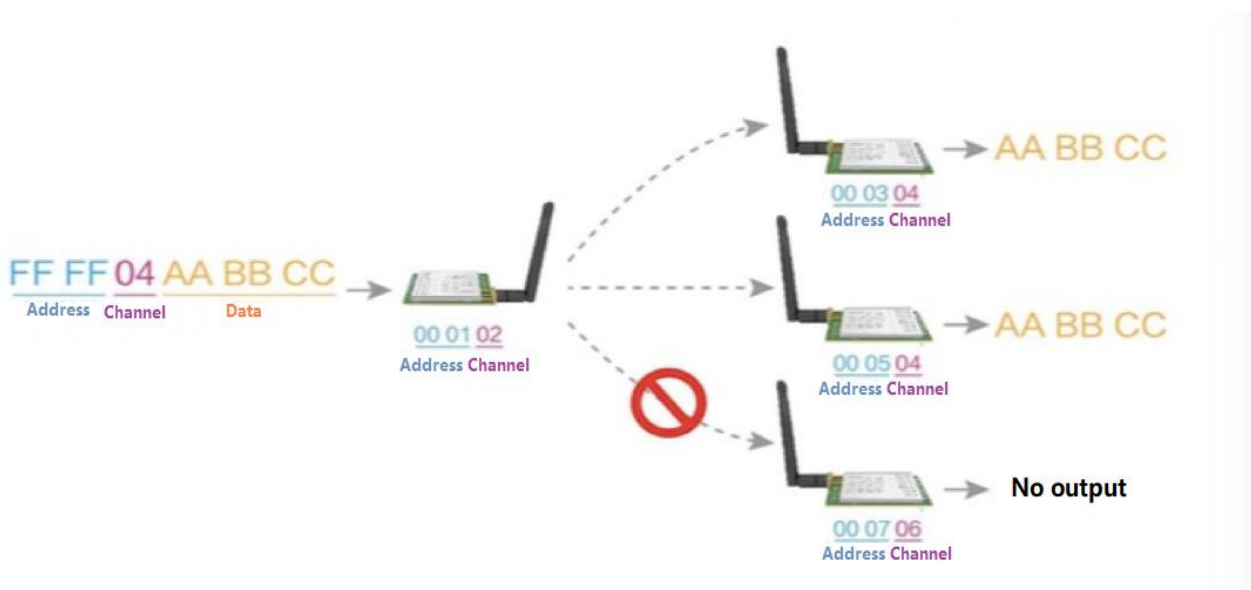

### 5.3 Broadcasting address

- For example: Set the address of module A as 0xFFFF or 0x0000, and the channel as 0x04;
- When module A is the transmitter (transparent transmission), all modules under channel 0x04 will receive the data, so A can broadcast.

### 5.4 Monitor address

- For example: Set the address of module A as 0xFFFF or 0x0000, and the channel as 0x04;
- When module A is the receiver, it can receive the data sent from all modules under channel 0x04, the purpose of monitor is realized.

### 5.5 Reset


- When the module is powered, AUX outputs low level immediately, conducts hardware self-check and sets the operating mode based on user's parameters. During the process, the AUX remains low level. After the process completed, the AUX outputs high level and starts to work as per the operating mode combined by M1 and M0. Therefore, users need to wait the AUX rising edge as the start of module's normal work.

### 5.6 AUX description

- AUX Pin can be used as indication for wireless send & receive buffer and self-check.
- It can indicate whether there are data that are not sent yet via wireless way, or whether all wireless data has been sent through UART, or whether the module is still in the process of self-check initialization.

#### 5.6.1 Indication of UART output

- To wake up external MCU

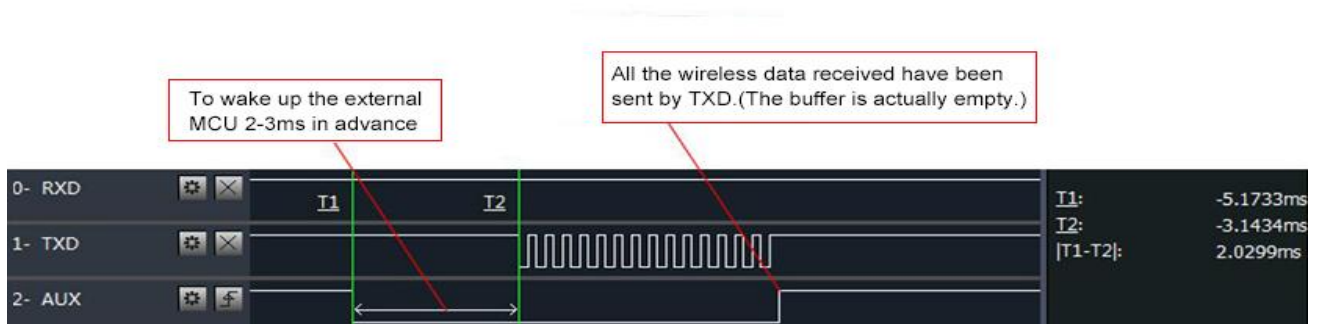


Timing Sequence Diagram of AUX when TXD pin transmits

#### 5.6.2 Indication of wireless transmitting

- Buffer (empty): the internal 512 bytes data in the buffer are written to the RFIC (Auto sub-packaging).
- When AUX=1, the user can input data less than 512 bytes continuously without overflow. Buffer (not empty): when AUX=0, the

internal 512 bytes data in the buffer have not been written to the RFIC completely. If the user starts to transmit data at this circumstance, it may cause overtime when the module is waiting for the user data, or transmitting wireless sub package.

- When AUX = 1, it does not mean that all the UART data of the module have been transmitted already, perhaps the last packet of data is still in transmission.

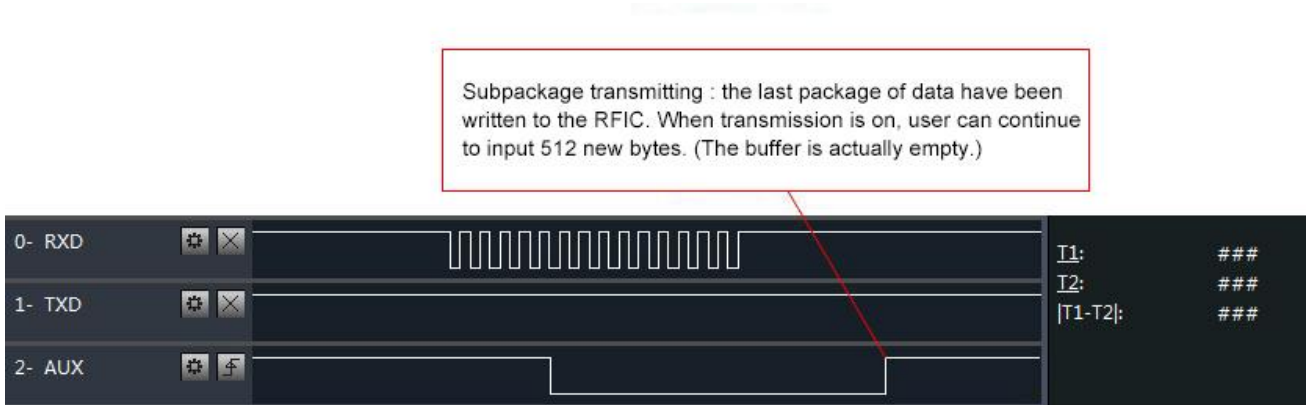

**Timing Sequence Diagram of AUX when RXD pin receives**

### 5.6.3 Configuration procedure of module

- Only happened when power-on resetting or exiting sleep mode



**Timing Sequence Diagram of AUX when self-check**

### 5.6.4 Notes for AUX

- For function 1 & function 2 mentioned above, the priority should be given to the one with low level output, which means if it meets each of any low level output condition, AUX outputs low level, if none of the low level condition is met, AUX outputs high level.
- When AUX outputs low level, it means the module is busy & cannot conduct operating mode checking. Within 1ms since AUX outputs high level, the mode switch will be completed.
- After switching to new operating mode, it will not work in the new mode immediately until AUX rising edge lasts for 2ms . If AUX stays on the high level, the operating mode switch can be affected immediately.
- When the user switches to other operating modes from mode 3 (sleep mode) or it's still in reset process, the module will reset user parameters, during which AUX outputs low level.
- Due to the characteristics of the LoRa, the data transmission delay is much longer than that of FSK. For example, at 1.2kbps airspeed, the transmission delay of 100 bytes is about 1.5 seconds. It is recommended that customers do not transmit large amounts of data at low air rate, so as to avoid communication exception caused by data loss caused

by data accumulation.

## 6 Operating mode

There are four operating modes, which are set by M1 and M0, the details are as follows:

Mode (0-3)	M0	M1	Mode introduction	Remark
0 Normal	0	0	UART and wireless channel are open, transparent transmission is on. In this mode, whatever data is transmitted to the transmitter serial port is exported by the receiver serial port. The transmitter and receiver must be the same channel, air rate, and address to communicate with each other.	The receiver must work in mode 0 or mode 1
1 Wake up	1	0	UART and wireless channel are open, the only difference with mode 0 is that before transmitting data, increasing the wake up code automatically, so that it can awake the receiver under mode 3.	The receiver could be 0,1 or 2
2 Power saving	0	1	UART close, wireless is under air-awaken mode, after receiving data, UART open and send data.	transmitter must be mode 1, unable to transmit in this mode.
3 Sleep/Configuration	1	1	The module enters the sleep/configuration state and can receive parameter setting commands. In this mode, the serial port port rate is fixed at 9600.	See Section 7 for detailed configuration instructions.

### 6.1 Mode switch

- The user can decide the operating mode by the combination of M1 and M0. The two GPIO of MCU can be used to switch mode. After modifying M1 or M0, it will start to work in new mode 1ms later if the module is free. If there are any serial data that are yet to finish wireless transmitting, it will start to work in new mode after the UART transmitting finished. After the module receives the wireless data & transmits the data through serial port, it will start to work in new mode after the transmitting finished. Therefore, the mode-switch is only valid when AUX outputs 1, otherwise it will delay.
- For example, in mode 0 or mode 1, if the user inputs massive data consecutively and switches operating mode at the same time, the mode-switch operation is invalid. New mode checking can only be started after all the user's data process completed. It is recommended to check AUX pin out status and wait 2ms after AUX outputs high level before switching the mode.
- If the module switches from other modes to stand-by mode, it will work in stand-by mode only after all the remained data process completed. The feature can be used to save power consumption. For example, when the transmitter works in mode 0, after the external MCU transmits data "12345", it can switch to sleep mode immediately without waiting the rising edge of the AUX pin, also the user's main MCU will go dormancy immediately. Then the module will transmit all the data through wireless transmission & go dormancy 1ms later automatically, which reduces MCU working time & save power.
- Likewise, this feature can be used in any mode-switch. The module will start to work in new mode within 1ms after

completing present mode task, which enables the user to omit the procedure of AUX inquiry and switch mode swiftly. For example, when switching from transmitting mode to receiving mode, the user MCU can go dormancy before mode-switch, using external interrupt function to get AUX change so that the mode-switch can be realized.

- This operation is very flexible and efficient. It is totally designed on the basis of the user MCU's convenience, at the same time the work load and power consumption of the whole system have been reduced and the efficiency of whole system is largely improved.

## 6.2 Normal mode (mode 0)

<b>When M1 = 0 &amp; M0 = 0, module works in mode 0</b>	
Transmitting	<p>The module can receive the user data via serial port, and transmit wireless data package of 58 bytes. When the data inputted by user is up to 58 byte, the module will start wireless transmission. During which the user can input data continuously for transmission.</p> <p>When the required transmission bytes are less than 58 bytes, the module will wait 3-byte time and treat it as data termination unless continuous data inputted by user. Then the module will transmit all the data through wireless channel.</p> <p>When the module receives the first data packet from user, the AUX outputs low level.</p> <p>After all the data are transmitted into RF chip and transmission start, AUX outputs high level.</p> <p>At this time, it means that the last wireless data package transmission is started, which enables the user to input another 512 bytes continuously. The data package transmitted from the module working in mode 0 can only be received by the module working in mode 0 or 1.</p>
Receiving	<p>The wireless receiving function of the module is on, the data packet transmitted from the module working in mode 0 &amp; mode 1 can be received.</p> <p>After the data packet is received, the AUX outputs low level, 5ms later the module starts to transmit wireless data through serial port TXD pin.</p> <p>After all the wireless data have been transmitted via serial port, the AUX outputs high level.</p>

## 6.3 Wake-up mode (mode 1)

<b>When M1 = 0 &amp; M0 = 1, module works in mode 1</b>	
Transmitting	<p>The condition of data packet transmission &amp; AUX function is the same as mode 0. The only difference is that the module will add preamble code before each data packet automatically. The preamble code length depends on the wake-up time set in the user parameters. The purpose of the preamble code is waking up the receiving module works in mode 2. Therefore, the data package transmitted from mode 1 can be received by mode 0, mode1 and mode 2.</p>
Receiving	<p>The same as that in mode 0.</p>

## 6.4 Power-saving mode (mode 2)

<b>When M1 = 1 &amp; M0 = 0, module works in mode 2</b>	
Transmitting	<p>UART is closed, the module cannot receive any serial port data from outside MCU. Hence the function of wireless transmission is not available for the module working in this mode.</p>

Receiving	<p>In mode 2, it is required the data transmitter works in mode 1.</p> <p>The wireless module monitors the preamble code at regular time.</p> <p>Once it gets the preamble code, it will remain as receiving status and waiting for the completion of receiving the entire valid data package.</p> <p>Then the AUX outputs low level, 5ms later the serial port is open to transmit received wireless data through TXD. Finally, AUX outputs high level after process completed.</p> <p>The wireless module stays in “power-saving – monitoring” working status (polling).</p> <p>By setting different wake-up time, the module will have different receiving response delay (2s in maximum) and average power consumption (80uA in minimum).</p> <p>The user needs to achieve a balance between communication delay time &amp; average power consumption.</p>
-----------	--

## 6.5 Sleep/Configuration mode (mode 3)

When M1=1, M0=1, module works in mode 3	
Transmitting	N/A
Receiving	N/A
Parameter setting	Sleep/Configuration mode can be used for module parameter setting, use serial port 9600, 8N1, and set module working parameters through specific command format.
Notes	When entering other modes from sleep mode, the module will reconfigure parameters. During the configuration process, AUX remains low level; after completion, it outputs high level, so it is recommended that users detect the rising edge of AUX.

## 7 Command format

In sleep mode (Mode 3: M1=1, M0=1) , it supports below instructions on list.

(Only support 9600 and 8N1 format when setting)

No.	Format	Description
1	C0+working parameters	Send C0+5 bytes working parameters in hexadecimal format, a total of 6 bytes, must be sent continuously (power-off save)
2	C1+C1+C1	Send three C1s in hexadecimal format, and the module returns the saved parameters, which must be sent continuously
3	C2+working parameters	Send C2+5 bytes working parameters in hexadecimal format, a total of 6 bytes, must be sent continuously (not saved when power off)
4	C3+C3+C3	Send three C3s in hexadecimal format, and the module returns version information, which must be sent continuously
5	C4+C4+C4	Send three C4s in hexadecimal format, the module will generate a reset and must be sent continuously

### 7.1 Factory default parameters

Type	Default parameter values: : C0 00 00 1A 17 40						
Model	Frequency	Model	Frequency	Model	Frequency	Model	Frequency
E32-433T33D	433MHz	0x0000	0x17	2.4kbps	9600	8N1	2W

### 7.2 Reading operating parameters

Instruction format	Description
C1+C1+C1	In sleep mode (M0=1, M1=1) , User gives the module instruction (HEX format): C1 C1 C1, Module returns the present configuration parameters. For example, C0 00 00 1A 17 44.

### 7.3 Reading version number

Instruction format	Description
C3+C3+C3	In sleep mode (M0=1, M1=1) ,User gives the module instruction (HEX format): C3 C3 C3,Module returns its present version number, for example C3 32 xx yy. the second bytes means frequency. 32 here means the frequency is 433MHZ, 38 means frequency is 470MHz, 45 means frequency is; 868MHz, 44 means the frequency is 915 MHz, 46 means the frequency is 170MHz; xx is the version number and yy refers to the other module features.

## 7.4 Reset command

Instruction format	Description
C4+C4+C4	In sleep mode (M0=1, M1=1), User gives the module instruction (HEX format): C4 C4 C4, the module resets for one time. During the reset process, the module will conduct self-check, AUX outputs low level. After reset completing, the AUX outputs high level, then the module starts to work regularly which the working mode can be switched or be given another instruction.

## 7.5 Parameter setting command

	Item	Description	Remark
0	HEAD	Fix 0xC0 or 0xC2, it means this frame data is control command	<ul style="list-style-type: none"> <li>Must be 0xC0 or 0xC2</li> <li>C0: Save the parameters when power-down</li> <li>C2: Do not save the parameters when power-down</li> </ul>
1	ADDH	High address byte of module (the default 00H)	00H-FFH
2	ADDL	Low address byte of module (the default 00H)	00H-FFH
3	SPED	7 6 UART parity bit	UART mode can be different between communication parties
		0 0 8N1 (default)	
		0 1 8O1	
		1 0 8E1	
		1 1 8N1 (equal to 00)	
		5 4 3 TTL UART baud rate (bps)	<ul style="list-style-type: none"> <li>UART baud rate can be different between communication parties</li> <li>The UART baud rate has nothing to do with wireless transmission parameters &amp; won't affect the wireless transmit / receive features.</li> </ul>
		0 0 0 1200	
		0 0 1 2400	
		0 1 0 4800	
		0 1 1 9600 (default)	
		1 0 0 19200	
		1 0 1 38400	
		1 1 0 57600	
		1 1 1 115200	
		2 1 0 Air data rate (bps)	<ul style="list-style-type: none"> <li>The lower the air data rate, the longer the transmitting distance, better anti-interference performance and longer transmitting time</li> <li>The air data rate must keep the same for both communication parties</li> </ul>
		0 0 0 2.4k	
		0 0 1 2.4k	
		0 1 0 2.4k(default)	
0 1 1 4.8k			
1 0 0 9.6k			
1 0 1 19.2k			
1 1 0 19.2k (same to 101)			
1 1 1 19.2k (same to 101)			
4	CHAN	General Specifications	

		7	6	5	reserved	Write 0	
		Communication channel				00H-1FH, 410~441MHz	
		4~0, channel (410MHz+CHAN * 1MHz) , default 17H (433MHz)					
5	OPTIO N	7	Fixed transmission enabling bit (similar to MODBUS)			In fixed transmission mode, the first three bytes of each user's data frame can be used as high/low address and channel. The module changes its address and channel when transmit. And it will revert to original setting after complete the process.	
		0	Transparent transmission mode				
		1	Fixed transmission mode				
		6	IO drive mode (default 1)			This bit is used to the module internal pull-up resistor. It also increases the level's adaptability in case of open drain. But in some cases, it may need external pull-up resistor.	
		1	TXD and AUX push-pull outputs, RXD pull-up inputs				
		0	TXD、AUX open-collector outputs, RXD open-collector inputs				
		5	4	3	wireless wake-up time		<ul style="list-style-type: none"> <li>The transmit &amp; receive module work in mode 0, whose delay time is invalid &amp; can be arbitrary value.</li> <li>The transmitter works in mode 1 can transmit the preamble code of the corresponding time continuously.</li> <li>When the receiver works in mode 2, the time means the monitor interval time (wireless wake-up). Only the data from transmitter that works in mode 1 can be received.</li> <li>After turn off FEC, the actual data transmission rate increases while anti-interference ability decreases. Also the transmission distance is relatively short.</li> <li>Both communication parties must keep on the same pages about turn-on or turn-off FEC.</li> </ul>
		0	0	0	250ms (default)		
		0	0	1	500ms		
		0	1	0	750ms		
		0	1	1	1000ms		
		1	0	0	1250ms		
		1	0	1	1500ms		
		1	1	0	1750ms		
		1	1	1	2000ms		
		2	FEC switch				
		0	Turn off FEC (default)				
		1	Turn on FEC				
1	0	Transmission power (approximation)			Power and current have a non-linear relationship, and the power supply efficiency is the highest at the maximum power; S The current does not decrease proportionally as the power decreases.		
0	0	33dBm(default)					
0	1	30dBm					
1	0	27dBm					
1	1	24dBm					

**For example: The meaning of No.3 "SPED" byte:**

The binary bit of the byte	7	6	5	4	3	2	1	0
Configures by user	0	0	0	1	1	0	1	0
Meaning	UART parity bit 8N1		UART baud rate is 9600			Air data rate is 2.4k		
Corresponding hexadecimal	1				A			

## 8 Hardware design

- It is recommended to use a DC stabilized power supply. The power supply ripple factor is as small as possible, and the module needs to be reliably grounded.;
- Please pay attention to the correct connection of the positive and negative poles of the power supply. Reverse connection may cause permanent damage to the module;
- Please check the power supply to ensure it is within the recommended voltage otherwise when it exceeds the maximum value the module will be permanently damaged;
- Please check the stability of the power supply, the voltage can not be fluctuated frequently;
- When designing the power supply circuit for the module, it is often recommended to reserve more than 30% of the margin, so the whole machine is beneficial for long-term stable operation.;
- The module should be as far away as possible from the power supply, transformers, high-frequency wiring and other parts with large electromagnetic interference.;
- High-frequency digital routing, high-frequency analog routing, and power routing must be avoided under the module. If it is necessary to pass through the module, assume that the module is soldered to the Top Layer, and the copper is spread on the Top Layer of the module contact part(well grounded), it must be close to the digital part of the module and routed in the Bottom Layer;
- Assuming the module is soldered or placed over the Top Layer, it is wrong to randomly route over the Bottom Layer or other layers, which will affect the module's spurs and receiving sensitivity to varying degrees;
- It is assumed that there are devices with large electromagnetic interference around the module that will greatly affect the performance. It is recommended to keep them away from the module according to the strength of the interference. If necessary, appropriate isolation and shielding can be done;
- Assume that there are traces with large electromagnetic interference (high-frequency digital, high-frequency analog, power traces) around the module that will greatly affect the performance of the module. It is recommended to stay away from the module according to the strength of the interference. If necessary, appropriate isolation and shielding can be done.
- If the communication line uses a 5V level, a 1k-5.1k resistor must be connected in series (not recommended, there is still a risk of damage);
- Try to stay away from some physical layers such as TTL protocol at 2.4GHz , for example: USB3.0;
- The mounting structure of antenna has a great influence on the performance of the module. It is necessary to ensure that the antenna is exposed, preferably vertically upward. When the module is mounted inside the case, use a good antenna extension cable to extend the antenna to the outside;
- The antenna must not be installed inside the metal case, which will cause the transmission distance to be greatly weakened.

## 9 FAQ

### 9.1 Communication range is too short

- The communication distance will be affected when obstacle exists.
- Data lose rate will be affected by temperature, humidity and co-channel interference.
- The ground will absorb and reflect wireless radio wave, so the performance will be poor when testing near ground.
- Sea water has great ability in absorbing wireless radio wave, so performance will be poor when testing near the sea.
- The signal will be affected when the antenna is near metal object or put in a metal case.
- Power register was set incorrectly, air data rate is set as too high (the higher the air data rate, the shorter the distance).
- The power supply low voltage under room temperature is lower than 2.5V, the lower the voltage, the lower the transmitting power.
- Due to antenna quality or poor matching between antenna and module.

### 9.2 Module is easy to damage

- Please check the power supply source, ensure it is 3.3V~5.5V, voltage higher than 5.5V will damage the module.
- Please check the stability of power source, the voltage cannot fluctuate too much.
- Please make sure antistatic measure are taken when installing and using, high frequency devices have electrostatic susceptibility.
- Please ensure the humidity is within limited range, some parts are sensitive to humidity.
- Please avoid using modules under too high or too low temperature.

### 9.3 BER(Bit Error Rate) is high

- There are co-channel signal interference nearby, please be away from interference sources or modify frequency and channel to avoid interference;
- Poor power supply may cause messy code. Make sure that the power supply is reliable.
- The extension line and feeder quality are poor or too long, so the bit error rate is high;

## 10 Production guidance

This type is DIP module, when the welder welds the module, he must be welding according to the anti-static regulation. This product is allergic to static, randomly welding the module will have the chance of damaging it permanently.

## 11 E32 series


Model No.	Frequency Hz	Tx power dBm	Distance km	Data rate bps	Package	Size mm	Antenna Interface
<a href="#">E32-170T30D</a>	170M	30	8	0.3k ~ 9.6k	Straight plug	24 * 43	SMA-K
<a href="#">E32-433T20D</a>	433M	20	3	0.3k ~ 19.2k	Straight plug	21 * 36	SMA-K
<a href="#">E32-400T20S</a>	433/470M	20	3	0.3k ~ 19.2k	patch	16 * 26	IPEX/stamp hole
<a href="#">E32-433T30D</a>	433M	30	8	0.3k ~ 19.2k	Straight plug	24 * 43	SMA-K
<a href="#">E32-433T30S</a>	433M	30	8	0.3k ~ 19.2k	patch	25 * 40.3	IPEX/stamp hole
<a href="#">E32-900T20D</a>	862~930 M	20	3	0.3k ~ 19.2k	Straight plug	21 * 36	SMA-K
<a href="#">E32-900T20S</a>	862~930 M	20	3	0.3k ~ 19.2k	patch	16 * 26	IPEX/stamp hole
<a href="#">E32-900T30D</a>	862~930 M	30	8	0.3k ~ 19.2k	Straight plug	24 * 43	SMA-K
<a href="#">E32-900T30S</a>	862~930 M	30	8	0.3k ~ 19.2k	patch	25 * 40.3	IPEX/stamp hole

## 12 Antenna recommendation

The antenna is an important role in the communication process. A good antenna can largely improve the communication system. Therefore, we recommend some antennas for wireless modules with excellent performance and reasonable price.

Model No.	Type	Frequency	Gain	Size	Cable	Interface	Feature
		Hz	dBi	mm	cm		
<a href="#">TX433-NP-4310</a>	FPC Antenna	433M	2.0	10x43	-	Solder	Soft FPC antenna
<a href="#">TX433-JZ-5</a>	Rubber Antenna	433M	2.0	52	-	SMA-J	Short straight, omnidirectional
<a href="#">TX433-JZG-6</a>	Rubber Antenna	433M	2.5	62	-	SMA-J	Short straight, omnidirectional
<a href="#">TX433-JW-5</a>	Rubber Antenna	433M	2.0	50	-	SMA-J	Flexible, omnidirectional
<a href="#">TX433-JWG-7</a>	Rubber Antenna	433M	2.5	70	-	SMA-J	Flexible, omnidirectional
<a href="#">TX433-JK-11</a>	Rubber Antenna	433M	2.5	110	-	SMA-J	Flexible, omnidirectional
<a href="#">TX433-JK-20</a>	Rubber Antenna	433M	3.0	200	-	SMA-J	Flexible, omnidirectional
<a href="#">TX433-XPL-100</a>	Sucker Antenna	433M	3.5	185	100	SMA-J	Sucker antenna, cost effective
<a href="#">TX433-XP-200</a>	Sucker Antenna	433M	4.0	190	200	SMA-J	Sucker antenna, low loss
<a href="#">TX433-XPB-300</a>	Sucker Antenna	433M	6.0	965	300	SMA-J	Sucker antenna, high gain

## 13 Package for batch order

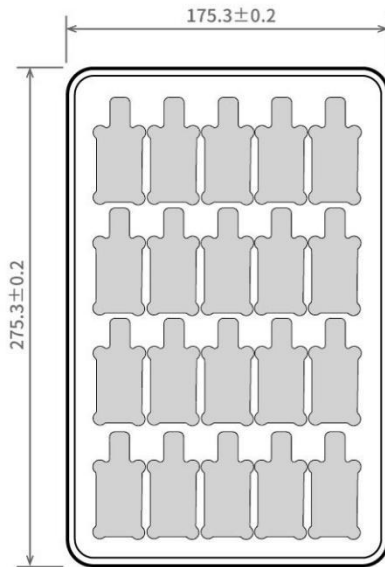

Unit: mm  
Each Layer: 20 pcs  
Each Package: 5 layers

## Revision history

Version	Date	Description	Issued by
1.0	2022-4-14	Original	Hyh
1.1	2024-3-5	Content revision	Ning

## About us

Technical support: [support@cdebyte.com](mailto:support@cdebyte.com)

Documents and RF Setting download link: [www.cdebyte.com](http://www.cdebyte.com)

Thank you for using Ebyte products! Please contact us with any questions or suggestions: [info@cdebyte.com](mailto:info@cdebyte.com)

Fax: 028-64146160

Web: [www.cdebyte.com](http://www.cdebyte.com)

Address: Innovation Center D347, 4# XI-XIN Road, Chengdu, Sichuan, China



**Chengdu Ebyte Electronic Technology Co.,Ltd.**